

# MONITOUCH

## Macro Reference



## Record of Revisions

---

Reference numbers are shown at the bottom left corner on the back cover of each manual.

Date	Reference No.	Revised Contents
May, 2014	1071NE0	First edition
March, 2017	1071NE1	Second edition <ul style="list-style-type: none"> <li>• Added printer related macro commands</li> <li>• Added video related macro commands</li> <li>• Added MES macro commands</li> <li>• Added the macro command for universal serial interruption [SYS (OUT_ENQ_EX)]</li> <li>• Other modifications</li> </ul>
October, 2018	1071NE2	Third edition <ul style="list-style-type: none"> <li>• Added RGB related macro commands</li> <li>• Added the macro command for FL-net information acquisition [SYS (GET_STATUS_FL)]</li> <li>• Added TELLUS related macro commands</li> <li>• Other modifications</li> </ul>
April, 2021	1071NE3	Fourth edition <ul style="list-style-type: none"> <li>• Added the macro command for transition effect</li> <li>• Added the macro command for File delete [DEL_FILE]</li> <li>• Added USB camera related macro commands</li> <li>• Restart macro [SYS (RESTART)] - new specifications added</li> <li>• Added X1 series</li> <li>• Other modifications</li> </ul>
April, 2022	1071NE4	Fifth edition <ul style="list-style-type: none"> <li>• Added the macro command for single snapshot of USB camera [USBCAM]</li> <li>• Added the macro commands for comparison [IF (MULTI)], [SELECT_CASE]</li> <li>• Acquiring logging/alarm data macro [SAMPLE], [SYS(GET_SMPL)] - new specifications added</li> <li>• Other modifications</li> </ul>
August, 2022	1071NE5	Sixth edition <ul style="list-style-type: none"> <li>• Comparison macro [IF (MULTI)] - new specifications added</li> <li>• Supported the external USB storage for X1 series</li> <li>• Other modifications</li> </ul>



# Preface

---

Congratulations on purchasing MONITOUCH.

The "V9 Series Macro Reference" manual describes macro functions used on the drawing/editing software (V-SFT version 6) for MONITOUCH. For a correct use of the product, read this manual thoroughly.

## Notes:

1. The copyright of the software is possessed by Hakko Electronics Co., Ltd.
2. Reproduction of the contents of the software and this manual, in whole or in part, without permission of Hakko Electronics Co., Ltd. is prohibited.
3. The specifications of the software and the information in this manual are subject to change without prior notice.
4. If the specifications of the software do not correspond with the contents of this manual, the software specifications have priority.
5. No liability is assumed by Hakko Electronics Co., Ltd. with respect to the influence brought by the result of using the software or this manual.
6. You may use this software on a single central processing unit.

## About Trademarks:

- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and other countries.
- All other company names or product names are trademarks or registered trademarks of their respective holders.
- The names of the products contained herein are trademarks or registered trademarks of their respective manufacturers.

## About Manuals

The manuals shown below are related manuals for MONITOUCH. Refer to them as necessary.

Manual Name	Contents	Reference No.
V9 Series Reference Manual 1	Explains the functions and operations of the V9 series.	1065NE
V9 Series Reference Manual 2		1066NE
V9 Series Setup Manual	Explains the installation procedure of V-SFT version 6, the creation process of simple screen programs as well as how to transfer a created screen program using V-SFT version 6.	1067NE
V9 Series Troubleshooting/ Maintenance Manual	Provides an error list and explains the operating procedures for the V9 series.	1068NE
V9 Series Training Manual Beginner's Guide	Explains the screen creation process using V-SFT version 6 with examples in detail.	1069NE
V9 Series Training Manual Practical Guide		1070NE
V9 Series Macro Reference	Provides an overview of macros of V-SFT version 6 and explains macro editor operations and macro command descriptions in detail.	1071NE
V9 Series Operation Manual	Explains the configuration of V-SFT version 6, the editing process of each part and limitations regarding operation in detail.	1072NE
V9 Series Connection Manual 1	Explains the connection and communication parameters for the V9 series and controllers in detail.	2210NE
V9 Series Connection Manual 2		2211NE
V9 Series Connection Manual 3		2212NE
V9 Series Hardware Specifications	Explains hardware specifications and precautions when handling the V9 series.	2023NE
X1 Series Reference Manual 1	Explains the functions and operation of the X1 series.	1090NE
X1 Series Reference Manual 2		1091NE
X1 Series Setup Manual	Explains the X1 series setup procedure, the installation procedure of V-SFT version 6, the creation process of basic screen programs as well as how to transfer a created screen program using V-SFT version 6.	1092NE
X1 Series Hardware Specifications	Explains precautions for handling, hardware specifications and operating procedures and provides an error list for the X1 series.	2024NE
X1 Series Connection Manual 1	Explains the connection and communication parameters for the X1 series and controllers in detail.	2217NE
X1 Series Connection Manual 2		2218NE
X1 Series Connection Manual 3		2219NE

Manual Name	Contents	Reference No.
SOFT MONITOUCH TELLUS and V-Server TELLUS Ver. 4 Manual	Explains the functions and operation of TELLUS version 4 of the SOFT MONITOUCH TELLUS and V-Server software.	1103NE

## V9 / X1 Series / TELLUS Ver. 4 Models

---

The following V9 series, X1 series, and TELLUS Ver. 4 models are available:

Generic Name	Series	Model
V9 series	V9 Advanced	V910xiW
		V907xiW
	V9 Standard	V9150iX
		V9120iS
		V9100iS
		V9080iS
	V9 Lite	V9010iC
		V9080iC
		V9060iT
	X1 series	X115x
X112x		
TELLUS4	TELLUS Ver. 4	


Please note that the V9 series model names are used as listed above in the manuals.

## Storage functions for X1 / TELLUS Ver. 4


The description of storage-related functions in this document assumes the V9 series storage access location. The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. When using X1 series and TELLUS Ver.4, please refer to the following and read the description of functions.

### X1 Series


The internal storage ("sd" folder, "usb" folder) of the X1 unit and external USB storage can be used. Select whether to use or not to use the external USB storage in [System Setting] → [Other] → [Storage Setting] on V-SFT. If external USB storage is used, also specify the storage connection drive.

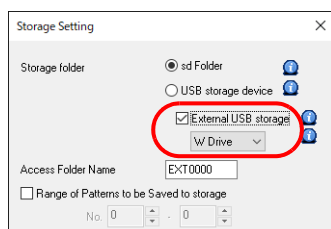

Destination drives

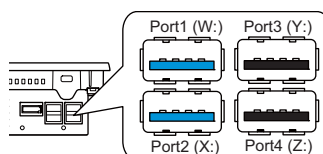

A Storage folder is created in the root directory, and an access folder is created in the storage folder as specified in the screen program. The X1 series writes and reads data to and from folders dedicated to respective functions within the access folder.

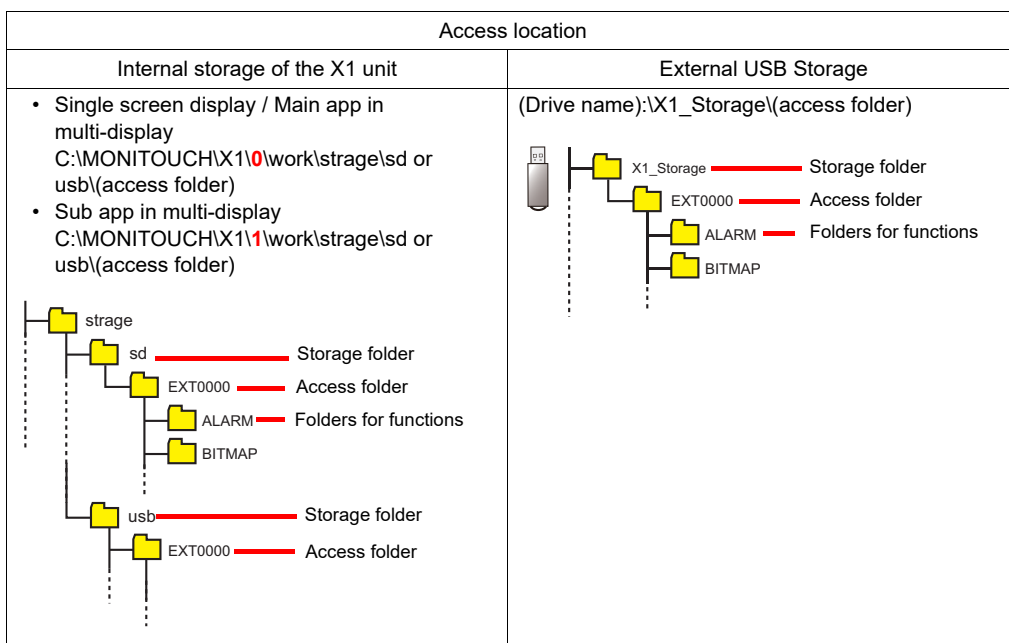

The following terms are used as storage in this manual for operating instructions.

In this manual	Corresponding folder of X1
Storage	Storage folder ("sd" folder/"usb" folder/X1_Storage folder)
SD card, C drive	"sd" folder
USB flash device, D drive	"usb" folder/X1_Storage folder of external USB storage device

For more information on storage functions of the X1 series, refer to the X1 Series Reference Manual 2.



## TELLUS Ver. 4

The following "system folder\strage\sd or "usb" folder" created when TELLUS HMI starts will be accessed.

The following terms are used as storage in this manual for operating instructions.

In this manual	Corresponding folder of TELLUS4
Storage	Storage folder ("sd" folder/"usb" folder)
SD card, C drive	"sd" folder
USB flash device, D drive	"usb" folder

For more information on storage functions of TELLUS Ver.4, refer to the TELLUS Ver.4 Manual.

---

# Notes on Safe Usage of MONITOUCH

---

In this manual, you will find various notes categorized under the following levels with the signal words “DANGER” and “CAUTION”.




## DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



## CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and could cause property damage.

Note that there is a possibility that items listed with  CAUTION may have serious ramifications.



## DANGER

- Never use the output signal of MONITOUCH for operations that may threaten human life or damage the system, such as signals used in case of emergency. Design the system so that it can cope with a touch switch malfunction. A touch switch malfunction may result in machine accidents or damage.
- Turn off the power supply when you set up the unit, connect new cables, or perform maintenance or inspections. Otherwise, electrical shock or damage may occur.
- Never touch any terminals while the power is on. Otherwise, electrical shock may occur.
- You must cover the terminals on the V9 series unit before turning the power on and operating the unit. Otherwise, electrical shock may occur.
- The liquid crystal in the LCD panel is a hazardous substance. If the LCD panel is damaged, do not ingest the leaked liquid crystal. If leaked liquid crystal makes contact with skin or clothing, wash it away with soap and water.
- Never disassemble, recharge, deform by pressure, short-circuit, reverse the polarity of the lithium battery, nor dispose of the lithium battery in fire. Failure to follow these conditions will lead to explosion or ignition.
- Never use a lithium battery that is deformed, leaking, or shows any other signs of abnormality. Failure to follow these conditions will lead to explosion or ignition.
- Switches on the screen are operable even when the screen has become dark due to a faulty backlight or when the backlight has reached the end of its service life. If the screen is dark and hard to see, do not touch the screen. Otherwise, unintended operations may occur resulting in machine accidents or damage.
- Tighten the mounting screw on the fixtures of MONITOUCH equally to the specified torque. Excessive tightening may cause deformation, breakage, or malfunction of the touch switch, which may result in damage to the machine or an accident. Loose mounting screws may cause the unit to fall down, malfunction, or short-circuit.



## CAUTION

- Check the appearance of the unit when it is unpacked. Do not use the unit if any damage or deformation is found. Failure to do so may lead to fire, damage, or malfunction.
- For use in a facility or as part of a system related to nuclear energy, aerospace, medical, traffic equipment, or mobile installations, consult your local sales representative.
- Operate (or store) MONITOUCH under the conditions indicated in this manual and related manuals. Failure to do so could cause fire, malfunction, physical damage, or deterioration.
- Observe the following environmental restrictions on use and storage of the unit. Otherwise, fire or damage to the unit may result.
  - Avoid locations where there is a possibility that water, corrosive gas, flammable gas, solvents, grinding fluids, or cutting oil can come into contact with the unit.
  - Avoid high temperatures, high humidity, and outside weather conditions, such as wind, rain, or direct sunlight.
  - Avoid locations where excessive dust, salt, and metallic particles are present.
  - Avoid installing the unit in a location where vibrations or physical shocks may be transmitted.

 **CAUTION**

- Equipment must be correctly mounted so that the main terminal of MONITOUCH will not be touched inadvertently. Otherwise, an accident or electric shock may occur.
- Check periodically that terminal screws on the power supply terminal block and fixtures are firmly tightened. Loosened screws or nuts may result in fire or malfunction.
- Tighten the terminal screws on the power supply terminal block of MONITOUCH equally to the specified torque. Improper tightening of screws may result in fire, malfunction, or other serious trouble.
- MONITOUCH has a glass screen. Do not drop the unit or impart physical shocks to the unit. Otherwise, the screen may be damaged.
- Correctly connect cables to the terminals of MONITOUCH in accordance with the specified voltage and wattage. Overvoltage, overwattage, or incorrect cable connection could cause fire, malfunction, or damage to the unit.
- Always ground MONITOUCH. The FG terminal must be used exclusively for MONITOUCH with the level of grounding resistance less than 100 Ω. Otherwise, electric shock or a fire may occur.
- Prevent any conductive particles from entering into MONITOUCH. Failure to do so may lead to fire, damage, or malfunction.
- After wiring is finished, remove the paper used as a dust cover before starting operation of the V9 series. Operation with the dust cover attached may result in accidents, fire, malfunction, or other trouble.
- Do not attempt to repair, disassemble, or modify MONITOUCH yourself. Contact Hakko Electronics or the designated contractor for repairs.
- Do not repair, disassemble, or modify MONITOUCH. Hakko Electronics Co., Ltd. is not responsible for any damages resulting from repair, disassembly, or modification of the unit that was performed by an unauthorized person.
- Do not use sharp-pointed tools to press touch switches. Doing so may damage the display unit.
- Only technicians are authorized to set up the unit, connect cables, and perform maintenance and inspection.
- Lithium batteries contain combustible material such as lithium and organic solvents. Mishandling may cause heat, explosion, or ignition resulting in fire or injury. Read the related manuals carefully and correctly handle the lithium battery as instructed.
- Take safety precautions during operations such as changing settings when the unit is running, forced output, and starting and stopping the unit. Any misoperations may cause unexpected machine movement, resulting in machine accidents or damage.
- In facilities where the failure of MONITOUCH could lead to accidents that threaten human life or other serious damage, be sure that such facilities are equipped with adequate safeguards.
- When disposing of MONITOUCH, it must be treated as industrial waste.
- Before touching MONITOUCH, discharge static electricity from your body by touching grounded metal. Excessive static electricity may cause malfunction or trouble.
- Insert an SD card into the V9 series in the same orientation as pictured on the unit. Failure to do so may damage the SD card or the slot on the unit.
- The SD card access LED flashes red when the SD card of the V9 series is being accessed. Never remove the SD card or turn off power to the V9 series while the LED is flashing. Doing so may destroy the data on the SD card. Check that the LED has turned off before removing the SD card or turning off the power to the V9 series.
- Be sure to remove the protective sheet that is attached to the touch panel surface of the V9 series at delivery before use. If used with the protective sheet attached, the V9 series may not correctly recognize touch operations.
- When using an analog resistive-film type V9 series unit, do not touch two positions on the screen at the same time. If two or more positions are pressed at the same time, the switch located between the pressed positions may be activated.
- When using a V9 series unit of the capacitive type, observe the following points.
  - Use a Class 2 power supply for the 24 VDC power unit. Using an unstable power supply may result in incorrect touch switch activation.
  - Capacitive touch panel types support two-point touch operations. If a third point is touched, the touch operation will be cancelled.
  - Capacitive touch panel types are prone to the influence of conductive material. Do not place conductive material such as metals near the touch panel surface and do not use the panel if it is wet. Otherwise, malfunctions may occur.
- There is a heat sink in the back side of the X1 series unit which becomes hot during operation. Take care not to touch during operation.

---

 **CAUTION**

- Capacitive touch switches are used on the X1 series. Note the following limitations.
  - Use a safety extra-low voltage (SELV) power supply for 24 VDC models. Using the X1 series with an unstable power supply may result in incorrect touch switch activation.
  - Because capacitive touch switches are susceptible to the effects of conductors, do not place conductors, such as metal, near the panel screen or use the touch switch panel when the screen is wet. Otherwise, malfunctions may occur.
  - Calibration is performed upon turning the power on. Do not touch the screen for 10 seconds immediately after turning the power on. Otherwise, malfunctions may occur.

**[General Notes]**

- Never bundle control cables or input/output cables with high-voltage and large-current carrying cables such as power supply cables. Keep control cables and input/output cables at least 200 mm away from high-voltage and large-current carrying cables. Otherwise, malfunction may occur due to noise.
- When using MONITOUCH in an environment where a source of high-frequency noise is present, it is recommended that the FG shielded cable (communication cable) be grounded at each end. However, when communication is unstable, select between grounding one or both ends, as permitted by the usage environment.
- Be sure to plug connectors and sockets of MONITOUCH in the correct orientation. Failure to do so may lead to damage or malfunction.
- If a LAN cable is inserted into the serial communication connector, the device on the other end may be damaged. Check the connector names on the unit and insert cables into the correct connectors.
- Do not use thinners for cleaning because it may discolor MONITOUCH surface. Use commercially available alcohol.
- If a data receive error occurs when MONITOUCH unit and a counterpart unit (PLC, temperature controller, etc.) are started at the same time, read the manual of the counterpart unit to correctly resolve the error.
- Avoid discharging static electricity on the mounting panel of MONITOUCH. Static charge can damage the unit and cause malfunctions. Discharging static electricity on the mounting panel may cause malfunction to occur due to noise.
- Avoid prolonged display of any fixed pattern. Due to the characteristic of liquid crystal displays, an afterimage may occur. If prolonged display of a fixed pattern is expected, use the backlight's auto OFF function.
- MONITOUCH is identified as a class-A product in industrial environments. In the case of use in a domestic environment, the unit is likely to cause electromagnetic interference. Preventive measures should thereby be taken appropriately.
- The signal ground (SG) and frame ground (FG) are connected inside the V9150 series and X1 series unit. Take care when designing systems.
- MONITOUCH is equipped with a battery that contains lithium metal and therefore observance of transport regulations is necessary. Hakko Electronics ships MONITOUCH packed in accordance with transport regulations. If there is a need to transport MONITOUCH after it is once unpacked, transport MONITOUCH in accordance with the IATA Dangerous Goods Regulations, International Maritime Ask your forwarding agent for details of transport regulations.

**[Notes on the LCD]**

Note that the following conditions may occur under normal circumstances.

- The response time, brightness, and colors of MONITOUCH may be affected by the ambient temperature.
- Tiny spots (dark or luminescent) may appear on the display due to the characteristics of liquid crystal.
- Unevenness in brightness and flickering may occur depending on the screen display pattern due to the characteristics of liquid crystal.
- There are variations in brightness and color between units.

**[Notes on the Capacitive Touch Switch]**

- Touch switches may be unresponsive if touched with dry fingers. In such a case, use a capacitive stylus pen.
- Touch switches of the X1 series are calibrated each time the power is turned on. Do not touch the screen for 10 seconds immediately after turning the X1 series on. Otherwise, malfunctions may occur.
- When a metal object is near a touch switch of the X1 series for 5 minutes or longer, the touch switch is calibrated to recognize that state as the default state. Note that after the metal object is removed, the touch switch will become inoperable.

- When using the X1 series, water droplets or conductive material can cause the sensor to make a false detection and lead to malfunctions.
- When using multi-touch operations on the X1 series, points must be at least 3 cm apart. Points may not be recognized if in close proximity of each other.
- When using the X1 series in an environment with excess noise, the responsiveness of touch switches may be lowered and the point that responds may deviate by up to 1 cm. Implement measures such as adding a filter to the input power supply.
- Regularly clean the screen to maintain optimal performance of touch operations.  
Observe the following points when cleaning the screen.  
<Notes on Cleaning>
  - The panel surface is made of glass. Be sure to clean the surface gently with a cloth or sponge. Otherwise, you may scratch or damage the glass.
  - Take care not to let cleaning detergent to seep into the touch panel unit.  
In particular, avoid spraying cleaning detergent directly onto the panel surface.

[Notes on Wireless LAN]

For details regarding supported wireless LAN standards, radio law certifications, and countries where wireless LAN can be used, refer to the following manuals provided with MONITOUCH at delivery.

- “About Wireless LAN on V9 Advanced Model”/“About Wireless LAN on V9 Standard Model” manual or the “V9 Series Hardware Specifications”
- “About Wireless LAN on X1 Series” manual

[X1 series: Notes on the Operating System (OS) and Scope of Operation Guarantee]

- The operating system (OS) used on this product is the Windows 10 IoT Enterprise LTSC by Microsoft. Therefore, Windows Update is not applicable to this OS. Also, the apps Cortana, Microsoft Edge, Microsoft Store, and UWP are not supported.
- Custom user apps for use on Windows can be used on this product. Hakko Electronics does not guarantee the operation of apps installed by the customer. Make sure to thoroughly check the operation before actual use.
- Hakko Electronics shall not be held responsible for dealing with trouble or liable for damages stemming from Microsoft products while using this product. When trouble occurs with a Microsoft product or there is a need to check the specifications, refer to the manual of the Microsoft product or contact Microsoft. Refer to the following website to contact Microsoft.  
<https://support.microsoft.com/en-us/contactus/>

[X1 series: Notes on Turning Power Off]

The System Configurator built into the X1 series unit provides a write filter function. When the write filter function is enabled, the power of the X1 series unit can be turned off suddenly without damaging system files. If the write filter function is disabled, the shutdown procedure is necessary. Perform the shutdown procedure on System Configurator and after waiting for at least 15 seconds from when the screen has gone out, turn the X1 series unit power off.

[X1 series: Notes on the Built-in Solid-state Drive (SSD)]

- The X1 series unit has a built-in SSD (C drive). Do not change partitions or split the drive.
- 3D NAND is used in the built-in SSD of the X1 series unit. Keep in mind the service life of the SSD.

[X1 series: Notes on the Battery]

The X1 series unit has a built-in battery which is used for backing up time data and BIOS settings (retention during power outage). The battery must be replaced within three years after the unit is purchased. Note that the X1 series unit can start up in the same way as usual even if time data and BIOS settings are lost. Time data is reset to the default value in such a case. Set again as necessary.

[X1 series: Notes on the Startup Time]

Since a Windows OS is used, the startup time differs depending on the devices that are connected and software that is additionally installed.

Carefully consider devices and software before use.

---

# Contents

---

## Record of Revisions

### Preface

V9 / X1 Series / TELLUS Ver. 4 Models .....	1-4
Storage functions for X1 / TELLUS Ver. 4 .....	1-5

### Chapter 1 Outline

1.1	Type of Macros .....	1-1
1.2	Screen Macro .....	1-2
1.3	Multi-overlap Macro .....	1-2
1.4	Switch Macro .....	1-3
	Settings Window .....	1-3
	Macro .....	1-3
1.5	Function Switch Macro (Excluding V9 Advanced / X1 Series) .....	1-4
1.6	Initial Macro .....	1-5
	Macro Setting .....	1-5
	[General] tab window .....	1-5
1.7	Global Macro .....	1-6
	Macro Setting .....	1-6
	[General] tab window .....	1-6
	Macro Execution Steps .....	1-6
	Supplemental Remarks .....	1-6
1.8	Event Timer Macro .....	1-7
	Macro Setting .....	1-7
	[Event Timer Macro] tab window .....	1-7
	Supplemental Remarks .....	1-7
1.9	Interval Timer .....	1-8
	Setting Dialog .....	1-9
	[Macro Edit] window .....	1-9
	Setting Example .....	1-12
1.10	Macro Mode .....	1-14
	Setting .....	1-14
	[Macro Edit] window .....	1-14
	[Detail] window .....	1-15
1.11	Alarm Macro .....	1-16
1.12	Scheduler Macro .....	1-17
1.13	Notes on Macros .....	1-18

---

---

## Chapter 2 Edit

2.1	Macro Editor	2-1
2.1.1	Start and Quit	2-1
	Start	2-1
	Screen	2-1
	Overlap library	2-1
	Switch	2-2
	Initial Macro	2-3
	Event Timer Macro	2-3
	Macro block	2-3
	Macro mode	2-4
	Alarm macro	2-4
	Scheduler macro	2-5
	Quit	2-6
2.1.2	Screen Composition	2-7
	Menu bar	2-7
	[File] menu	2-7
	[View] menu	2-9
	[User Level] menu	2-9
	[Help] menu	2-9
	Toolbar	2-10
	Edit	2-10
	Comment List	2-10
	Macro Editing Support	2-10
2.1.3	Edit	2-11
	1: Command Entry	2-11
	New registration	2-11
	Device memory change	2-12
	Command change	2-12
	2: Direct Entry	2-13
	New registration	2-13
	Command change	2-14
	3: Macro Editing Support	2-15
	New registration	2-15
	4: Text Entry	2-17
	Export	2-17
	Text editing	2-17
2.1.4	Error	2-19
2.2	Available Device Memory	2-20
2.2.1	Device Memory Types	2-20
2.2.2	Indirect Device Memory Designation	2-21
	Internal Device Memory, PLC (1 - 8) Device Memory	2-21
	Memory card	2-22
	Example	2-22

---

---

2.3	CSV Format Setting (with Recipe or Sampling Macro Used)	2-23
2.3.1	Applicable Macros	2-23
2.3.2	Recipe	2-24
	Setting procedure	2-24
	CSV File Name and Storage Target	2-29
	Total Number of CSV Files	2-30
	Data in CSV File	2-30
2.3.3	Sampling	2-31
	Alarm Server	2-31
	Setting procedure	2-31
	Setting details	2-31
	Logging Server	2-33
	Setting procedure	2-33
	Setting details	2-33
	CSV File Name and Storage Target	2-34
	For "SMPL_CSV"	2-34
	For "SMPLCSV_BAK/SMPLCSV_BAK2"	2-35

### Chapter 3 Command

3.1	Macro Command List	3-1
-----	--------------------	-----

### Chapter 4 Details of Macro Commands

4.1	Guide to Chapter 4	4-1
4.2	Arithmetical Operation	4-2
	ADD(+)	4-2
	SUB(-)	4-4
	MUL(X)	4-6
	DIV(/)	4-8
	MOD(%)	4-9
4.3	Logical Operation	4-10
	AND(&)	4-10
	OR( )	4-11
	XOR(^)	4-12
	SHL(<<)	4-13
	SHR(>>)	4-14
4.4	Statistic	4-15
	MAX	4-15
	MIN	4-16
	AVG	4-17
	SUM	4-18

---



---

4.5	Mathematics/trigonometric	4-19
	EXP	4-19
	EXPT	4-20
	LN	4-21
	LOG	4-22
	SQRT	4-23
	ABS	4-24
	NEG	4-25
	SIN	4-26
	COS	4-27
	TAN	4-28
	ASIN	4-29
	ACOS	4-30
	ATAN	4-31
	DEG	4-32
	RAD	4-33
4.6	Bit Operation	4-34
	BSET	4-34
	BCLR	4-35
	BINV	4-36
4.7	Conversion	4-37
	BCD	4-37
	BIN	4-38
	CWD	4-39
	CVP	4-40
	CVPFMT	4-41
	CVB	4-42
	CVBFMT	4-43
	SWAP	4-44
	CHR	4-45
	STRING	4-46
	CVFD	4-47
	CVDF	4-49
	CLND_TO_GRE	4-51
	GRE_TO_CLND	4-53
	FORMAT_DATA	4-55
	FORMAT_STR	4-59
4.8	Transfer	4-63
	MOV	4-63
	BMOV	4-64
	CVMOV	4-66
	CVSMOV	4-69
	FILL	4-71
4.9	Comparison	4-72
	IF (CMP)	4-72
	IF (TST)	4-74
	IF	4-75
	IF (MULTI)	4-77
	SELECT_CASE	4-80

---

---

4.10	Macro Operation Control	4-82
	CALL	4-82
	JMP	4-84
	LABEL	4-85
	FOR/NEXT	4-86
	RET	4-88
	SWRET	4-89
	EN_INT	4-90
4.11	FROM Backup	4-91
	FROM_WR	4-91
	FROM_RD	4-92
4.12	Printer	4-93
	MR_OUT	4-93
	MR_REG	4-94
	OUT_PR	4-96
4.13	Video	4-98
	VIDEO	4-98
	VIDEO2	4-112
4.14	USB Camera	4-155
	USBCAM_REC	4-155
	USBCAM	4-156
4.15	PLC	4-159
	PLC_CLND	4-159
	PLC_CTL	4-161
	TBL_READ	4-163
	TBL_WRITE	4-164
4.16	Ethernet	4-165
	SEND	4-165
	EREAD	4-167
	EWRITE	4-168
4.17	MES	4-169
	MES	4-169
4.18	Storage (Recipe)	4-179
	LD_RECIPE	4-179
	LD_RECIPE2	4-182
	LD_RECIPESEL	4-184
	LD_RECIPESEL2	4-187
	SV_RECIPE	4-191
	SV_RECIPE2	4-193
	SV_RECIPESEL	4-195
	SV_RECIPESEL2	4-198
	SET_RECIPEFOLDER	4-200
	RD_RECIPE_FILE	4-202
	RD_RECIPE_LINE	4-204
	RD_RECIPE_COLUMN	4-207
	WR_RECIPE_FILE	4-210
	WR_RECIPE_LINE	4-212
	WR_RECIPE_COLUMN	4-214
	GET_RECIPE_FILEINFO	4-216

---

---

4.19	Storage (Sampling)	4-218
	SMPL_BAK	4-218
	SMPL_CSV	4-220
	SMPL_CSV2	4-223
	SMPL_SAVE	4-226
	SMPLCSV_BAK	4-227
	SMPLCSV_BAK2	4-229
4.20	Storage (Others)	4-231
	HDCOPY	4-231
	HDCOPY2	4-232
	HDCOPY3	4-234
	SET_DRIVE	4-236
	COPY_FILE	4-238
	MOVE_FILE	4-244
	DEL_FILE	4-248
	READ_FILE	4-250
	WRITE_FILE	4-252
4.21	Real No. Arithmetical Operation	4-254
	F_ADD(+)	4-254
	F_SUB(-)	4-255
	F_MUL(X)	4-256
	F_DIV(/)	4-257
4.22	Real No. Statistics	4-258
	F_SUM	4-258
	F_AVG	4-259
	F_MAX	4-260
	F_MIN	4-261
4.23	Others	4-262
	;(Comment)	4-262
	BRIGHT	4-263
	GET_MSGBLK	4-264
	PLC_ULR	4-265
	RECONNECT	4-267
	RECONNECT_EX	4-268
	SAMPLE	4-269
	SEARCH_FILE	4-273
	ADJ_VOLUME	4-274
	SAVE_VOLUME	4-275
	TREND REFRESH	4-276
	SYS	4-277
	HMI-FUNC	4-327

---

# 1 Outline

---

- 1.1 Type of Macros
- 1.2 Screen Macro
- 1.3 Multi-overlap Macro
- 1.4 Switch Macro
- 1.5 Function Switch Macro
- 1.6 Initial Macro
- 1.7 Global Macro
- 1.8 Event Timer Macro
- 1.9 Interval Timer
- 1.10 Macro Mode
- 1.11 Alarm Macro
- 1.12 Scheduler Macro
- 1.13 Notes on Macros



## 1.1 Type of Macros

Macros, created with MONITOUCH-specific commands, are used to process user programs. Macro creation is made simple with easy-to-use commands.

Macros are executable for the following occasions:

- Screen
  - OPEN macro: Executes once when the screen is opened.
  - CLOSE macro: Executes once when the screen is switched.
  - CYCLE macro: Executes repeatedly while the screen is open.
- Multi-overlap
  - OPEN macro: Executes once when the multi-overlap is opened.
  - CLOSE macro: Executes once when the multi-overlap is closed.
    - \* OPEN and CLOSE macros cannot be used for call-overlaps.
- Switch
  - ON macro: Executes once when the switch is pressed.
  - OFF macro: Executes once when the switch is released.
- Function switch (Excluding V9 Advanced / X1 series)
  - ON macro: Executes once when the function switch is pressed.
  - OFF macro: Executes once when the function switch is released.
- Initial macro

The specified macro block executes once before MONITOUCH starts communicating with the PLC. (Refer to page 1-5.)
- Global macro

The specified macro block is executed once when the control device memory is changed from 0 to 1 (leading edge). (Refer to page 1-6.)
- Event timer macro

The specified macro block executes at regular intervals, regardless of which screen is currently displayed. (Refer to page 1-7.)
- Interval timer

While a screen equipped with the interval timer is displayed, the timer starts as preset. Each time the preset time has elapsed, the specified macro block is executed. (Refer to page 1-8.)
- Macro mode

While a screen equipped with macro mode is displayed, macros are executed according to the status at the specified device memory addresses. (Refer to page 1-14.)

  - ON macro: Executes when the bit at the specified device memory address changes from 0 → 1 (leading edge).
  - OFF macro: Executes when the bit at the specified device memory address changes from 1 → 0 (falling edge).
- Alarm macro

When a macro is set in the [Alarm Server] window, it is executed according to a change in the status of the device memory for errors. (Refer to page 1-16.)

  - Occurrence macro: To be executed at the time of alarm occurrence
  - Resetting macro: To be executed at the time of alarm reset
- Scheduler macro

When a macro is set in the [Scheduler] window, it is executed at the timing specified for [Trigger]. (Refer to page 1-17.)


## 1.2 Screen Macro

---

This macro is registered for screens.

Registered commands are executed at the following timings:

- OPEN macro  
This macro is executed once when a screen is opened.  
Select [Screen Setting] → [Open Macro] and register the command to be executed.
- CLOSE macro  
This macro is executed once when a screen is closed.  
Select [Screen Setting] → [Close Macro] and register the command to be executed.
- CYCLE macro  
This macro is executed repeatedly while the screen is open.  
Select [Screen Setting] → [Close Macro] and register the command to be executed.

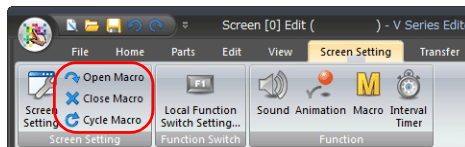


## 1.3 Multi-overlap Macro

---

This macro is registered for overlap displays.

Registered commands are executed at the following timings:

- OPEN macro  
This macro is executed once when a multi-overlap display is opened.  
Select [Screen Setting] → [Open Macro] in the overlap library window and register the command to be executed.
- CLOSE macro  
This macro is executed once when a multi-overlap display is closed.  
Select [Screen Setting] → [Close Macro] in the overlap library window and register the command to be executed.

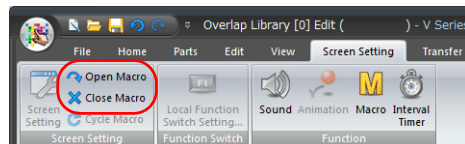


## 1.4 Switch Macro

This macro is registered for switches.

### Settings Window

#### Macro

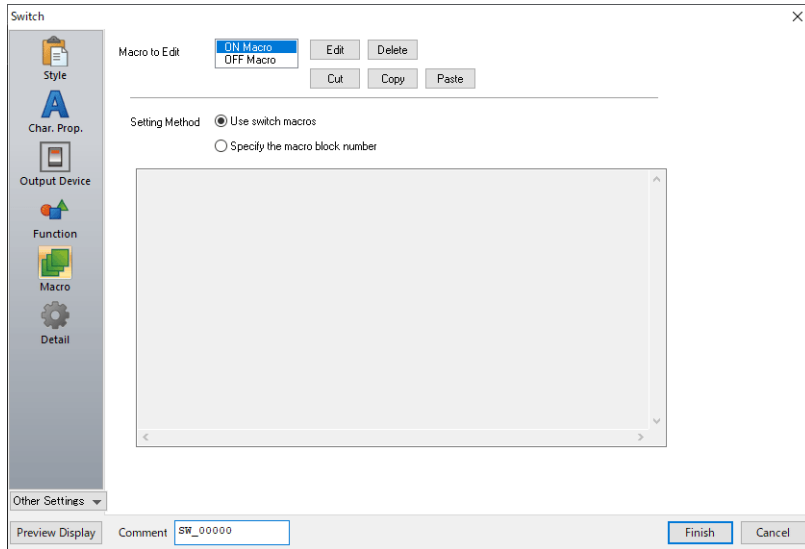

Macro to Edit	Select ON/OFF macros. <ul style="list-style-type: none"> <li>ON macro This macro is executed once when a switch is pressed.</li> <li>OFF macro This macro is executed once when a switch is released.</li> </ul>
Edit	Open a macro edit screen/macro block.
Delete	Delete macro.
Cut	Copy the macro and then delete it.
Copy	Copy the macro.
Paste	Paste the copied macro.
Setting Method	Select how you want to set up your macros. <ul style="list-style-type: none"> <li>Use switch macros Macro commands are registered in the switch itself.</li> <li>Specify the macro block number Register macro commands in a macro block, and select a number of the macro block to execute.</li> </ul>




## 1.5 Function Switch Macro (Excluding V9 Advanced / X1 Series)

---

This macro is registered for function switches.

- ON macro  
This macro is executed once when a switch is pressed.  
Set the command in the [Local Function Switch Setting] window.
- OFF macro  
This macro is executed once when a switch is released.  
Set the command in the [Local Function Switch Setting] window.

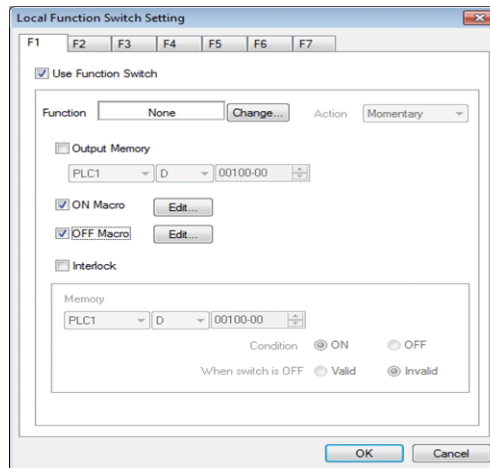

## 1.6 Initial Macro

An initial macro is executed once before MONITOUCH starts communicating with an external device.

Select [System Setting] → [Macro Setting] to make settings.


Register the command in [Macro Block].

Click [Edit], or select [Home] → [Registration Item] → [Macro Block] to register a macro block.

For more information, refer to page 2-3.

### Macro Setting

#### [General] tab window

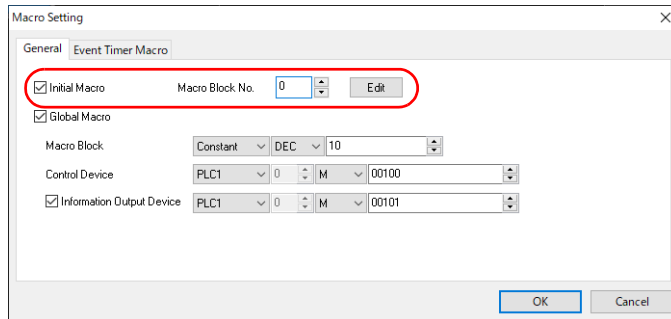

Initial Macro	Check this box to use an initial macro. Specify the macro block number to be executed before MONITOUCH starts communicating with the PLC. 0 - 1023: Macro block number
Edit	Open a macro block.

## 1.7 Global Macro

A global macro is executed when the bit is set (ON), regardless of the screen being displayed. Select [System Setting] → [Macro Setting] to make settings.

Register the command in [Macro Block].

Select [Home] → [Registration Item] → [Macro Block] to register a macro block.

For more information, refer to page 2-3.

### Macro Setting

#### [General] tab window

The screenshot shows the 'Macro Setting' dialog box with the 'General' tab selected. The 'Global Macro' checkbox is checked and highlighted with a red box. The 'Macro Block No.' is set to 0. The 'Macro Block' is set to 'Constant' with a value of 'DEC 10'. The 'Control Device' is set to 'PLC1' with a value of '0' and a memory address of 'M 00100'. The 'Information Output Device' is checked and set to 'PLC1' with a value of '0' and a memory address of 'M 00101'. The 'OK' and 'Cancel' buttons are visible at the bottom right.

Global Macro	Check this box to use a global macro.
Macro Block	Specify the macro block number to be executed. It can also be specified by specifying a device memory address.
Control Device	Specify a macro start bit. The macro is executed when the specified bit changes from 0 → 1 (leading edge).
Information Output Device	This reflects the status of the control device memory.

#### Macro Execution Steps

1. Specify the number of the macro block for which commands to be executed are registered.
2. The control device memory is set ([0 → 1] leading edge).  
↓  
Macro execution  
↓  
The information output device memory is automatically set ([0 → 1]).
3. The control device memory is reset ([1 → 0] falling edge).

#### Supplemental Remarks

- By using the information output device memory, you can check the timing to reset (OFF) the control device memory.

## 1.8 Event Timer Macro

An event timer macro is executed at regular intervals, regardless of the screen being displayed.

Select [System Setting] → [Macro Setting] → [Event Timer Macro] to make settings.


Register the command in [Macro Block].

Click [Edit], or select [Home] → [Registration Item] → [Macro Block] to register a macro block.

For more information, refer to page 2-3.

### Macro Setting


#### [Event Timer Macro] tab window

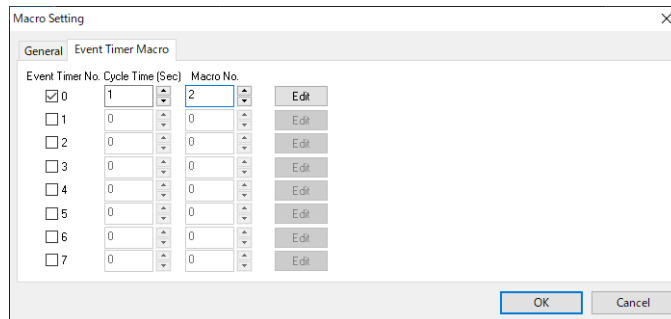

Event Timer	0 - 7 A maximum of eight event timer macro blocks can be set.
Cycle Time	0 - 3600 (sec) Specify a cycle time for the timer. The specified macro block is executed each time the specified time has elapsed.
Macro No.	0 - 1023 Specify the macro block number to be executed.
Edit	Open a macro block.

### Supplemental Remarks

- When the timers for multiple event timer macros are up at the same time: Event timer macro blocks are executed in ascending numeric order of [Event Timer]. After a macro block has been processed, execution proceeds to the next macro block.

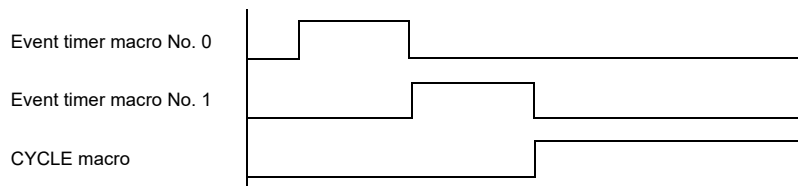

- When accessing the same external device memory address in some event timer macros: The processing ability will be improved if you set the event timer macro No. 0 that reads the external device memory into the internal device memory and make other event timer macros refer to this internal device memory. In order to improve the overall processing ability, reduce the number of times that the external device memory is accessed.

## 1.9 Interval Timer


The interval timer can be set for screens and multi-overlap displays.

Select [Screen Setting] → [Interval Timer] to make settings.


The interval timer has the following three functions.

Register the command in [Macro Block] for all cases.



- The specified macro is executed at intervals specified for [Repeat Interval] from when the screen is opened.

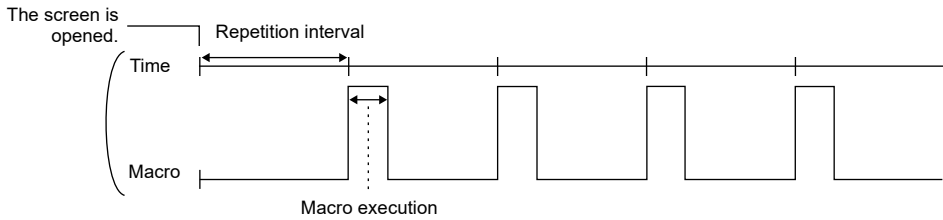

- The specified macro is executed at intervals specified for [Repeat Interval] from when an arbitrary bit is set (ON). (This function is valid only while the bit is ON.)

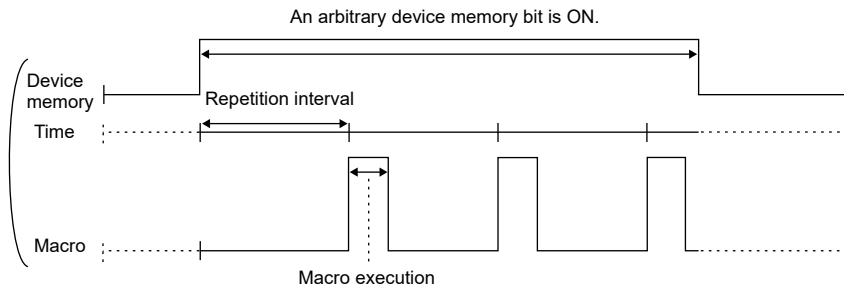


- The specified macro is executed once after the time specified for [Repeat Interval] has elapsed since the screen was opened or an arbitrary bit was set (ON).


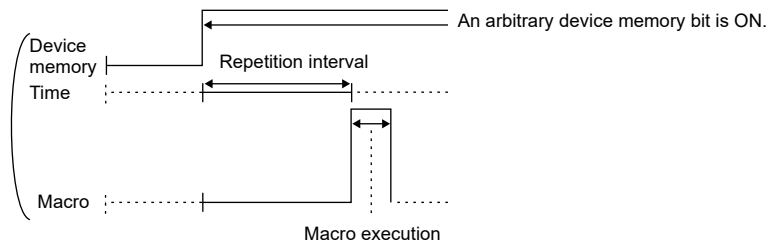
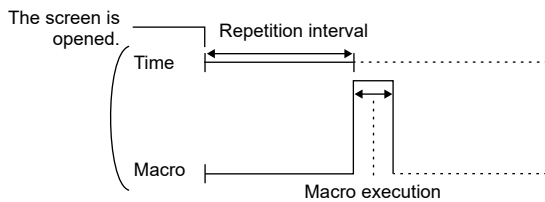


## Setting Dialog


## [Macro Edit] window

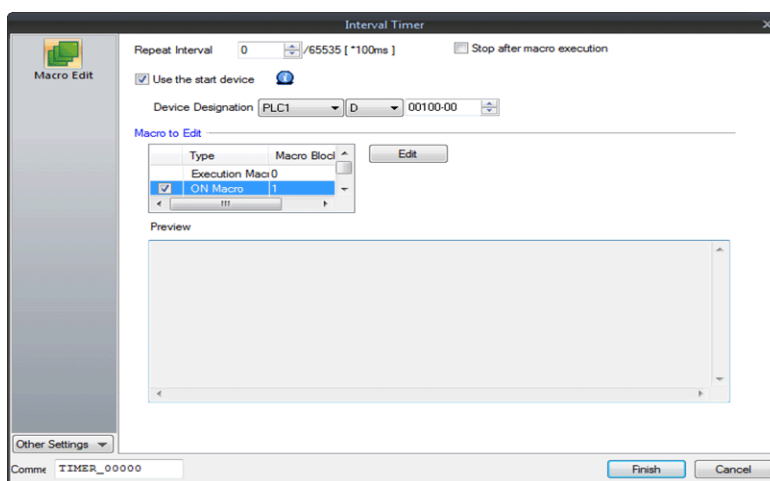

Repeat Interval *1	<p>0 - 65535 (× 100 msec)</p> <p>Specify a repetition interval to execute the macro. The macro is executed at the specified intervals. When "0" is specified, the macro is executed every cycle.</p> <p>The timing to start the timer depends on the setting for [Use the start device].</p>
Stop after macro execution	<p>Check this box to execute the macro only once.</p> <p>When the specified time has elapsed and the macro has been executed, the timer stops.</p>
Use the start device	<p>Check this box when specifying the start device memory address.</p> <ul style="list-style-type: none"> <li>• Unchecked</li> </ul> <p>The timer starts when the screen is opened.</p> <ul style="list-style-type: none"> <li>• Checked</li> </ul> <p>While the bit is "1" (ON): The macro is executed at intervals specified for [Repeat Interval].</p> <p>While the bit is "0" (OFF): The macro is not executed.</p>
Execution Macro	<p>Specify the macro block number to be executed at intervals specified for [Repeat Interval].</p>
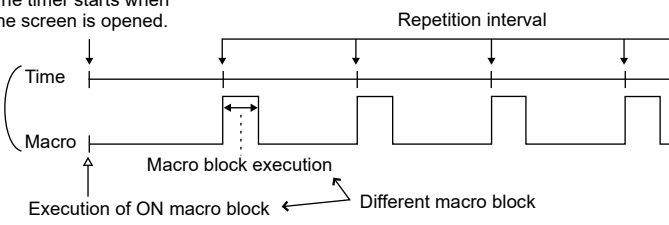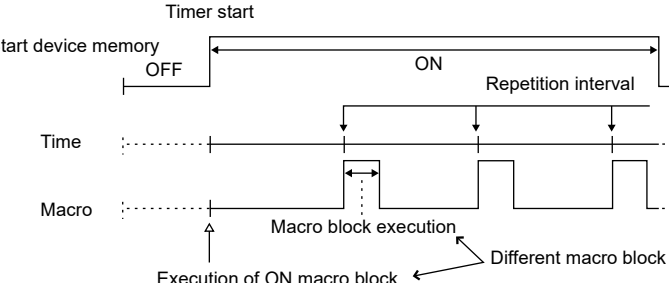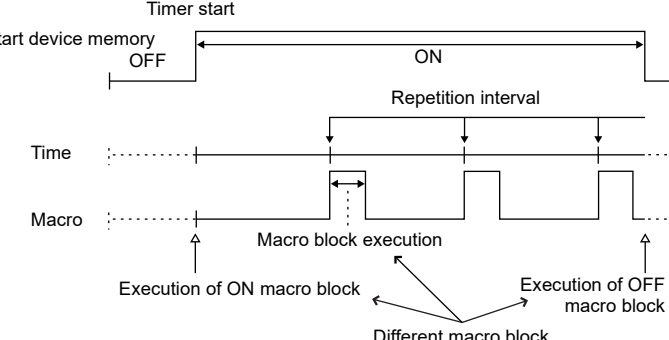
<p>ON Macro</p>	<p>Specify the macro block number to be executed once when the timer starts.</p> <ul style="list-style-type: none"> <li>• [Use the start device] unchecked: When the screen is opened, the timer starts and the ON macro is executed once.</li> </ul> <p>The timer starts when the screen is opened.</p>  <ul style="list-style-type: none"> <li>• [Use the start device] checked: The ON macro block is executed once when the start device memory bit is set to "1".</li> </ul> 
<p>OFF Macro</p>	<p>This option is enabled, provided that [Use the start device] is checked. Specify the macro block number to be executed once when the start device memory bit is reset (1 → 0).</p>  <p>This option is useful for clearing the internal device memory that is used for a macro.</p>
<p>Edit</p>	<p>This button is used to open a macro block.</p>
<p>Preview</p>	<p>This area displays the contents of macros registered in the selected macro block number.</p>

\*1 The actual repetition interval may fluctuate according to the contents of the screen.

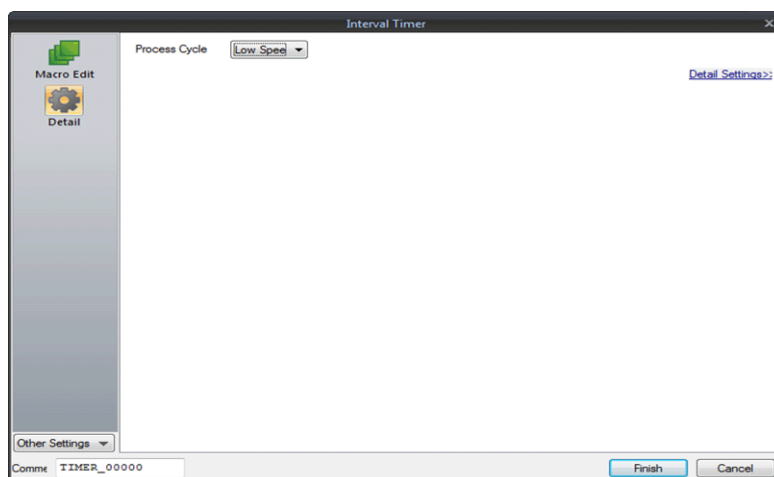**[Detail] window**


Process Cycle	Specify the cycle for MONITOUCH to read the PLC when they are communicating. For more information, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
ID	Specify an ID.



## Setting Example

### Graphic movement on the screen

When the switch is pressed, a graphic from the graphic library is displayed. At the same time, the graphic placed on the left of the screen starts to move to the right. Pressing the switch next clears the graphic. Pressing the switch again displays the graphic in the same position where it was displayed last. The graphic starts to move to the right.

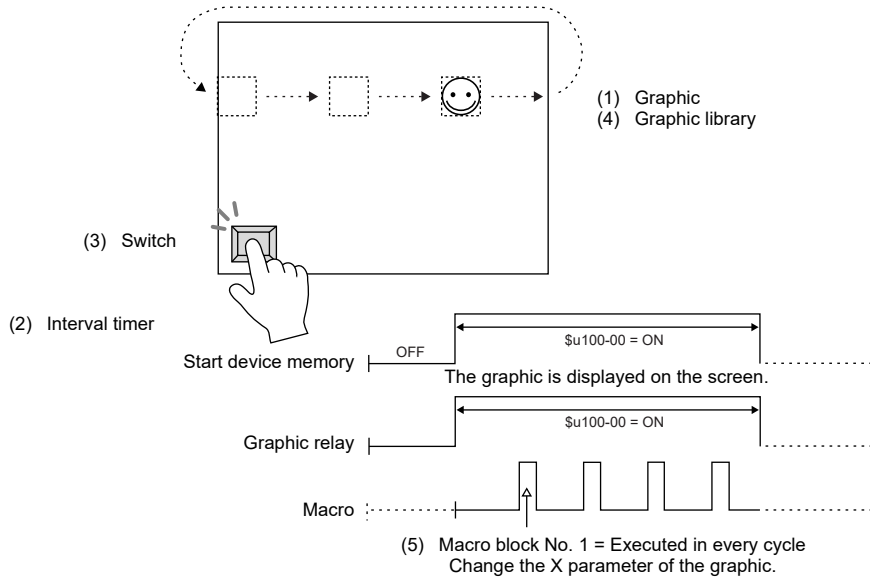

### Screen Edit

(1) Graphic  
([Method: Device (Bit Designation)])

Number of Bits to Monitor: 1  
Device Designation:  $\$u100-00$   
Type: 1-Graphic  
Mode: XOR  
Start Graphic: GNo. 0 No. 0  
Valid parameters No.: 1

(2) Interval timer

Repeat Interval: 0  
 Stop after macro execution  
 Use the start device:  $\$u100-00$   
 Execution Macro: Macro block No.: 1  
 ON Macro: Macro block No.  
 OFF Macro: Macro block No.


(3) Switch

Device to Output:  $\$u100-00$   
Output Action: Alternate  
Lamp Device:  $\$u100-00$

## Graphic Library Edit (4)

Example: GNo. 0 &amp; No. 0

Place the following graphic on the screen, and specify the X parameter.

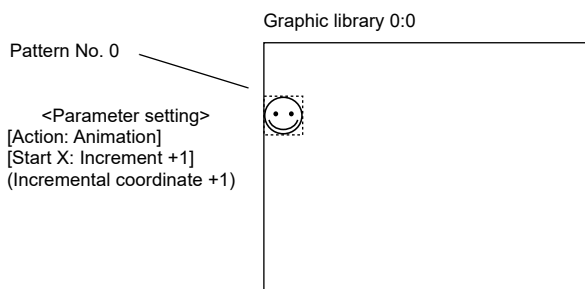

## Macro Block Edit (5)

Example: Macro block No. 1

```

0 $u00101 = $u00101 + 1 (W)
1 IF ($u00101 = 640) LB00 (W)
2 RET
3 LB00:
4 $u00101 = 0 (W)

```

Macro to change the X parameter of the graphic start point

While the count on the X axis is increasing up to 640 (0 → 1 → ... → 640 → 0 → 1 → ... → 640), the graphic moves from the left to the right.

Transfer the above screen program to MONITOUCH for checking.

## 1.10 Macro Mode

Select [Screen Setting] → [Macro] to make settings.

The interval timer can be set for screens and multi-overlap displays.

Macro mode is used to execute an ON macro when the corresponding bit changes from 0 → 1 (leading edge) and an OFF macro when the corresponding bit changes from 1 → 0 (falling edge).

However, when the screen (multi-overlap) is opened, they are executed upon level recognition.


(Refer to [Execute an OFF macro at startup].)

Set the command in the [Macro Edit] window of the macro mode.

A maximum of 32 ON/OFF macros each can be set using the consecutive bits.

### Setting


#### [Macro Edit] window

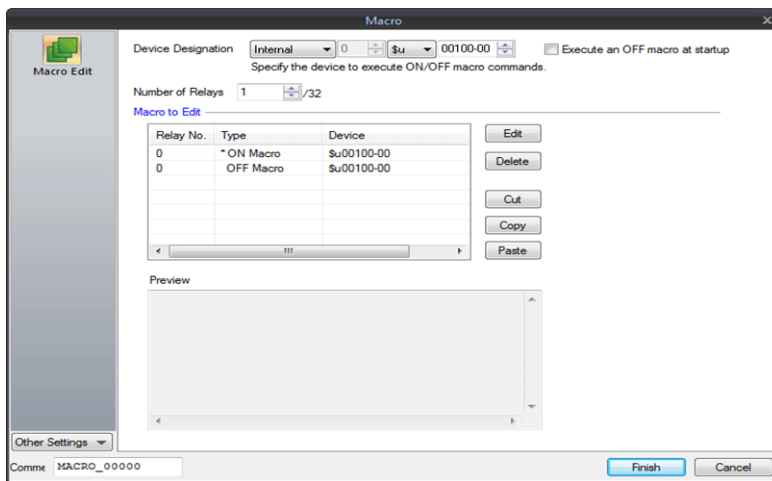

Device Designation	Specify the device memory address that triggers the macro.
Number of Relays	1 - 32 Specify the number of bits for triggering macros. The number specified here is common to both the ON macro and OFF macro.  Example: "10" specified for [Number of Relays] - ON Macro: 10 maximum - OFF Macro: 10 maximum In this case, 10 bits must be allocated for [Device Designation].
Execute an OFF macro at startup	Set the operation to be performed when a screen or multi-overlap for which a macro mode is set is opened. <ul style="list-style-type: none"> <li>• Checked While the bit specified for [Device Designation] is ON, the ON macro is executed; while it is OFF, the OFF macro is executed.</li> <li>• Unchecked The ON macro is executed while the bit specified for [Device Designation] is ON. While the bit is OFF, nothing is executed.</li> </ul>
Macro to Edit	As many ON/OFF macros as the number for [Number of Relays] can be set.

Edit	The macro editor window corresponding to the selected relay number is opened.
Delete	The macro of the selected relay number is deleted.
Cut	The macro of the selected relay number is cut (copied and deleted).
Copy	The macro of the selected relay number is copied.
Paste	The copied macro is pasted to the selected relay number.
Preview	The macro of the selected relay number is shown.

### [Detail] window

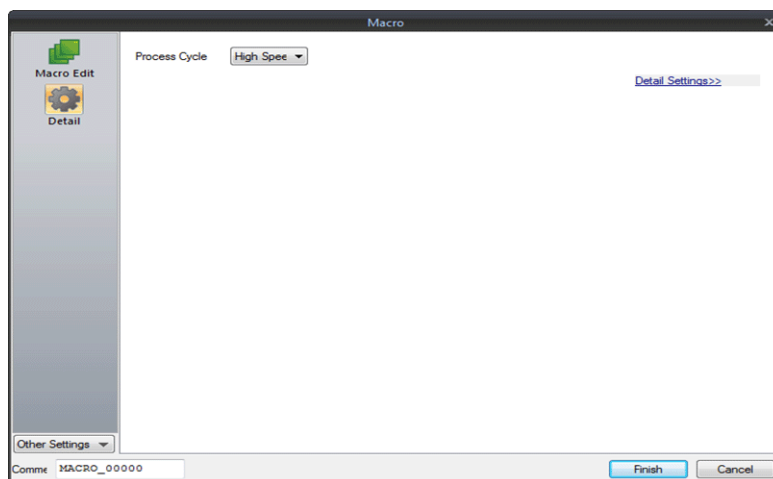

Process Cycle	Specify the cycle for MONITOUCH to read data in the PLC when they are communicating. For more information, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
ID	Specify an ID.

## 1.11 Alarm Macro


An alarm macro can be set when the alarm server is used.

Select [Alarm Device] → [Operation Setting] to set macro commands.

When an alarm occurs, the occurrence macro is executed once. When it is reset, the resetting macro is executed once.

Select [Alarm Server] → [Alarm Device] → [Operation Setting] → [Macro], and set commands to be executed.

- Editing with [Setting: Use Alarm macros] selected  
Register macro commands directly in the [Operation Setting] window.
- Editing with [Setting: Specify the macro block number] selected  
Register macro commands in a macro block, and select a number of the macro block to execute.

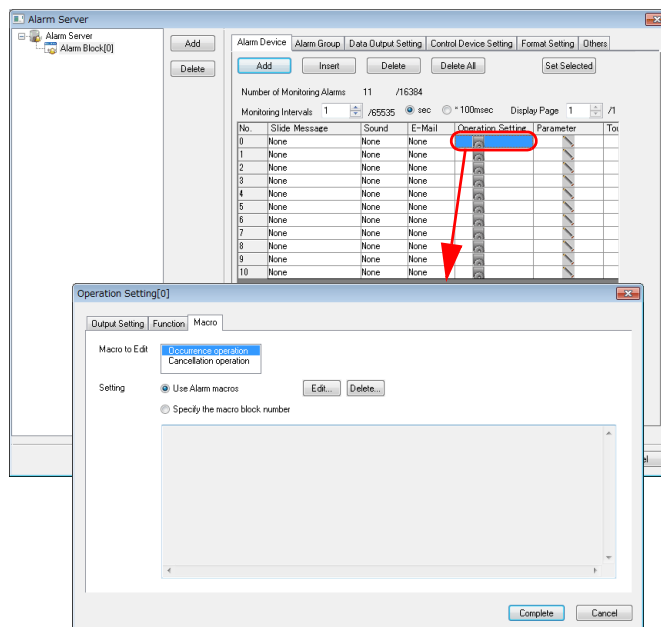

## 1.12 Scheduler Macro


A scheduler macro is executed by using the scheduler function.

Select [System Setting] → [Scheduler] to set macro commands.

The registered macro is executed once at the timing specified for [Trigger] in the [Scheduler] window.

Select [Action] → [Macro], and set commands to be executed.

- Editing with [Setting: Use Scheduler macros] selected  
Register macro commands directly in the [Action] tab window.
- Editing with [Setting: Specify the macro block number] selected  
Register macro commands in a macro block, and select a number of the macro block to execute.

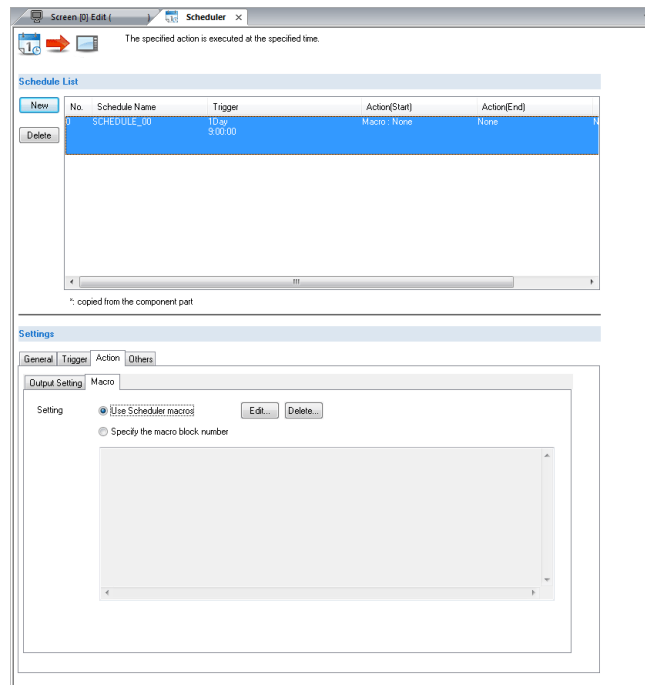

## 1.13 Notes on Macros

---

- A maximum of 1,024 lines (instructions) can be set for one macro.
- The maximum of executable lines in macros is 160,000.  
If the maximum permissible number is exceeded by, for instance the repetition of the same macro with the use of a loop macro, macro execution is forcibly terminated, and “-1 (DEC)” is stored at \$s1059.
- A maximum of 4096 words of data can be transferred per command. When creating macros, be careful not to exceed the maximum.
- When an external device memory is used with multiple MOV commands, the external memory is accessed each time so the processing speed is slowed down.

Example:

```
Line No. 0 PLC1 [D00200] = $u00200 (W)
Line No. 1 PLC1 [D00201] = $u00201 (W)
Line No. 2 PLC1 [D00202] = $u00202 (W)
Line No. 3 PLC1 [D00203] = $u00203 (W)
Line No. 4 PLC1 [D00204] = $u00204 (W)
```

In the above example, MONITOUCH goes and writes data to D200 as commanded in line No. 0, then goes and writes data to D201 as commanded in line No. 1, and so on. Communications that frequently occur will result in a prolonged processing time.

To shorten the communications time, give a BMOV command as shown below. The contents of the macro using BMOV are the same as the above macro consisting of five lines, but the data writing takes place only once.

```
Line No. 0 PLC1 [D00200] = $u00200 C:5 (BMOV) (W)
```

The processing speed is increased and the number of macro commands is reduced. As described above, macros can be simplified when you plan to make their commands more efficient to use.

# 2 Edit

---

- 2.1 Macro Editor
  - 2.1.1 Start and Quit
  - 2.1.2 Screen Composition
  - 2.1.3 Edit
  - 2.1.4 Error
- 2.2 Available Device Memory
  - 2.2.1 Device Memory Types
  - 2.2.2 Indirect Device Memory Designation
- 2.3 CSV Format Setting  
(with Recipe or Sampling Macro Used)
  - 2.3.1 Applicable Macros
  - 2.3.2 Recipe
  - 2.3.3 Sampling





## 2.1 Macro Editor

This section describes the usage of the macro editor.


### 2.1.1 Start and Quit

#### Start

How to start the macro editor varies depending on the location where a macro command is registered.

#### Screen


- OPEN macro  
[Screen Setting] → [Open Macro]
- CLOSE macro  
[Screen Setting] → [Close Macro]
- CYCLE macro  
[Screen Setting] → [Cycle Macro]

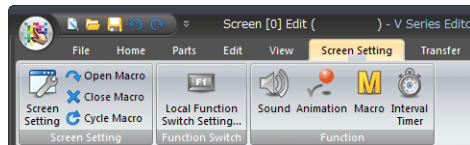

#### Overlap library


Select [Home] → [Registration Item] → [Overlap Library] to show the overlap display where a macro is to be registered.

- OPEN macro  
[Screen Setting] → [Open Macro]
- CLOSE macro  
[Screen Setting] → [Close Macro]

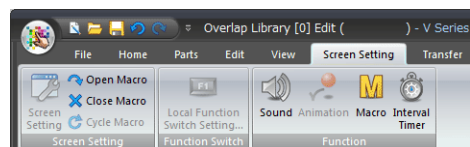


## Switch

- ON macro  
 [Macro] → [Macro to Edit: ON Macro]  
 - [Setting Method: Use switch macros] → [Edit]  
 - [Setting Method: Specify the macro block number] → [Edit] → Specify the macro block number to register the commands → [Edit]
- OFF macro  
 [Macro] → [Macro to Edit: OFF Macro]  
 - [Setting Method: Use switch macros] → [Edit]  
 - [Setting Method: Specify the macro block number] → [Edit] → Specify the macro block number to register the commands → [Edit]

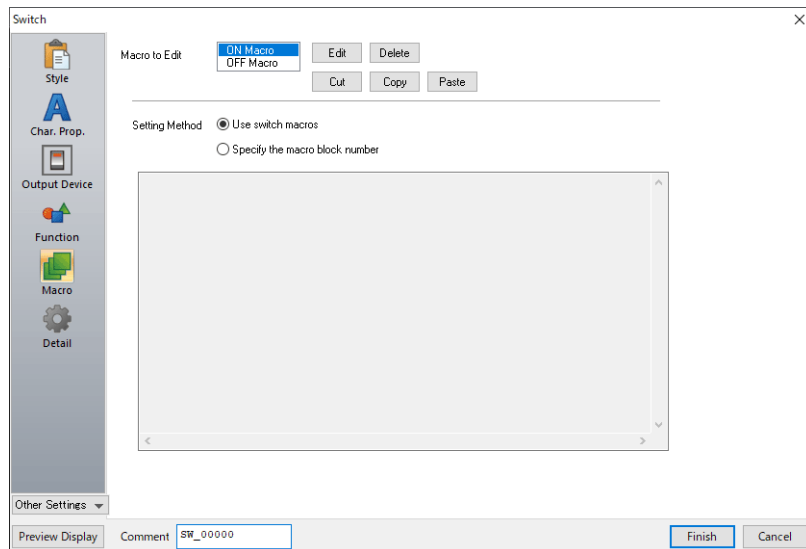


## Function switch (Excluding V9 Advanced / X1 series)

- ON macro  
 [Function Switch Setting] → [ON Macro] → [Edit]
- OFF macro  
 [Function Switch Setting] → [OFF Macro] → [Edit]

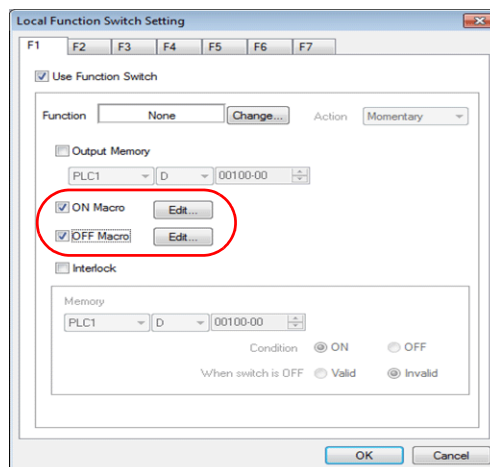

## Initial Macro


[System Setting] → [Macro Setting] → [General] → [Edit]

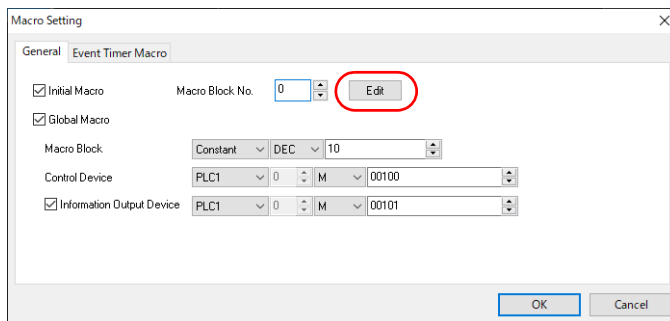

2

## Event Timer Macro


[System Setting] → [Macro Setting] → [Event Timer Macro] → [Edit]

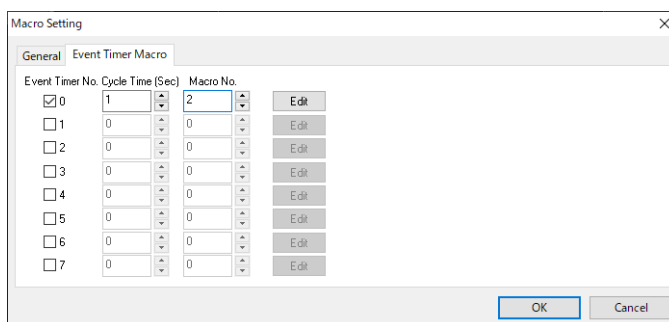

## Macro block

[Home] → [Registration Item] → [Macro Block]


Specify the number of the macro block where macro commands are to be registered, and click [OK].



### Macro mode

[Screen Setting] → [Macro]


- ON macro  
[Macro Edit] → [ON Macro] → [Edit]
- OFF macro  
[Macro Edit] → [OFF Macro] → [Edit]

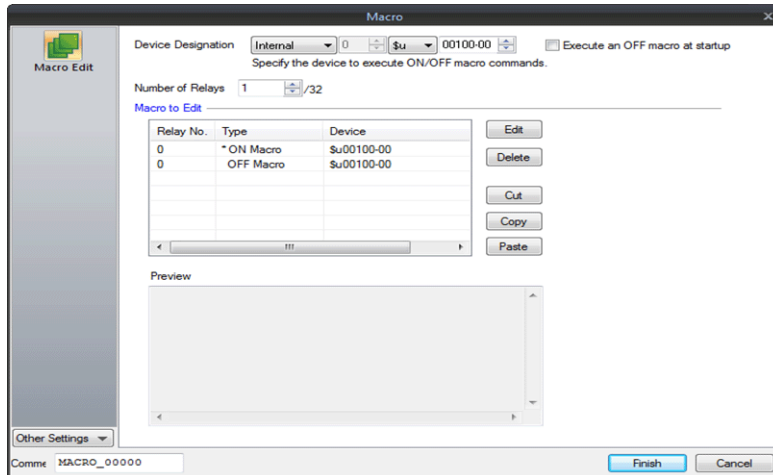

### Alarm macro

[Alarm Server] → [Alarm Device] → [Operation Setting] → [Macro]


- Occurrence macro  
[Macro to Edit: Occurrence operation] → [Setting: Use Alarm macros] → [Edit]
- Resetting macro:  
[Macro to Edit: Cancellation operation] → [Setting: Specify the macro block number] → [Edit]

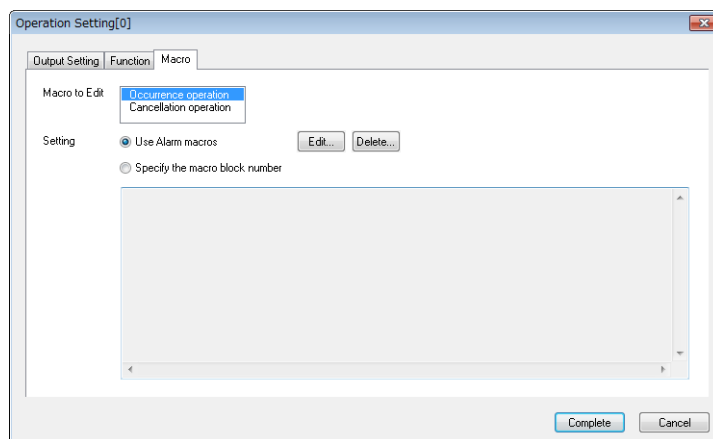

### Scheduler macro


[Scheduler] → [Action] → [Macro]

[Setting: Use Scheduler macros] → [Edit]

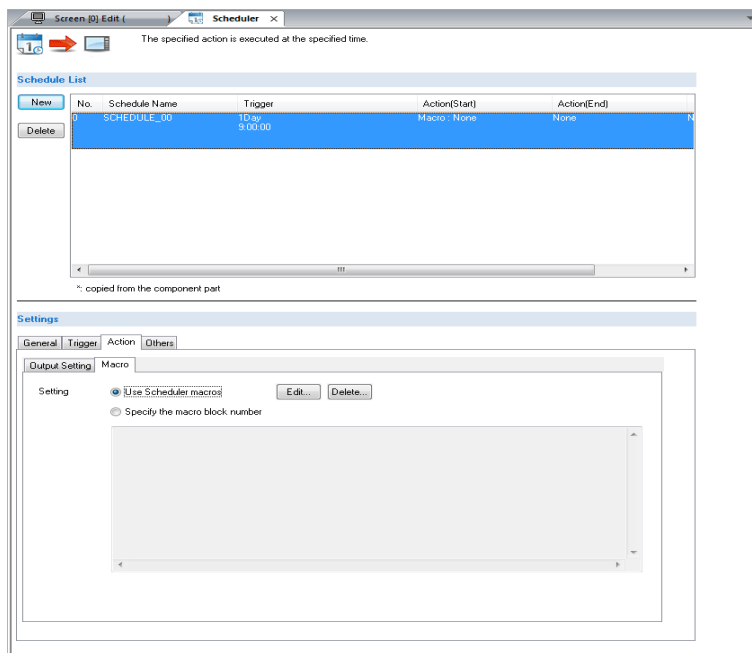


## Quit


1. Select [File] → [Close], or click the close button in the upper right corner of the window.

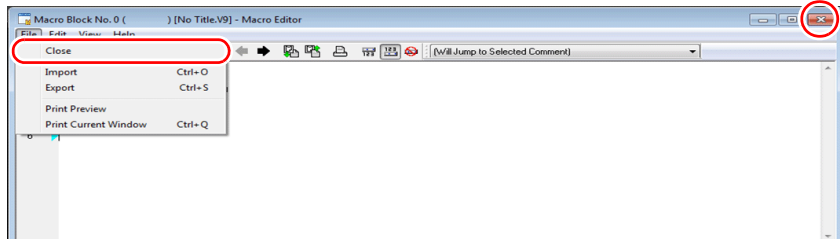

2. When no error is detected, the macro editor ends normally. If detected, the following message appears.  
Select a countermeasure for the error, and quit the macro editor.

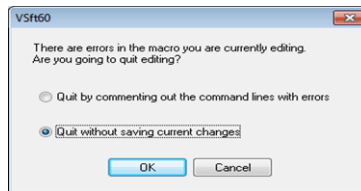


Example: When quitting by commenting out the error line

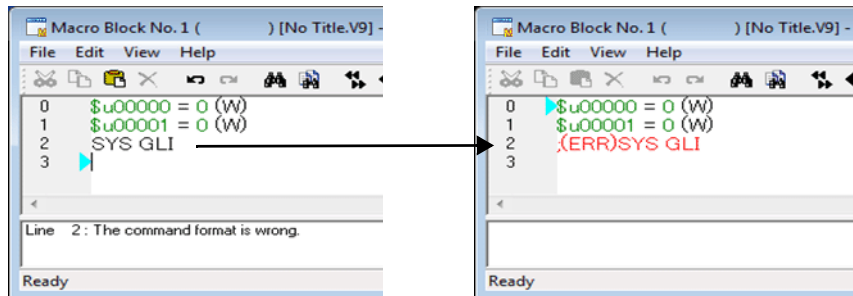

When the macro editor is opened again, the error line is changed to a comment in red with "(ERR)" appended to the beginning of the line.

## 2.1.2 Screen Composition

The macro editor window is configured as follows:

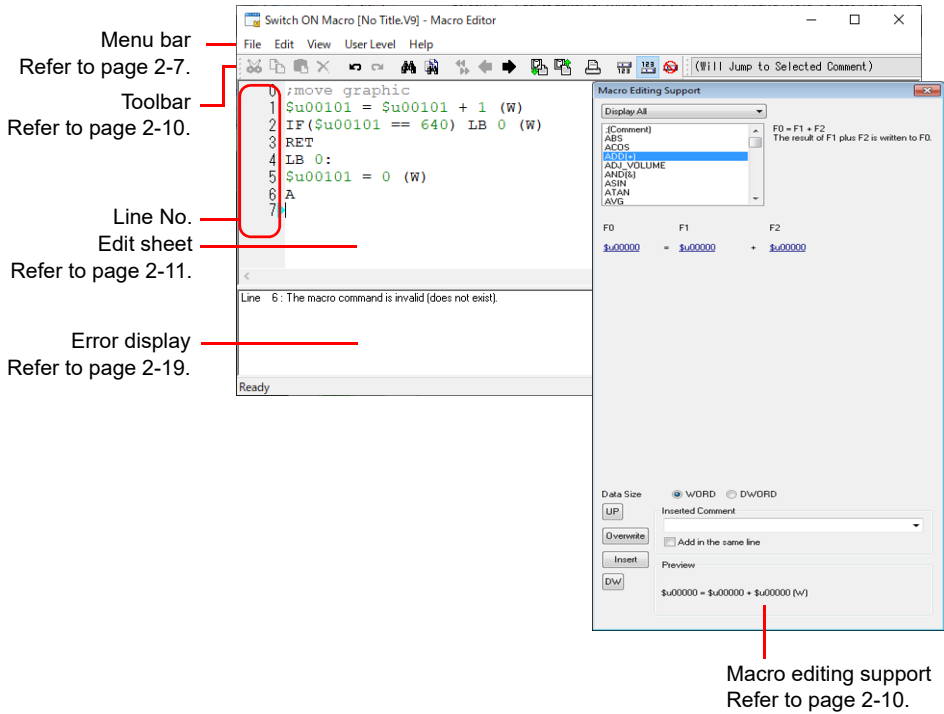

2


### Menu bar

#### [File] menu

Close	Quits the macro editor.
Import	Reads text files.
Export	Saves the macro currently being edited to a text file.
Print Preview	Displays the printout image of the macro being edited.
Print Current Window	Prints the macro currently being edited.





**[Edit]/right-click menu**

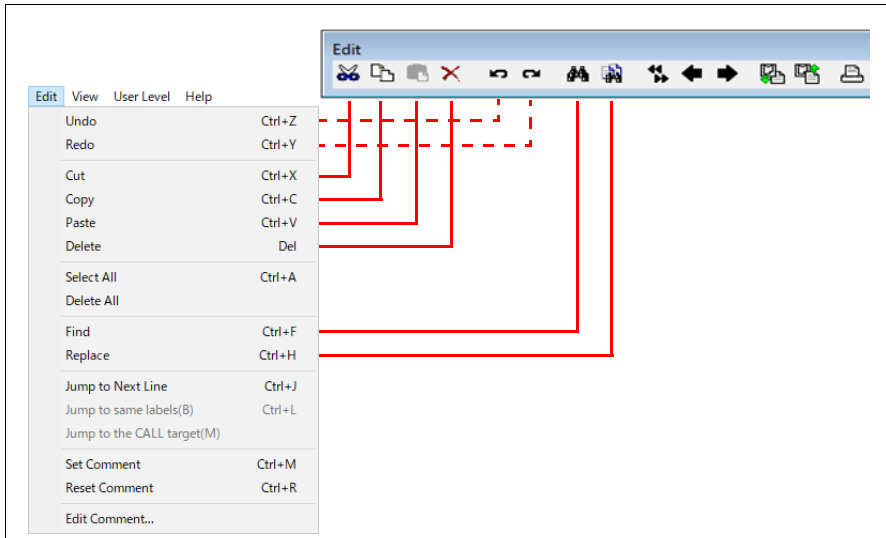

Undo	Returns you to the previous state by canceling the effect of the most recently executed command.
Redo	Returns you to the state before [Undo] is executed.
Cut	Cuts the selected area and saves it to the clipboard.
Copy	Copies the selected area and saves it to the clipboard.
Paste	Pastes the data from the clipboard.
Delete	Deletes the selected area.
Select All	Selects all macros currently being edited.
Delete All	Deletes all macros currently being edited.
Find	Searches for characters in the macro currently being edited.
Replace	Searches for characters in the macro currently being edited and replaces them.
Jump to Next Line	Jumps to the specified line.
Jump to same labels	If there is more than one LB x: (jump instruction) or JMP LB x (jump instruction) on the same macro block edit, you can search for a label with the same number.
Jump to the CALL target	The specified macro block can be opened directly from a line of a CALL instruction. * Valid only when a constant is specified in the CALL instruction.
Set Comment	Converts the line selected in the macro editor window to a comment (with ";" as the first character).
Reset Comment	Resets the comment conversion selected in the macro editor window (deletes the first character ";" from the comment).
Edit Comment	Allows you to edit comments on macro blocks during macro block editing.


**[View] menu**

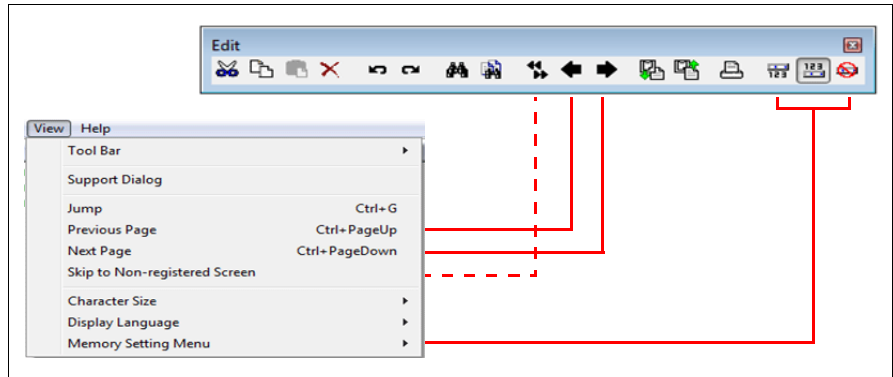

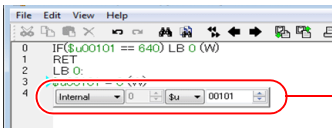Tool Bar	Selects whether to show/hide the toolbar.
Support Dialog	Selects whether to show/hide the [Macro Editing Support] dialog. For more information on the dialog, refer to page 2-10.
Jump	Opens the macro editor window for the number specified in [Macro Block].
Previous Page	Opens the previous page.
Next Page	Opens the next page.
Skip to Non-registered Screen	Skips the non-registered screens at the time of screen change.
Character Size	Allows you to select the size of characters to be displayed in the macro editor.
Display Language	Allows you to select the language to be displayed in the macro editor.
Memory Setting Menu (Upside Display, Downside Display, Hide)	Allows you to select the position where the memory setting pull-down menu appears in the macro editor.  Example: [Downside Display] selected  

Placing the cursor at a memory address brings up this underneath the address.

**[User Level] menu**

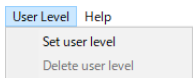	
Set user level	These settings are used when [File] → [property] → [File information] → [Extended password] is checked. For more information, refer to the V9 Series Operation Manual.
Delete user level	

**[Help] menu**

You can refer to the manual list and each manual in PDF format.

## Toolbar

### Edit


Refer to "Menu bars" (page 2-7).

### Comment List

	
Comment List	Jumps to the selected comment line.

## Macro Editing Support

To go to this dialog, select [Support Dialog] from the [View] menu.

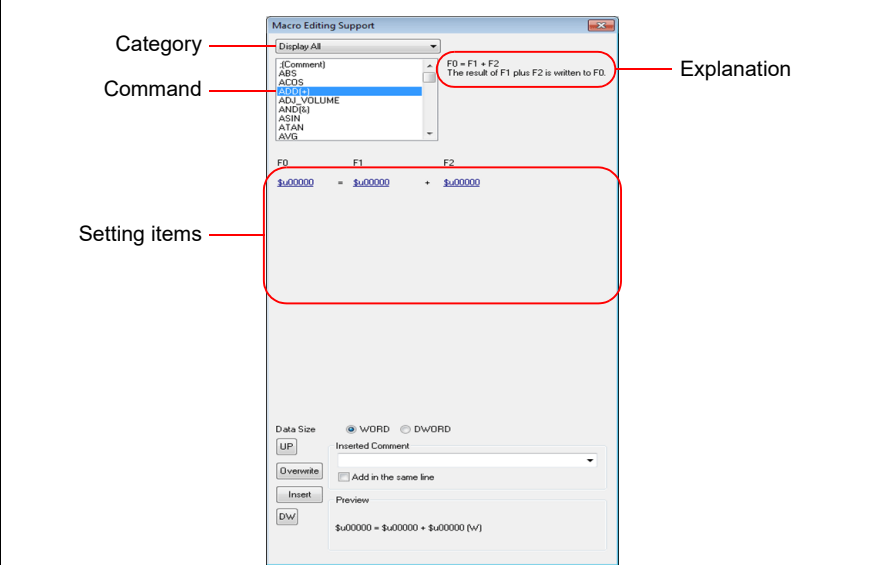

Category	Macro category list
Command	The list of commands contained in the selected category
Setting items	Setting items required for the selected command
Inserted Comment	Comments can be registered together with commands.
UP/DW	Moves the selected line.
Overwrite	Overwrites the selected line with the contents of [Preview].
Insert	Inserts the contents of [Preview] into the position above the selected line.
Explanation	Explains the command selected from the list.
Preview	Displays the preview of macro editing.

## 2.1.3 Edit

You can utilize the macro editor in several editing manners. Choose a desired one.

### 1: Command Entry

Editing is performed with the command list. This method is useful when you know the names of particular commands. (Refer to page 2-11.)

### 2: Direct Entry

Editing is performed by entering text through the keyboard of your computer. (Refer to page 2-13.)

### 3: Macro Editing Support


Editing is performed in the dialog that provides the explanation of individual commands. This method is best suited to beginners. (Refer to page 2-15.)

### 4: Text Entry

Editing is performed with a text editor (commercially available). Macro programming is enabled even in an environment without the editor. (Refer to page 2-17.)

For mnemonic codes, you can use a tab key or a space key to make indents.


You can also use the macro command [;(Comment)] to add comments or disable commands. (Refer to page 4-262.)

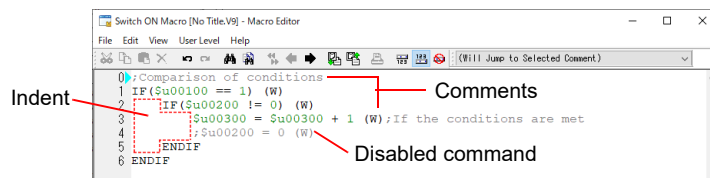


## 1: Command Entry

### New registration


1. Select a line using the [UP] / [DW] button.
2. Enter a command. The command list appears.

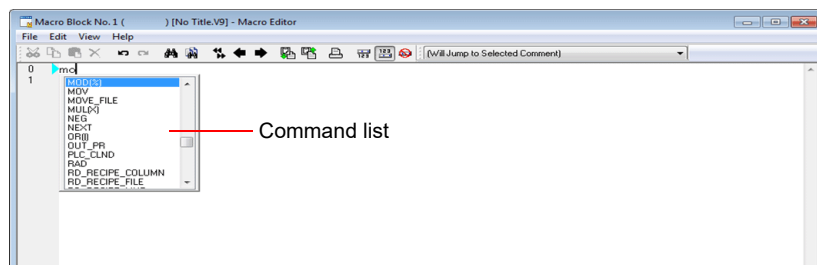


3. Choose the desired command from the list and double-click it. Alternatively, choose the desired command using the [↑] / [↓] key on the keyboard and press the Enter key.

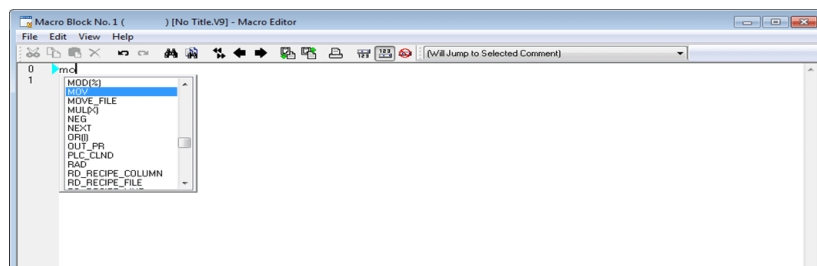

- The [Device Setting] dialog appears. Make necessary settings, such as the address and data length, in the dialog, and click the [Finish] or [×] button.

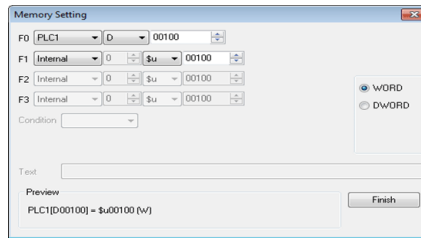


- The line has been registered. To proceed with the next line registration, go back to step 1.

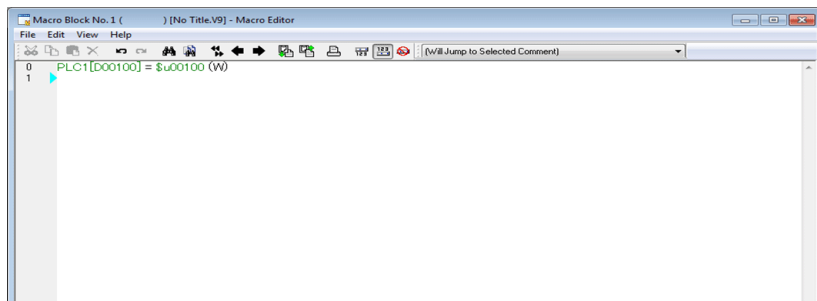

### Device memory change

Device memory addresses (corresponding to [F0] / [F1] / [F2] / [F3]) are colored green. Follow the steps below when you wish to change any addresses:

- Select the desired memory address in green with the cursor. The device memory setting menu is displayed. Change the address as necessary.

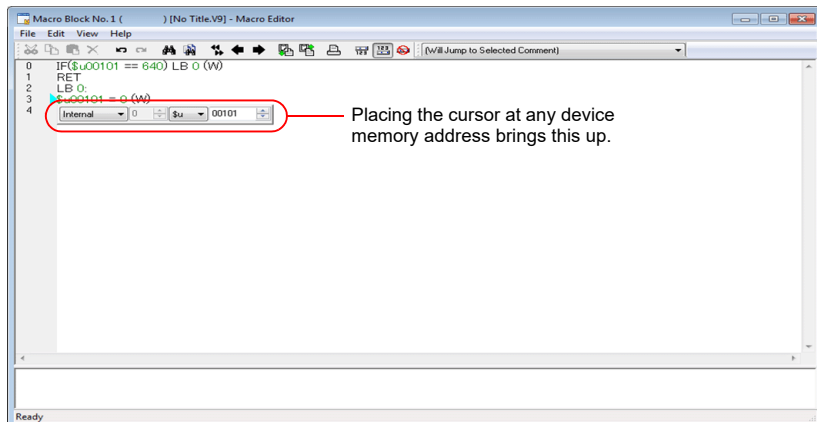

- Select the desired device memory address in green with the cursor, and type an address change through your computer keyboard.


### Command change

Choose the line you wish to change. Delete the line and register a new line.


## 2: Direct Entry

### New registration

1. Select a line using the [UP] / [DW] button.
2. Enter mnemonic codes through the keyboard.  
Example: MOV command  
PLC1 [D200] = \$u100 (W)  
\* For designating memory, refer to page 2-20.

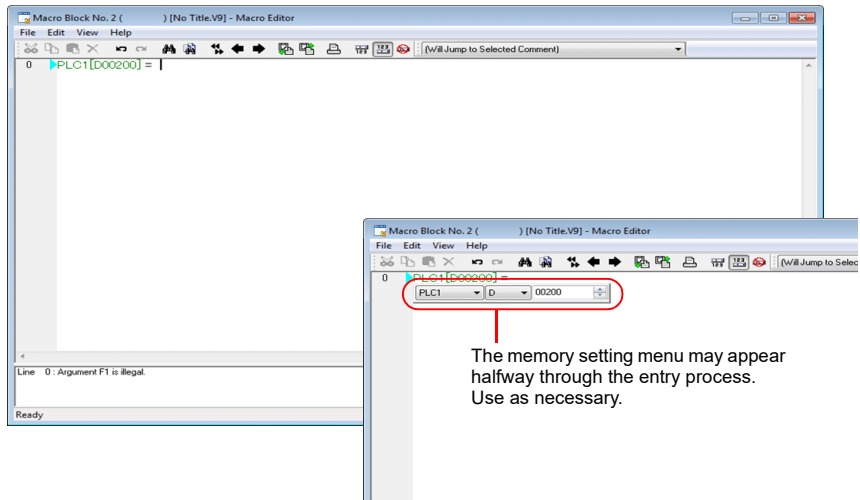


3. Press the Enter key to go to the next line. To proceed with the next line registration, go back to step 1.

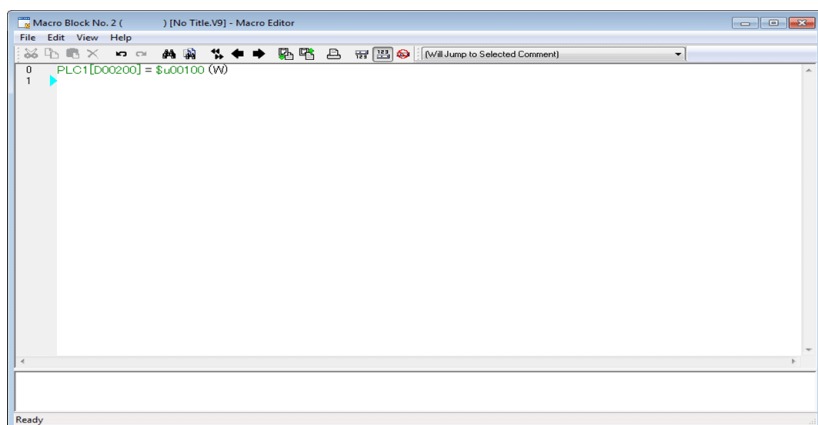

### Memory change

Memory addresses (corresponding to [F0] / [F1] / [F2] / [F3]) are colored green. Follow the steps below when you wish to change any memory addresses:

- Select the desired memory address in green with the cursor. The memory setting menu is displayed. Change the address as necessary.

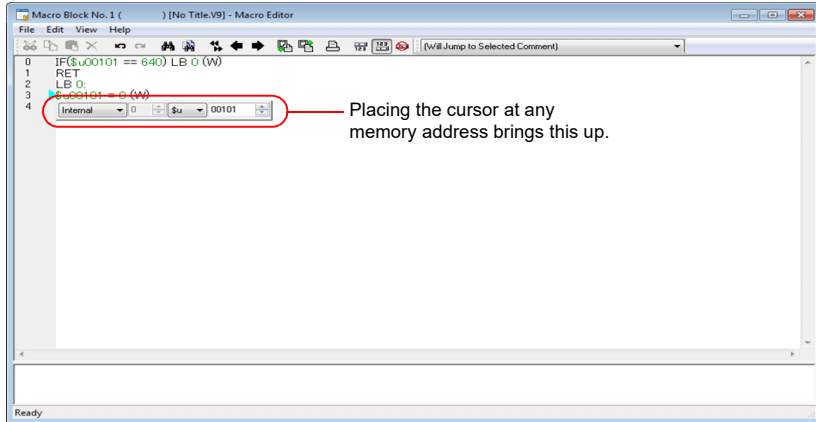

- Select the desired memory address in green with the cursor, and type an address change through the keyboard.


### Command change

Choose the line you wish to change. Delete the line and register a new line.


### 3: Macro Editing Support

#### New registration


1. Select a line using the [UP] / [DW] button.
2. Select the desired command from the pull-down menu and the macro list.

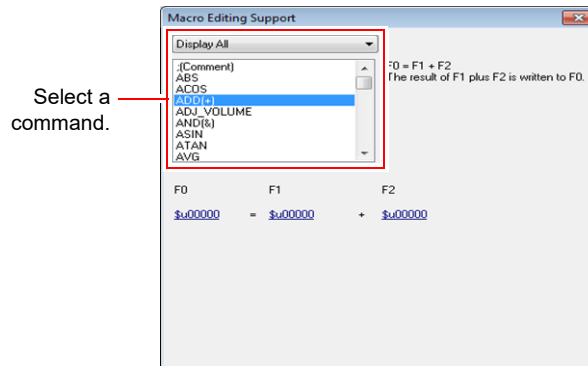

3. The setting items required for the selected command are displayed. Specify the address, data length, etc.

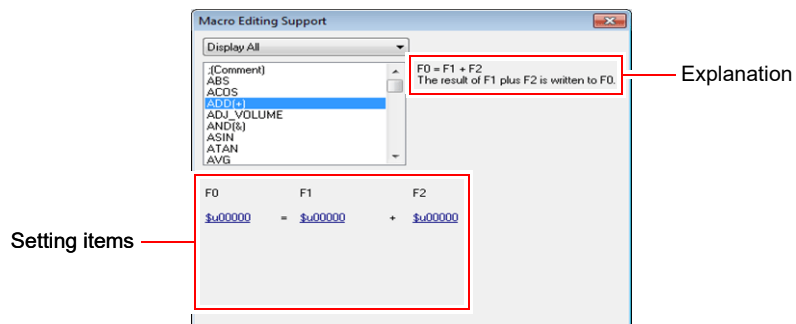

4. The settings made are displayed under [Preview].

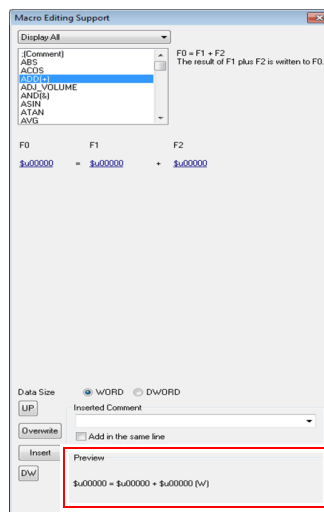


5. If you wish to make a comment, enter it in the comment entry box.
6. To overwrite the selected line, press the [Overwrite] button. To insert a line into the position above the selected line, press the [Insert] button.
7. The line has been registered. To proceed with the next line registration, go back to step 1.



## Device memory change

1. Select the line to be modified. The command and the values specified for the line are displayed in the [Macro Editing Support] dialog.

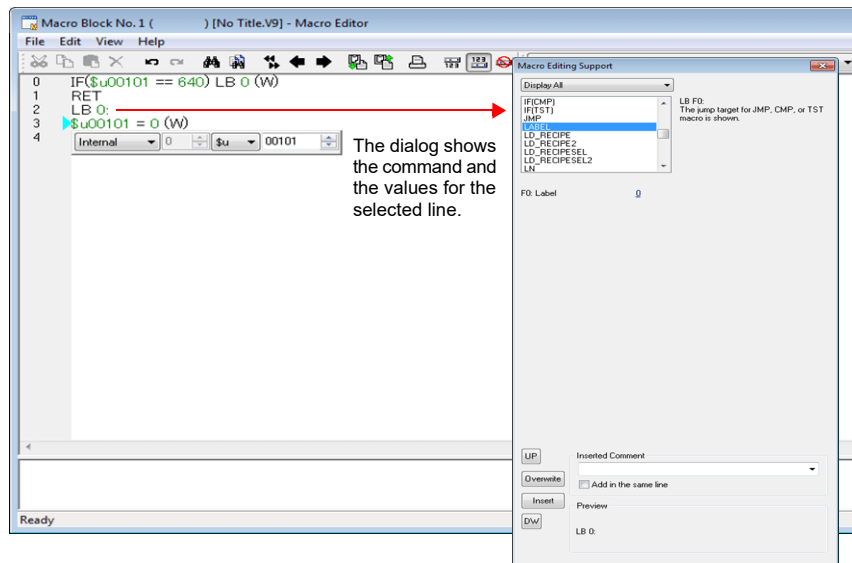


2. Change the device memory addresses as desired and click the [Overwrite] button. Clicking the [Insert] button inserts the changed setting into the position above the selected line.

## 4: Text Entry

The macro editor is capable of importing and exporting text files. Even if the editor is not installed on your computer, macros can be created with commercially available software.

### Export

1. From the [File] menu, select [Export]. The [Save As] dialog is displayed.

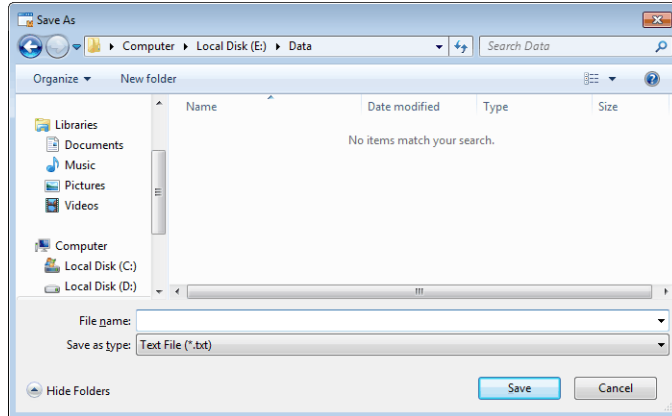


2. Enter a file name and click [Save]. A text file is created under the name.


### Text editing

Editing on Notepad

1. Open the text file on Notepad.

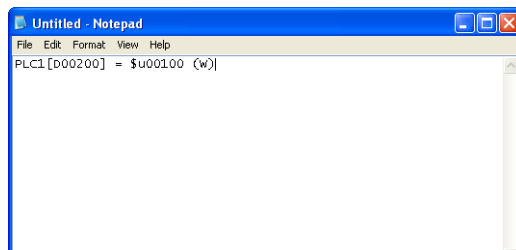


2. Select a line using the [UP] / [DW] button.
3. Enter mnemonic codes through the keyboard.  
Example: Addition command  
\$u1000 = \$u200 + \$u300 (W)  
\* For designating memory, refer to page 2-20.

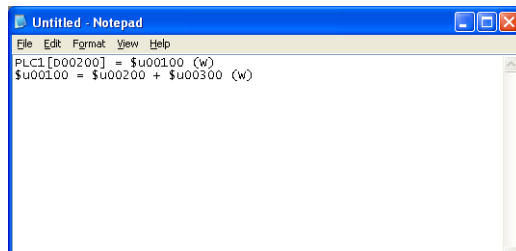


4. Save the file.

## Import

1. Open the edit sheet, to which a text file will be imported.
2. From the [File] menu, select [Import]. The [Open] dialog is displayed.

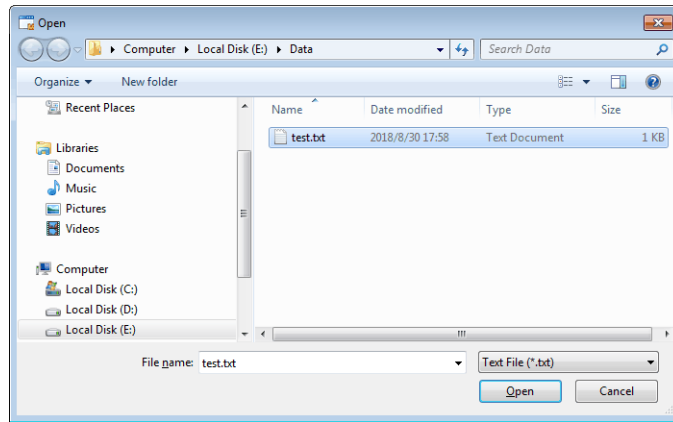


3. Select the desired file and click [Open]. The text file is imported.

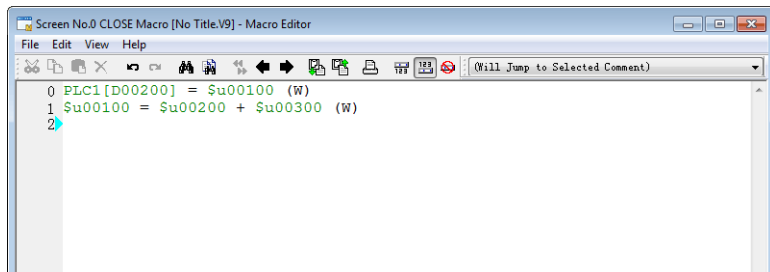


## 2.1.4 Error


1. If the registered lines of a macro have any errors, error messages are displayed.

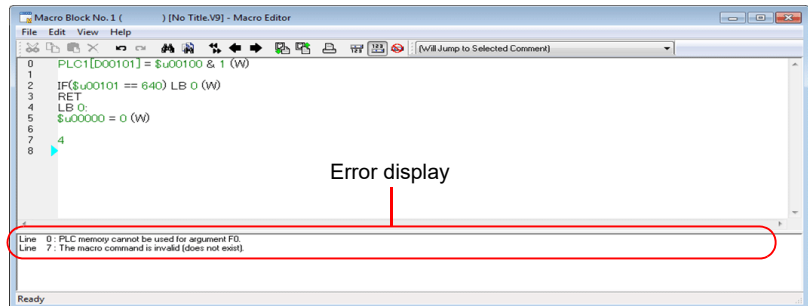

2. Double-clicking an error message selects the corresponding line.

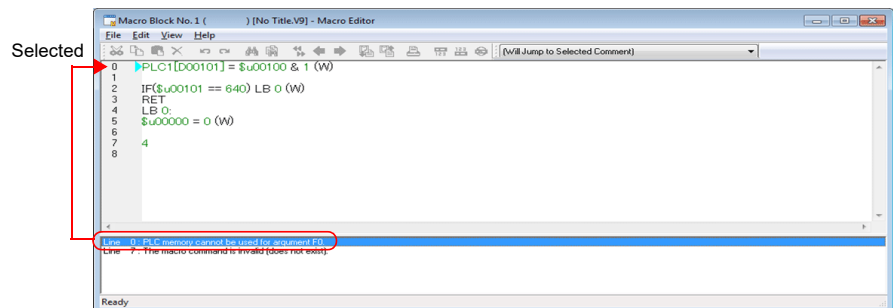

3. Correct the error as needed in the message. Once finished, the message disappears.

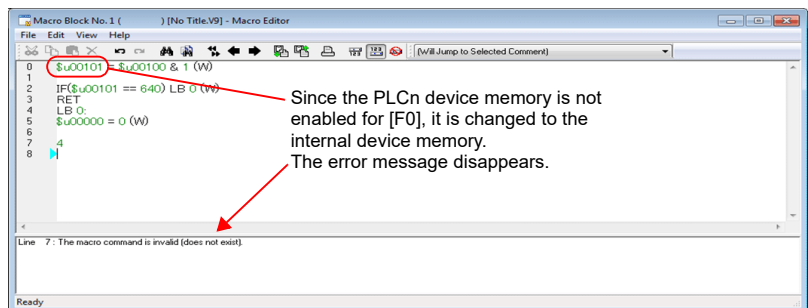

## 2.2 Available Device Memory

### 2.2.1 Device Memory Types

The following device memory types can be used with macros:

Device Memory		Setting Range	Remarks	
Internal device memory	\$u	\$u00000 - \$u65535		
	\$s	\$s00000 - \$s2047		
	\$L	Depends on the setting *1		
	\$LD	Depends on the setting *1		
	\$T	\$T00000 - \$T1023		
	\$P n : *2	\$Pn:000 - \$Pn:511		
	\$M	\$M00000 - \$M2047		
	\$MC	\$MC00000 - \$MC2047		
	\$C	\$C00000 - \$C4095		
	\$R *3	\$R00000 - \$R65535		
	Indirect device memory designation	For more information, refer to page 2-21.	\$u/\$T/\$M only usable	
Memory card	[File No.: Record No.] #address	[0:0] #0000 - [15:4094] #4095		
PLCn device memory	PLC n [xxxx] *2*4	(Example) PLC1 [D100]	1:1 communication	
	PLCn [Port number: xxxx] *2*4	(Example) PLC1 [1:D100]	1:n communication	
Constant	DEC	WORD	0U - 65535U	Add "U" to the extreme right position.
		DWORD	0U - 4294967295U	
	DEC-	WORD	-32768 - 32767	
		DWORD	-2147483648 - 2147483647	
	OCT	WORD	0o - 177777o	Add "o" to the extreme right position. (lower-case "o")
		DWORD	0o - 3777777777o	
	HEX	WORD	0000H - FFFFH	Add "H" to the extreme right position.
		DWORD	00000000H - FFFFFFFFH	
FLOAT	DWORD	-3.402823E+38 - -1.401298E-45 0 1.401298E-45 - 3.402823E+38		

\*1 The available range varies depending on the settings set on the [SRAM/Clock Setting] dialog.

\*2 For "n", set the number of the connected device (1 to 8).

\*3 [Allow use of recipe temporary device memory \$R] under [System Setting] → [Unit Setting] → [General Setting] must be checked. \$R is used in the recipe function.

\*4 The designation of [xxxx] varies depending on the type of the connected device. For more information, refer to the available device memory list in the V9 Series Connection Manual or the X1 Series Connection Manual.

## 2.2.2 Indirect Device Memory Designation

Each device memory address can be indirectly designated.  
The designation procedure varies depending on the device memory type and addresses.

### Internal Device Memory, PLC (1 - 8) Device Memory

- Addresses 0 - 65535:

	15	MSB	8	7	LSB	0
n+0	Model		Device memory type			
n+1	Device memory No. (address)					
n+2	Expansion code		Bit designation			
n+3	00		Station number			

- Addresses 65536 and above:

	15	MSB	8	7	LSB	0
n+0	Model		Device memory type			
n+1	Device memory No. (address) lower-order					
n+2	Device memory No. (address) higher-order					
n+3	Expansion code		Bit designation			
n+4	00		Station number			

- Model, device memory type (hexadecimal)

Device memory		Model	Device memory type	
Internal device memory	\$u	00	00	
	\$s		01	
	\$L	0 - 65535	00	02
		65536 -		
	\$LD	0 - 65535	00	03
		65536 -		
	\$T	00	04	
	\$Pn* <sup>1</sup>	00	05	
	\$M	00	06	
	\$MC	00	07	
\$C	00	08		
\$R	00	09		
PLC1 device memory	0 - 65535	01/11* <sup>3</sup>	The device memory type depends on the device memory used. Refer to the V9 Series Connection Manual or the X1 Series Connection Manual and set the type number of the device memory.	
	65536 -	81/91* <sup>2</sup> * <sup>3</sup>		
PLC2 device memory	0 - 65535	03/12* <sup>2</sup>		
	65536 -	83/92* <sup>2</sup> * <sup>3</sup>		
PLC3 device memory	0 - 65535	13		
	65536 -	93* <sup>2</sup>		
PLC4 device memory	0 - 65535	14		
	65536 -	94* <sup>2</sup>		
PLC5 device memory	0 - 65535	15		
	65536 -	95* <sup>2</sup>		
PLC6 device memory	0 - 65535	16		
	65536 -	96* <sup>2</sup>		
PLC7 device memory	0 - 65535	17		
	65536 -	97* <sup>2</sup>		
PLC8 device memory	0 - 65535	18		
	65536 -	98* <sup>2</sup>		

\*1 "n" treated as an expansion code

\*2 0 to 65535 also can be accessed. Specify "0" for "n + 2" which is the Device memory No. (address) higher-order.

\*3 The memory will work when specified with either model.

- Expansion code  
An expansion code should be designated, depending on the type of memory in use. For more information, refer to the description of indirect device memory designation relevant to the target device memory type in the V9 Series Connection Manual or the X1 Series Connection Manual.

Ex.: Mitsubishi Electric SPU device memory

Unit No. 0: 00

Unit No. 1: 01

- Station number
  - 1 : 1 or multi-link: Not used
  - 1 : n (multi-drop): Set the station number of the connected device.

## Memory card

---

	15	MSB	8	7	LSB	0
n+0	02H			File No.		
n+1	Word address in the record					
n+2	Record No.					

- File number, word address in the record, record number  
Refer to the memory card map in the V9 Series Memory Card Mode Conversion Manual.

## Example

---

- When accessing a word in the PLCn memory, "0" is specified for the "n + 2" word even in the case of device memory that does not use an expansion code.

Ex.: Accessing D165 in a Mitsubishi PLC (PLC1)

(Macro)

\$u100 = 0100H (W)      Model: 01 (PLC1 memory) Memory type: 00

\$u101 = 0165 (W)      Device memory No.: 165

\$u102 = 0000 (W)      Expansion code: None

\$u200 = \*\$u100 (W)

(Result of execution)

Data at D165 is transferred to \$u200.

- When accessing the bit-writable device memory, such as the Mitsubishi M Relay, the following setting is necessary.

Device memory number = M (address)/16

Ex.: Accessing M20

(Macro)

\$u100 = 0106H (W)      Model: 01 (PLC1 device memory) Device memory type: 06

\$u101 = 0001H (W)      Device memory No. = 20 ÷ 16 = 1...4

\$u102 = 0004H (W)      Expansion code: None Bit designation: 4

\*\$u100 (ON)

(Result of execution)

The bit of M20 is set (ON).

## 2.3 CSV Format Setting (with Recipe or Sampling Macro Used)

Format settings are required for handling CSV files. Register data formats of CSV files in [Format Setting]. MONITOUCH will read/write the CSV files in accordance with these format settings.

### 2.3.1 Applicable Macros


Function	Macro	CSV File Name	Setting Location	Refer to:
Recipe	LD_RECIPE	RECxxxx.CSV 0000 - 9999 (Designation of a number)	[Recipe] → [File Format]	page 4-179
	LD_RECIPE2			page 4-182
	LD_RECIPESEL			page 4-184
	LD_RECIPESEL2			page 4-187
	SV_RECIPE			page 4-191
	SV_RECIPE2			page 4-193
	SV_RECIPESEL			page 4-195
	SV_RECIPESEL2			page 4-198
	RD_RECIPE_FILE	xxxxxxx.CSV 8 one-byte upper-case alphanumeric characters or less (Designation of a name)		page 4-202
	RD_RECIPE_LINE			page 4-204
	RD_RECIPE_COLUMN			page 4-207
	WR_RECIPE_FILE			page 4-210
	WR_RECIPE_LINE			page 4-212
	WR_RECIPE_COLUMN			page 4-214
Sampling	SMPL_CSV	xxxxxxx.CSV Designation of a file name by the editor	<ul style="list-style-type: none"> <li>Alarm server [Alarm Block] → [Format Setting]</li> <li>Logging Server [Logging Block] → [Format Setting]</li> </ul>	page 4-220
	SMPL_CSV2	xxxxxxx.CSV Designation of a file name by the device memory		page 4-223
	SMPLCSV_BAK	xxxxxxx_YYYYMMDDHHMMSS.CSV Designation of a file name by the editor After _: Output time in year, month, day, hour, minute, and second		page 4-227
	SMPLCSV_BAK2	xxxxxxx_YYYYMMDDHHMMSS.CSV Designation of a file name by the device memory After _: Output time in year, month, day, hour, minute, and second		page 4-229




## 2.3.2 Recipe

### Setting procedure


1. Select [System Setting] → [Recipe], and specify a recipe number.  
The [Recipe Edit] window is displayed.

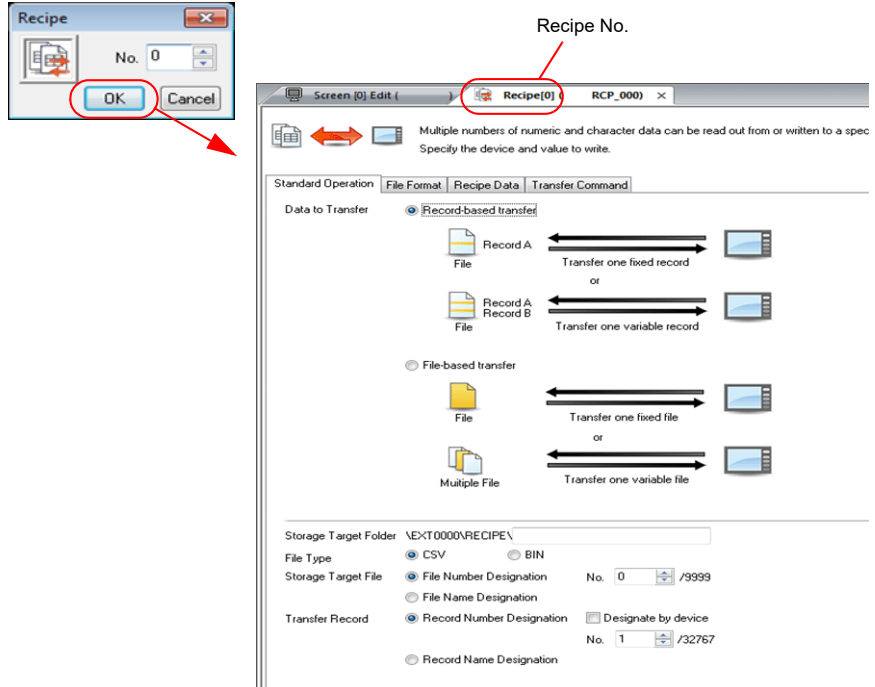

2. In the [File Format] tab window, set and change settings of the selected recipe number.

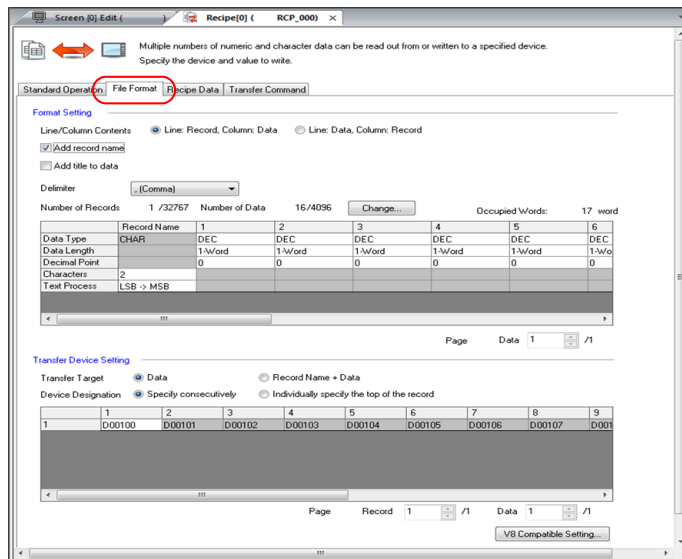

Setting details

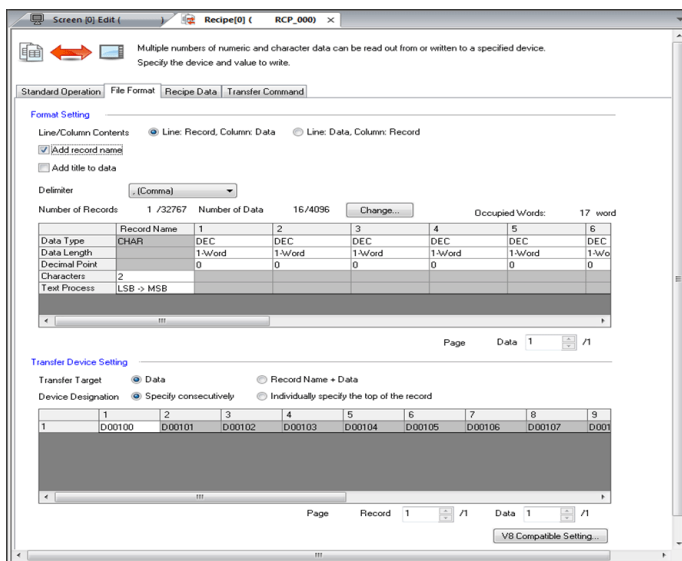

Format Setting	Line/Column Contents	<p>Select an option according to the CSV file.</p> <ul style="list-style-type: none"> <li>[Line: Record, Column: Data]</li> </ul> <p>CSV file</p> <p>Columns are in the same format.</p> <table border="1"> <tr> <td></td> <td></td> <td>DEC</td> <td>CHAR</td> <td>DEC</td> </tr> <tr> <td>Record</td> <td>Line A</td> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td></td> <td>Line B</td> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td></td> <td>Line C</td> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td></td> <td>Line D</td> <td>4</td> <td>D</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td>Data</td> <td></td> <td></td> </tr> </table>			DEC	CHAR	DEC	Record	Line A	1	A	100		Line B	2	B	200		Line C	3	C	300		Line D	4	D	400			Data		
				DEC	CHAR	DEC																										
Record	Line A	1	A	100																												
	Line B	2	B	200																												
	Line C	3	C	300																												
	Line D	4	D	400																												
		Data																														
<ul style="list-style-type: none"> <li>[Line: Data, Column: Record]</li> </ul> <p>CSV file</p> <p>Lines are in the same format.</p> <table border="1"> <tr> <td></td> <td>Record</td> <td>Line A</td> <td>Line B</td> <td>Line C</td> <td>Line D</td> <td></td> </tr> <tr> <td>DEC</td> <td>→</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>Data</td> </tr> <tr> <td>CHAR</td> <td>→</td> <td>A</td> <td>B</td> <td>C</td> <td>D</td> <td></td> </tr> <tr> <td>DEC</td> <td>→</td> <td>100</td> <td>200</td> <td>300</td> <td>400</td> <td></td> </tr> </table>		Record	Line A	Line B	Line C	Line D		DEC	→	1	2	3	4	Data	CHAR	→	A	B	C	D		DEC	→	100	200	300	400					
	Record	Line A	Line B	Line C	Line D																											
DEC	→	1	2	3	4	Data																										
CHAR	→	A	B	C	D																											
DEC	→	100	200	300	400																											

Format Setting	Add record name *1	<p>Set how to treat the first column in the CSV file.</p> <ul style="list-style-type: none"> <li>• Unchecked The first column in the CSV file is treated as data.</li> </ul> <p>CSV file</p> <table border="1"> <tr><td>6000</td><td>15</td><td>200</td><td></td></tr> <tr><td>6100</td><td>15</td><td>201</td><td></td></tr> <tr><td>6200</td><td>20</td><td>202</td><td></td></tr> <tr><td>6300</td><td>20</td><td>203</td><td></td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table> <p>Display on MONITOUCH</p> <table border="1"> <tr><td>..\</td><td>#1</td><td>#2</td><td>#3</td></tr> <tr><td>#1</td><td>6000</td><td>15</td><td>200</td></tr> <tr><td>#2</td><td>6100</td><td>15</td><td>201</td></tr> <tr><td>#3</td><td>6200</td><td>20</td><td>202</td></tr> <tr><td>#4</td><td>6300</td><td>20</td><td>203</td></tr> </table> <ul style="list-style-type: none"> <li>• Checked The first column in the CSV file is treated as a record name.</li> </ul> <p>CSV file</p> <table border="1"> <tr><td>ITEM1</td><td>6000</td><td>15</td><td>200</td></tr> <tr><td>ITEM2</td><td>6100</td><td>15</td><td>201</td></tr> <tr><td>ITEM3</td><td>6200</td><td>20</td><td>202</td></tr> <tr><td>ITEM4</td><td>6300</td><td>20</td><td>203</td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table> <p>Display on MONITOUCH</p> <table border="1"> <tr><td>..\</td><td>#1</td><td>#2</td><td>#3</td></tr> <tr><td>ITEM1</td><td>6000</td><td>15</td><td>200</td></tr> <tr><td>ITEM2</td><td>6100</td><td>15</td><td>201</td></tr> <tr><td>ITEM3</td><td>6200</td><td>20</td><td>202</td></tr> <tr><td>ITEM4</td><td>6300</td><td>20</td><td>203</td></tr> </table>	6000	15	200		6100	15	201		6200	20	202		6300	20	203						..\	#1	#2	#3	#1	6000	15	200	#2	6100	15	201	#3	6200	20	202	#4	6300	20	203	ITEM1	6000	15	200	ITEM2	6100	15	201	ITEM3	6200	20	202	ITEM4	6300	20	203					..\	#1	#2	#3	ITEM1	6000	15	200	ITEM2	6100	15	201	ITEM3	6200	20	202	ITEM4	6300	20	203
	6000	15	200																																																																															
	6100	15	201																																																																															
	6200	20	202																																																																															
6300	20	203																																																																																
..\	#1	#2	#3																																																																															
#1	6000	15	200																																																																															
#2	6100	15	201																																																																															
#3	6200	20	202																																																																															
#4	6300	20	203																																																																															
ITEM1	6000	15	200																																																																															
ITEM2	6100	15	201																																																																															
ITEM3	6200	20	202																																																																															
ITEM4	6300	20	203																																																																															
..\	#1	#2	#3																																																																															
ITEM1	6000	15	200																																																																															
ITEM2	6100	15	201																																																																															
ITEM3	6200	20	202																																																																															
ITEM4	6300	20	203																																																																															
Add title to data *1	<p>Set how to treat the first line in the CSV file.</p> <ul style="list-style-type: none"> <li>• Unchecked The first line in the CSV file is treated as data.</li> </ul> <p>CSV file</p> <table border="1"> <tr><td>6000</td><td>15</td><td>200</td><td></td></tr> <tr><td>6100</td><td>15</td><td>201</td><td></td></tr> <tr><td>6200</td><td>20</td><td>202</td><td></td></tr> <tr><td>6300</td><td>20</td><td>203</td><td></td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table> <p>Display on MONITOUCH</p> <table border="1"> <tr><td>..\</td><td>#1</td><td>#2</td><td>#3</td></tr> <tr><td>#1</td><td>6000</td><td>15</td><td>200</td></tr> <tr><td>#2</td><td>6100</td><td>15</td><td>201</td></tr> <tr><td>#3</td><td>6200</td><td>20</td><td>202</td></tr> <tr><td>#4</td><td>6300</td><td>20</td><td>203</td></tr> </table> <ul style="list-style-type: none"> <li>• Checked The first line in the CSV file is treated as title.</li> </ul> <p>CSV file</p> <table border="1"> <tr><td>Title1</td><td>Title2</td><td>Title3</td><td></td></tr> <tr><td>6000</td><td>15</td><td>200</td><td></td></tr> <tr><td>6100</td><td>15</td><td>201</td><td></td></tr> <tr><td>6200</td><td>20</td><td>202</td><td></td></tr> <tr><td>6300</td><td>20</td><td>203</td><td></td></tr> </table> <p>Display on MONITOUCH</p> <table border="1"> <tr><td>..\</td><td>Title1</td><td>Title2</td><td>Title3</td></tr> <tr><td>#1</td><td>6000</td><td>15</td><td>200</td></tr> <tr><td>#2</td><td>6100</td><td>15</td><td>201</td></tr> <tr><td>#3</td><td>6200</td><td>20</td><td>202</td></tr> <tr><td>#4</td><td>6300</td><td>20</td><td>203</td></tr> </table>	6000	15	200		6100	15	201		6200	20	202		6300	20	203						..\	#1	#2	#3	#1	6000	15	200	#2	6100	15	201	#3	6200	20	202	#4	6300	20	203	Title1	Title2	Title3		6000	15	200		6100	15	201		6200	20	202		6300	20	203		..\	Title1	Title2	Title3	#1	6000	15	200	#2	6100	15	201	#3	6200	20	202	#4	6300	20	203	
6000	15	200																																																																																
6100	15	201																																																																																
6200	20	202																																																																																
6300	20	203																																																																																
..\	#1	#2	#3																																																																															
#1	6000	15	200																																																																															
#2	6100	15	201																																																																															
#3	6200	20	202																																																																															
#4	6300	20	203																																																																															
Title1	Title2	Title3																																																																																
6000	15	200																																																																																
6100	15	201																																																																																
6200	20	202																																																																																
6300	20	203																																																																																
..\	Title1	Title2	Title3																																																																															
#1	6000	15	200																																																																															
#2	6100	15	201																																																																															
#3	6200	20	202																																																																															
#4	6300	20	203																																																																															
Delimiter	<p>Select a delimiter used in the CSV file. , (comma) / &lt;tab&gt; (tab) / . (period) * When "." (period) is selected, a comma is used for a decimal point.</p>																																																																																	
Number of Records	<p>Set this option when transferring data on a file-by-file basis. Specify the number of records to contain in one file.</p>																																																																																	
Number of Data (1 - 4096)	<p>Specify the number of data to contain in one record. * The column of record names is not counted.</p>																																																																																	
Occupied Words (1 - 65535)	<p>The number of words used is automatically calculated.</p> <ul style="list-style-type: none"> <li>• When transferring data on a record-by-record basis: Total number of words in one record</li> <li>• When transferring data on a file-by-file basis: Total number of words in one file</li> </ul>																																																																																	

Format Setting	Data Type	<p>Specify the data format in the CSV file.</p> <ul style="list-style-type: none"> <li>Record Name This option is enabled when [Add record name] is checked. Specify the number of characters and the order of text processing for a record name.</li> <li>1 - Specify the data format.             <ul style="list-style-type: none"> <li>Data Type: DEC, DEC-, HEX, OCT, BIN, CHAR, BCD, FLOAT</li> <li>Data Length: 1-Word, 2-Word</li> <li>Decimal Point: 0 - 32</li> <li>Characters: 2 - 255</li> <li>Text Process: LSB → MSB, MSB → LSB</li> </ul> </li> </ul>
Transfer Device Setting	Transfer Target	<p>This option is enabled when [Add record name] is checked.</p> <ul style="list-style-type: none"> <li>[Data] Only data is transferred.</li> <li>[Record Name + Data] Both record name and data are transferred.</li> </ul>

\*1 When both title and record name are used:

CSV file


-	Title1	Title2	Title3
ITEM1	6000	15	200
ITEM2	6100	15	201
ITEM3	6200	20	202
ITEM4	6300	20	203

Display on MONITOUCH

..\	Title1	Title2	Title3
ITEM1	6000	15	200
ITEM2	6100	15	201
ITEM3	6200	20	202
ITEM4	6300	20	203

### V8-compatible settings

When using a recipe macro, the following settings are necessary:

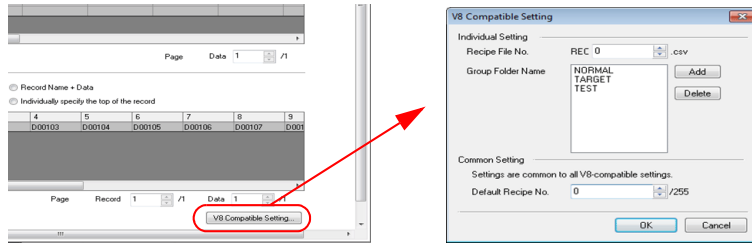

Individual Setting	Recipe File No.	Specify a number when using a LD_RECIPE, LD_RECIPESSEL, SV_RECIPE, or SV_RECIPESSEL macro. Set the CSV file number (REC0000.CSV to REC9999.CSV) that corresponds to the format of the recipe setting.  Location of the CSV file Storage \ (access folder) \ RECIPE folder
	Group Folder Name (8 one-byte upper-case alphanumeric characters or less)	Set a group folder name when executing a recipe macro by randomly specifying CSV file names. <ul style="list-style-type: none"> <li>[Add] Creates a group folder in which CSV files are to be stored. The folder name can be changed as desired.</li> <li>[Delete] Deletes a group folder.</li> </ul> <p>* All CSV files contained in the group folder use the same format settings.</p>
Common Setting	Default Recipe No.	This is common to all recipe settings. Format settings of the default recipe number take effect in the following cases: <ul style="list-style-type: none"> <li>There is no recipe setting that corresponds to the file named "RECxxx.csv".</li> <li>A group folder that does not exist in the recipe setting is added to the storage via Explore.</li> <li>[System Setting] → [Unit Setting] → [General Setting] → [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked.</li> </ul>


- Relationship between the recipe setting and the CSV file

- Recipe setting

Recipe No.	Group Folders
Recipe [0]	NORMAL TARGET TEST
Recipe [1]	

Default Recipe No. 1 = Recipe [1]


- Storage

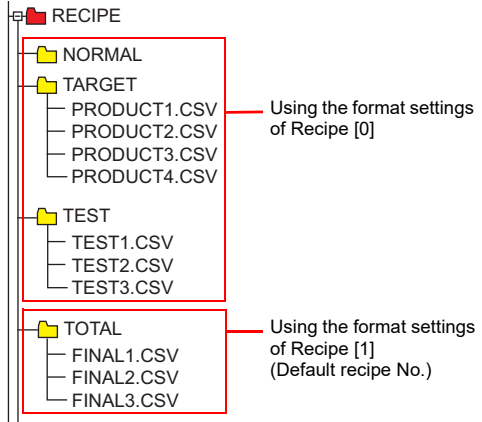

## CSV File Name and Storage Target

Depending on the name of a CSV file, its location and file designation vary. Create a file according to your purpose.

File name	Store target
RECxxx.CSV 0000 - 9999	Access folder\RECIPE\ See the following:
xxxxxxx.CSV 8 one-byte upper-case alphanumeric characters or less	Access folder\RECIPE\ <u>(group folder)\</u> 8 one-byte upper-case alphanumeric characters or less See the following:

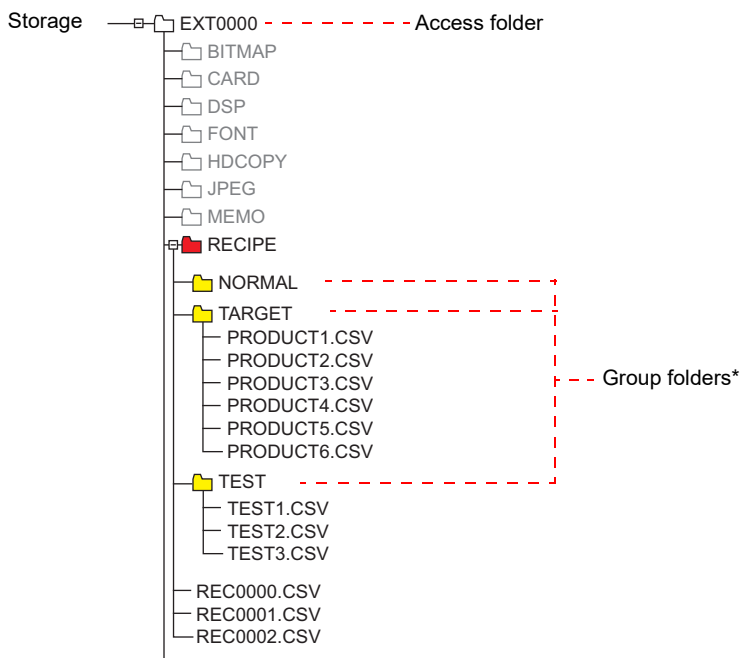

\* Group folders are defined in [Format Setting] → [V8 Compatible Setting]. They are automatically created when MONITOUCH recognizes the storage.

## Total Number of CSV Files


The number of group folders and CSV files that can be handled by a recipe item (V8 compatible) is limited.

- The total of group folders and CSV files in the RECIPE folder: 1,024 maximum
- The number of CSV files in a group folder: 1,024 maximum

Folders and files larger than 1024 are not recognized by the recipe item.

- \* When access to CSV files is made by a macro command, this limitation is not imposed.

The time for accessing increases proportionately with the number of files.

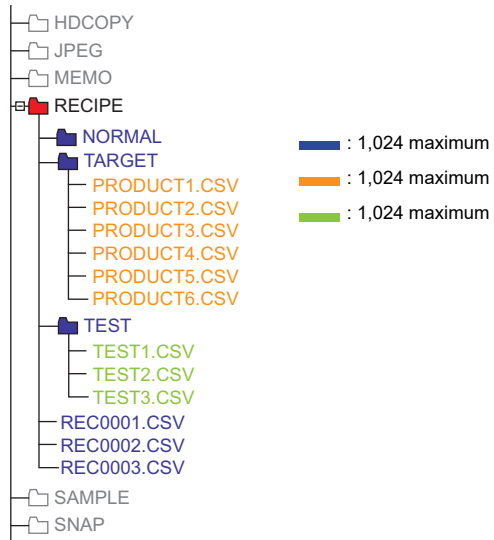

## Data in CSV File

- The number of words to be transferred  
A maximum of 4096 words can be read and written at one time by a recipe item or a macro. If you attempt to transfer data exceeding capacity, 4096 words are transferred, but extra words will not be transferred.

- Lines and columns  
The number of lines/columns to be handled varies, depending on the format setting.

	Line: Record, Column: Data	Line: Data, Column: Record <sup>*3</sup>
Number of lines	1 - 32767	1 - 4096 <sup>*2</sup>
Number of columns	1 - 4096 <sup>*1</sup>	1 - 4096

<sup>\*1</sup> The maximum number of words per column: 4,096 words

<sup>\*2</sup> The maximum number of words per line: 4,096 words

<sup>\*3</sup> File size: 1 MB or less


- Number of bytes for record  
64 bytes maximum per record  
\* This setting can be made in [Format Setting].
- Number of bytes for a title name  
64 bytes maximum per title

### 2.3.3 Sampling

#### Alarm Server


##### Setting procedure

1. Select [Alarm Server] → [Alarm Block].  
The [Alarm Block] window is displayed.
2. In the [Form Setting] tab window, double-click on the block number to be output in CSV format. The [Format] dialog appears.

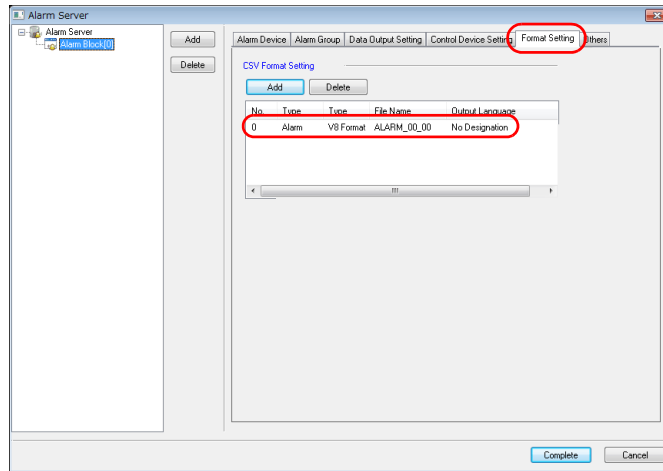

##### Setting details


- [Alarm]

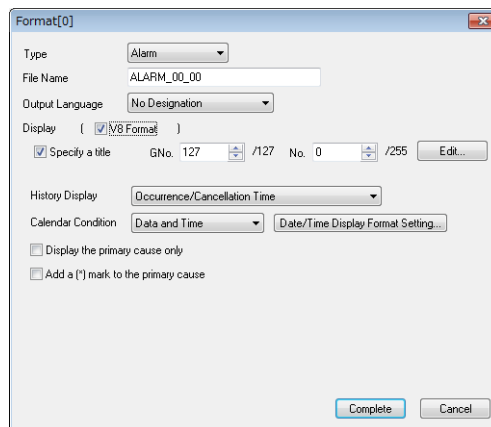

Specify a title	Specify a title to be added to the header in the CSV file.
History Display	Set the display order of alarm history.
Calendar Condition	Select a format of date display to be output in the CSV file.
Display the primary cause only	Only error messages of primary causes are output in the CSV file.
Add a (*) mark to the primary cause	Primary cause messages are output with (*) marks appended in the CSV file.



- [Event]

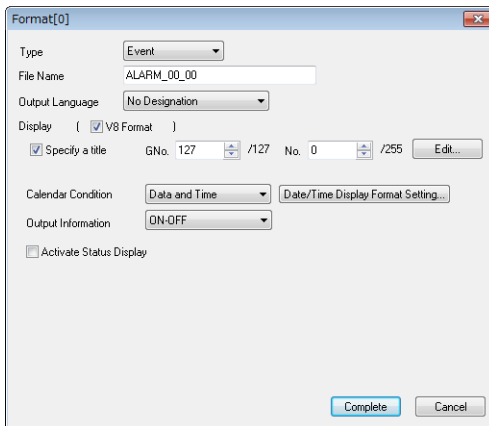


Specify a title	Specify a title to be added to the header in the CSV file.
Calendar Condition	Check this box to output the date in the CSV file.
Output Information	Select a status to output.
Activate Status Display	Select a format of status display to be output in the CSV file.


## Logging Server

### Setting procedure

1. Select [Logging Server] → [Logging Block].  
The [Logging Block] window is displayed.
2. In the [Form Setting] tab window, double-click on the block number to be output in CSV format. The [Format] dialog appears.

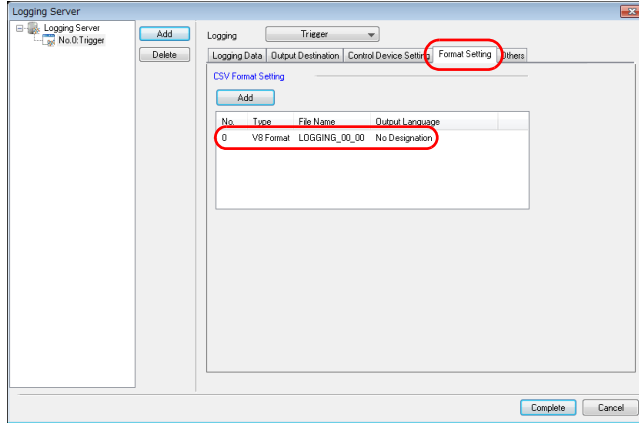

### Setting details

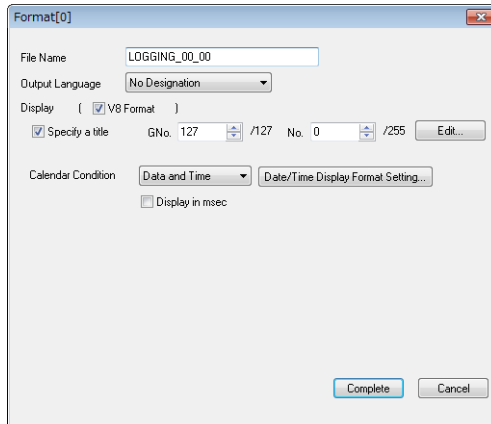


Specify a title	Specify a title to be added to the header in the CSV file.
Calendar Condition	Select a format of date display to be output in the CSV file.
Display in msec	Check this box to output the time data in the unit of msec in the CSV file.

## CSV File Name and Storage Target

### For "SMPL\_CSV"

File Name	Storage Target
(User-specified name).CSV * A maximum of 64 one-byte characters can be used as a user-specified name.	<ul style="list-style-type: none"> <li>Alarm server (access folder)\ALARM\</li> <li>Logging Server (access folder)\LOGGING\</li> </ul>


Example: Alarm server

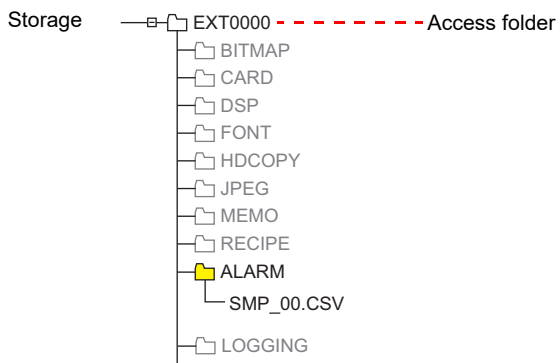

For “SMPLCSV\_BAK/SMPLCSV\_BAK2”

File Name	Storage Target
<p>(User-specified name)_YYYYMMDDHHMMSS.CSV</p> <p style="text-align: center;"> <span style="border-bottom: 1px solid red; display: inline-block; width: 100px;"></span>                      Output time in year, month,                      day, hour, minute, and second                 </p> <p>* A maximum of 64 one-byte characters can be used as a user-specified name.</p>	<ul style="list-style-type: none"> <li>Alarm server (access folder)\ALARM\(\year/month folder)\(year/month/day folder)</li> <li>Logging Server (access folder)\LOGGING\(\year/month folder)\(year/month/day folder)</li> </ul>

Example: Alarm server

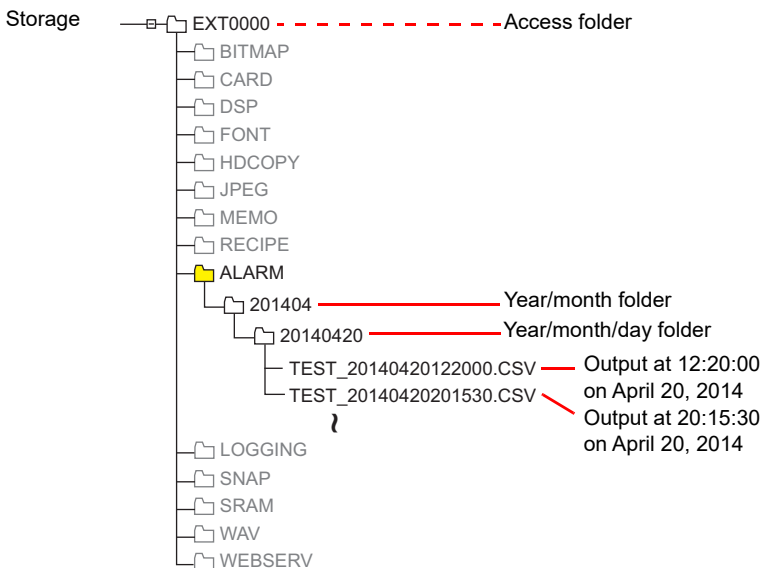



# 3 Command

---

## 3.1 Macro Command List



### 3.1 Macro Command List

Category	Command Name	Mnemonic	Contents	Refer to
Arithmetical Operation	ADD(+)	F0 = F1 + F2 (W) F0 = F1 + F2 (D)	Addition	page 4-2
	SUB(-)	F0 = F1 - F2 (W) F0 = F1 - F2 (D)	Subtraction	page 4-4
	MUL(X)	F0 = F1 F2 (W) F0 = F1 F2 (D)	Multiplication	page 4-6
	DIV(/)	F0 = F1 / F2 (W) F0 = F1 / F2 (D)	Division	page 4-8
	MOD(%)	F0 = F1 % F2 (W) F0 = F1 % F2 (D)	Remainder of division	page 4-9
Logical Operation	AND(&)	F0 = F1 & F2 (W) F0 = F1 & F2 (D)	Logical product	page 4-10
	OR( )	F0 = F1   F2 (W) F0 = F1   F2 (D)	Logical add	page 4-11
	XOR(^)	F0 = F1 ^ F2 (W) F0 = F1 ^ F2 (D)	Exclusive OR	page 4-12
	SHL(<<)	F0 = F1 << F2 (W) F0 = F1 << F2 (D)	Left shift	page 4-13
	SHR(>>)	F0 = F1 >> F2 (W) F0 = F1 >> F2 (D)	Right shift	page 4-14
Statistic	MAX	F0 = MAX (F1 C:F2) (W) F0 = MAX (F1 C:F2) (D)	Maximum	page 4-15
	MIN	F0 = MIN (F1 C:F2) (W) F0 = MIN (F1 C:F2) (D)	Minimum	page 4-16
	AVG	F0 = AVG (F1 C:F2) (W) F0 = AVG (F1 C:F2) (D)	Average	page 4-17
	SUM	F0 = SUM (F1 C:F2) (W) F0 = SUM (F1 C:F2) (D)	Sum	page 4-18
Mathematics/ trigonometric	EXP	F0 = EXP (F1) (F)	Exponent	page 4-19
	EXPT	F0 = EXPT (F1,F2) (F)	Powers	page 4-20
	LN	F0 = LN (F1) (F)	Natural logarithms	page 4-21
	LOG	F0 = LOG (F1) (F)	Common logarithms	page 4-22
	SQRT	F0 = SQRT (F1) (F)	Square roots	page 4-23
	ABS	F0 = ABS (F1) (W) F0 = ABS (F1) (D) F0 = ABS (F1) (F)	Absolute value	page 4-24
	NEG	F0 = NEG (F1) (W) F0 = NEG (F1) (D) F0 = NEG (F1) (F)	Sign inversion	page 4-25
	SIN	F0 = SIN (F1) (F)	Sine	page 4-26
	COS	F0 = COS (F1) (F)	Cosine	page 4-27
	TAN	F0 = TAN (F1) (F)	Tangent	page 4-28
	ASIN	F0 = ASIN (F1) (F)	Arcsine	page 4-29
	ACOS	F0 = ACOS (F1) (F)	Arccosine	page 4-30
	ATAN	F0 = ATAN (F1) (F)	Arctangent	page 4-31
	DEG	F0 = DEG (F1) (F)	Convert radians → degrees	page 4-32
RAD	F0 = RAD (F1) (F)	Convert degrees → radians	page 4-33	



Category	Command Name	Mnemonic	Contents	Refer to
Bit Operation	BSET	F0 (ON)	Bit set (ON)	page 4-34
	BCLR	F0 (OFF)	Bit reset (OFF)	page 4-35
	BINV	F0 (INV)	Bit inversion	page 4-36
Conversion	BCD	F0 = F1 BCD (W) F0 = F1 BCD (D)	Conversion to BCD	page 4-37
	BIN	F0 = F1 BIN (W) F0 = F1 BIN (D)	Conversion to BIN	page 4-38
	CWD	F0 = F1 D <- W	Convert one-word → double-word	page 4-39
	CVP	F0 = F1 PLC <- (W) F0 = F1 PLC <- (D)	Convert DEC → PLC1	page 4-40
	CVPFMT	F0 = F1 (W) PLC F2 <- F0 = F1 (D) PLC F2 <-	Convert DEC → PLCn	page 4-41
	CVB	F0 = F1 (W) <- PLC F0 = F1 (D) <- PLC	Convert PLC1 → DEC	page 4-42
	CVBFMT	F0 = F1 (W) <- PLC F2 F0 = F1 (D) <- PLC F2	Convert PLCn → DEC	page 4-43
	SWAP	F0 C:F1	Swap MSB with LSB	page 4-44
	CHR	F0 = ''	Convert text → code (PLC1 code fixed)	page 4-45
	STRING	F0 = '' (STRING)	Convert text → code	page 4-46
	CVFD	F0 (D) <- F1 (F) F2 (D)	Convert real number → BIN	page 4-47
	CVDF	F0 (F) <- F1 (D) F2 (D)	Convert BIN → real number	Page 4-49
	CLND_TO_GRE	CLND_TO_GRE F0 F1 F2	Convert calendar data → GMT- based UNIX time	page 4-51
	GRE_TO_CLND	GRE_TO_CLND F0 F1 F2	Convert GMT- based UNIX time → calendar data	page 4-53
	FORMAT_DATA	FORMAT_DATA F0 F1 F2	Convert string → numerical data	page 4-55
FORMAT_STR	FORMAT_STR F0 F1 F2	Convert numerical data → string	page 4-59	
Transfer	MOV	F0 = F1 (W) F0 = F1 (D)	Transfer	page 4-63
	BMOV	F0 = F1 C:F2 (BMOV) (W) F0 = F1 C:F2 (BMOV) (D)	Block transfer	page 4-64
	CVMOV	F0 = F1 C:F2 (CVMOV) (W) F0 = F1 C:F2 (CVMOV) (D)	(With data conversion) Block transfer	page 4-66
	CVSMOV	F0 = F1 C:F2 (CVSMOV) (W) F0 = F1 C:F2 (CVSMOV) (D)	(With text conversion) Block transfer	page 4-69
	FILL	F0 = F1 C:F2 (FILL)	Transfer all	page 4-71

Category	Command Name	Mnemonic	Contents	Refer to
Comparison	IF (CMP)	IF (F0 condition F1) LB F2 (W) IF (F0 condition F1) LB F2 (D)	Comparison	page 4-72
	IF (TST)	IF condition (F0 & F1) LB F2 (W) IF condition (F0 & F1) LB F2 (D)	Logical product comparison	page 4-74
	IF	IF (F0 condition F1) (W) IF (F0 condition F1) (D) IF (condition F0) (B) ELSE ENDIF	Conditional branch	page 4-75
	IF (MULTI) IFELSE (MUITI)	IF (F0 condition 1 F1) AND/OR... (F6 condition 4 F7) THEN (W) IF (F0 condition 1 F1) AND/OR... (F6 condition 4 F7) THEN (D) IFELSE (F0' condition 1 F1') AND/ OR... (F6' condition 4 F7') THEN (W) IFELSE (F0' condition 1 F1') AND/ OR... (F6' condition 4 F7') THEN (D) ELSE ENDIF	Multiple conditional branches	page 4-77
	SELECT_CASE	SELECT_CASE F0 (W) SELECT_CASE F0 (D) CASE condition F0 CASE_ELSE ENDSELECT	Multiple conditional branches (CASE statement)	page 4-80
Macro Operation Control	CALL	CALL F0	Macro block call	page 4-82
	JMP	JMP F0	Jump	page 4-84
	LABEL	LB F0:	Label	page 4-85
	FOR/NEXT	FOR F0 / NEXT	Loop between FOR and NEXT	page 4-86
	RET	RET	Finish macro processing	page 4-88
	SWRET	SWRET	Execute switch function	page 4-89
	EN_INT	EN_INT	Interruption enabled	page 4-90
FROM Backup	FROM_WR	FROM_WR F0 F1	Write to FROM	page 4-91
	FROM_RD	FROM_RD F0 F1	Read from FROM	page 4-92
Printer	MR_OUT	MR_OUT F0	Execute MR400 call setting	page 4-93
	MR_REG	MR_REG F0	Execute MR400 registration setting	page 4-94
	OUT_PR	OUT_PR F0 F1	Execute printer command	page 4-96
Video	VIDEO	Video MEMORY F1	Memory use	page 4-98
		Video SIZE F1	Size	page 4-105
		Video SIZE F1 F2	Size (dot)	page 4-106
		Video SEL_CH F1	Channel	page 4-107
		Video BRIGHT F1	Brightness	page 4-108
		Video CONTRAST F1	Contrast	page 4-109
		Video COLOR F1	Color intensity	page 4-110
		Video INF F1	Save settings/ reset to default	page 4-111

Category	Command Name	Mnemonic	Contents	Refer to
Video	VIDEO2	Video2 MEMORY F1	Device memory use	page 4-112
		Video2 SNAP F1 F2	Snapshot	page 4-134
		Video2 SNAP F1 F2 (SIZE)	Snapshot (SIZE)	page 4-136
		Video2 STROBE F1 F2	Strobe snapshot	page 4-138
		Video2 RE_SIZE	Resize	page 4-140
		Video2 ZOOM F1 F2	Zoom	page 4-141
		Video2 BRIGHT F1 F2	Brightness	page 4-142
		Video2 CONTRAST F1 F2	Contrast	page 4-143
		Video2 COLOR F1 F2	Color intensity	page 4-144
		Video2 VIDEOINF F1 F2	Save settings/ reset to default	page 4-145
		Video2 PAUSE F1	Pause playback	page 4-147
		Video2 RESTART F1	Pause cancel	page 4-148
		Video2 DELETE F1	Delete	page 4-149
		Video2 SNAP_SEQ F1 F2	Change continuous single snapshot	page 4-150
		Video2 CLIP_POS F1 F2 F3	Change the clip start position	page 4-152
		Video2 CLIP_SIZE F1 F2 F3	Change the image clip size	page 4-153
Video2 MODE F1 F2 F3	Change the operation mode	page 4-154		
USB Camera	USBCAM_REC	USBCAM_REC F0	Event recording function start/stop	page 4-155
	USBCAM	USBCAM_MEMORY F1	Device Memory Designation	page 4-156
		USBCAM_SNAP F1 F2	Single snapshot	page 4-158
PLC	PLC_CLND	PLC_CLND F0 PLC F1 F2 F3	Calendar control for PLCn	page 4-159
	PLC_CTL	PLC_CTRL PLC F0 F1 F2	PLCn control	page 4-161
	TBL_READ	TBL_READ F0 <- TABLE : PLC F1 : F2	Read from device memory map	page 4-163
	TBL_WRITE	TBL_WRITE TABLE : PLC F1 : F0 <- F2	Write to device memory map	page 4-164
Ethernet	SEND	SEND F0 C:F1 TO F2	Transfer on the network	page 4-165
	EREAD	EREAD F0 = F1 C:F2 F3	Read on the network	page 4-167
	EWRITE	EWRITE F0 F1 = F2 C:F3	Write on the network	page 4-168
MES	MES	MES CHECK F1 F2 F3	V-server start check	page 4-169
		MES WRITE F1 F2 F3	Add data to the database	page 4-179
		MES READ F1 F2 F3	Search the database	page 4-173
		MES DEL F1 F2 F3	Delete database records	page 4-175
		MES UPDATE F1 F2 F3	Update the database	page 4-177


Category	Command Name	Mnemonic	Contents	Refer to
Storage (Recipe)	LD_RECIPE	LD_RECIPE F0 F1	Read CSV file	page 4-179
	LD_RECIPE2	LD_RECIPE2 F0 F1 F2		page 4-182
	LD_RECIPESSEL	LD_RECIPESSEL F0 F1		page 4-184
	LD_RECIPESSEL2	LD_RECIPESSEL2 F0 F1 F2		page 4-187
	SV_RECIPE	SV_RECIPE F0 F1 F2	Save to CSV file	page 4-191
	SV_RECIPE2	SV_RECIPE2 F0 F1 F2 F3		page 4-193
	SV_RECIPESSEL	SV_RECIPESSEL F0 F1		page 4-195
	SV_RECIPESSEL2	SV_RECIPESSEL2 F0 F1 F2		page 4-198
	SET_RECIPFOLDER	SET_RECIPFOLDER F0	Folder designation	page 4-200
	RD_RECIPE_FILE	RD_RECIPE_FILE F0 F1	Read CSV file	page 4-202
	RD_RECIPE_LINE	RD_RECIPE_LINE F0 F1 F2 F3		page 4-204
	RD_RECIPE_COLUMN	RD_RECIPE_COLUMN F0 F1 F2 F3		page 4-207
	WR_RECIPE_FILE	WR_RECIPE_FILE F0 F1	Save to CSV file	page 4-210
	WR_RECIPE_LINE	WR_RECIPE_LINE F0 F1 F2 F3		page 4-212
	WR_RECIPE_COLUMN	WR_RECIPE_COLUMN F0 F1 F2 F3		page 4-214
GET_RECIPE_FILEINFO	GET_RECIPE_FILEINFO F0 F1 F2	CSV file information	page 4-216	
Storage (Sampling)	SMPL_BAK	SMPL_BAK F0	Save backup	page 4-218
	SMPL_CSV	SMPL_CSV F0	Create CSV file	page 4-220
	SMPL_CSV2	SMPL_CSV2 F0 F1	Create CSV file (file name designation)	page 4-223
	SMPL_SAVE	SMPL_SAVE	Save logging/ alarm data stored in SRAM	page 4-226
	SMPLCSV_BAK	SMPLCSV_BAK F0	Save backup (CSV file)	page 4-227
	SMPLCSV_BAK2	SMPLCSV_BAK2 F0 F1	Save backup (CSV file, file name designation)	page 4-229
Storage (Others)	HDCOPY	HDCOPY	Hardcopy	page 4-231
	HDCOPY2	HDCOPY2 F0	Hardcopy	page 4-232
	HDCOPY3	HDCOPY3 F0	Hardcopy (file name designation)	page 4-234
	SET_DRIVE	SET_DRIVE F0	Select drive	page 4-236
	COPY_FILE	COPY_FILE F0 F1	Copy file	page 4-238
	MOVE_FILE	MOVE_FILE F0 F1 F2	Move file	page 4-244
	DEL_FILE	DEL_FILE F0	Delete file	page 4-248
	READ_FILE	READ_FILE F0 F1 F2 F3	Read universal file	page 4-250
WRITE_FILE	WRITE_FILE F0 F1 F2	Write to universal file	page 4-252	

Category	Command Name	Mnemonic	Contents	Refer to	
Real No. Arithmetical Operation	F_ADD(+)	F0 = F1 + F2 (F)	Real number addition	page 4-254	
	F_SUB(-)	F0 = F1 - F2 (F)	Real number subtraction	page 4-255	
	F_MUL(X)	F0 = F1 × F2 (F)	Real number multiplication	page 4-256	
	F_DIV(/)	F0 = F1 / F2 (F)	Real number division	page 4-257	
Real No. Statistics	F_SUM	F0 = F_SUM (F1 C:F2) (F)	Sum of real number data	page 4-258	
	F_AVG	F0 = F_AVG (F1 C:F2) (F)	Average of real number data	page 4-259	
	F_MAX	F0 = F_MAX (F1 C:F2) (F)	Maximum of real number data	page 4-260	
	F_MIN	F0 = F_MIN (F1 C:F2) (F)	Minimum of real number data	page 4-261	
Others	;(Comment)	;	Comment	page 4-262	
	BRIGHT	BRIGHT F0	Brightness adjustment	page 4-263	
	GET_MSGBLK	GET_MSGBLK F0 F1	Message acquisition	page 4-264	
	PLC_ULR	PLC_ULR F0 F1	Read user log	page 4-265	
	RECONNECT	RECONNECT F0	Multi-drop reconnection (PLC1)	page 4-267	
	RECONNECT_EX	RECONNECT_EX PLC F0 F1	Restart	page 4-268	
	SAMPLE	SAMPLE F0 F1 F2	Acquire logging/ alarm data	page 4-269	
	SEARCH_FILE	SEARCH_FILE F0 F1	Search for JPEG files	page 4-273	
	ADJ_VOLUME	ADJ_VOLUME F0 F1 F2	Adjust volume	page 4-274	
	SAVE_VOLUME	SAVE_VOLUME	Save volume adjustment value	page 4-275	
	TREND REFRESH	TREND REFRESH F0 F1	Refresh trend data display	page 4-276	
	SYS		SYS (SET_SCRN) F1	Screen number designation	page 4-277
			SYS (SET_MOVL) F1	Multi-overlap/ global overlap setting	page 4-279
			SYS (OVL) F1	Overlap ON/OFF	page 4-282
			SYS (OVL_POS) F1	Overlap relocation	page 4-284
			SYS (GET_MSG) F1	Message acquisition	page 4-285
		SYS (GET_XY) F1	Acquisition of X and Y coordinates on circumference	page 4-287	
		SYS (SET_BZ) F1	Buzzer control	page 4-289	
		SYS (GET_TIME) F1	System time acquisition	page 4-290	
	SYS (STA_TIME) F1	Timer setting	page 4-291		

Category	Command Name	Mnemonic	Contents	Refer to
Others	SYS	SYS (GET_CLND) F1	Calendar acquisition	page 4-293
		SYS (SET_CLND) F1	Calendar setting	page 4-294
		SYS (SET_BUFNO) F1	Logging information	page 4-295
			Alarm log information	page 4-297
		SYS (GET_SMPL) F1	Acquire logging/ alarm data	page 4-298
		SYS (GET_SCUR) F1	Cursor point acquisition	page 4-301
		SYS (DSP_DATA) F1	Show/hide numerical data display	page 4-303
		SYS (CHG_DATA) F1	Change numerical data display property	page 4-304
		SYS (STA_LIST) F1	Data sheet print	page 4-306
		SYS (RGB_CHG) F1	Change RGB input parameter	page 4-309
		SYS (SET_RGB) F1	Switch from/to RGB input screen	page 4-310
			Snap/delete RGB input screen	page 4-311
			RGB input channel selection	page 4-313
		SYS (SET_BKLT) F1	Backlight control	page 4-314
		SYS (RESTART) F1	Restart	page 4-315
		SYS (CHG_LANG) F1	Language change	page 4-317
		SYS (RESET_SCRN) F1	Redisplay screen	page 4-319
		SYS (GET_STATUS_FL) F1	FL-net information acquisition	page 4-320
		SYS (OUT_ENQ) F1	Universal serial (interrupt)	page 4-321
			A-link + Net10	page 4-321
	SYS (OUT_ENQ_EX) F1	Universal serial (interrupt)	page 4-324	
	SYS (SET_SYS_CLND) F1	System calendar setting	page 4-326	
	HMI-FUNC	HMI-USERFUNC (F1 , " ")	DLL function execution	page 4-327
		HMI-LOADDLL (F1 , " ")	Load DLL	page 4-328
		HMI-SHUTDOWN	Computer shutdown	page 4-329
		HMI-USEREXE (" ")	Application file execution	page 4-330
		HMI-CLOSE	TELLUS termination	page 4-331

# MEMO

Please use this page freely.

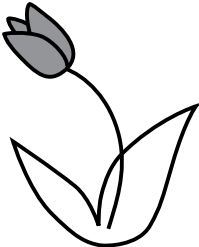

# 4 Details of Macro Commands

---

- 4.1 Guide to Chapter 4
- 4.2 Arithmetical Operation
- 4.3 Logical Operation
- 4.4 Statistic
- 4.5 Mathematics/trigonometric
- 4.6 Bit Operation
- 4.7 Conversion
- 4.8 Transfer
- 4.9 Comparison
- 4.10 Macro Operation Control
- 4.11 FROM Backup
- 4.12 Printer
- 4.13 Video
- 4.14 USB Camera
- 4.15 PLC
- 4.16 Ethernet
- 4.17 MES
- 4.18 Storage (Recipe)
- 4.19 Storage (Sampling)
- 4.20 Storage (Others)
- 4.21 Real No. Arithmetical Operation
- 4.22 Real No. Statistics
- 4.23 Others





# 4.1 Guide to Chapter 4

Bit Operation

Command Name

**BCLR**

Mnemonic

**F0 (OFF)**

Applicable model \*1

All models

**Function: Bit reset**  
This macro command is used to reset (OFF) the memory bit specified in [F0].

F0 

1
---

 $\xrightarrow{\text{BCLR}}$ 

0
---

Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
⊙ : Setting enabled (indirect designation enabled)

Types of device memory usable for the command and how to designate them  
For more information on the types of device memory, refer to page 2-20.  
For more information on the indirect memory designation, refer to page 2-21.

Example

- \$u100 - 08 (OFF)

15	08	0																			
\$u100	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> </table>		0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0			
	<p style="margin: 0;">BCLR ↓</p> <table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></tr> </table>		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			

Example of command execution

Notes on the command

**Supplemental remarks**

- If you use PLC memory or temperature controller memory that is disabled for bit-by-bit read and write, the macro operation as the following takes place.  
Ex.) Mitsubishi PLC D100-05 (OFF)
  - One word that specifies the bit is read.
  - The bit specified by the above one word is reset (OFF).
  - The data is written to the PLC.

D100 0021 HEX

1. ↓

15	5	0																
<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td></tr> </table>			0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	1
0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	1			
	<p style="margin: 0;">BCLR ↓</p> <table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>1</td></tr> </table>		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1			

3. ↓

D100 0001 HEX

\* If the bit is changed in a sequence program during processing of step 2, step 3 for data writing is performed.

- The result of macro execution is stored in \$S72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

\*1 Refer to "V9 / X1 Series / TELLUS Ver. 4 Models" in this manual.

## 4.2 Arithmetical Operation

### ADD(+)


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 + F2 (W)..... WORD**

**F0 = F1 + F2 (D)..... DWORD**

#### Function: Addition

This macro command is used to write the result of [F1] plus [F2] to [F0].



#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙	⊙		○
F2	⊙	⊙		○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range


	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)
F1		
F2		

#### Example

- \$u100 = \$u200 + \$u300 (W)



- \$u100 = \$u200 + \$u300 (D)



**Supplemental remarks**

- Operation is performed in the decimal system with signs. Be sure that the result [F0] falls within the permissible range.

$$\text{\$u100} = \text{\$u200} + \text{\$u300} \text{ (W)}$$

\u200	DEC-	30000	HEX 7530 + 1388 <hr style="border: 0; border-top: 1px solid black;"/> 88B8  8000 - FFFF are negative in the decimal system with signs.
+	\u300	+ 5000	
+	\u100	-30536	
		<b>NG</b>	

\* The execution result in the example above is an overflow.

If an operation results in "65535" in the decimal system (WORD) or less, it matches the result in the decimal system without signs.

\u200	DEC	30000	HEX 7530 + 1388 <hr style="border: 0; border-top: 1px solid black;"/> 88B8  8000 - FFFF are positive in the decimal system without signs.
+	\u300	+ 5000	
+	\u100	35000	
		<b>OK</b>	

\* The execution result in the example above is an overflow.

- In a case where [F1] and [F2] are specified in the following ranges, they are treated as negative values -1 to -32768.
  - 32768 - 65535 (DEC)
  - 100000 - 17777 (OCT)
  - 8000 - FFFF (HEX)
- The result of macro execution is stored in \$s1056. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error


**SUB(-)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 - F2 (W) ..... WORD**  
**F0 = F1 - F2 (D) ..... DWORD**

**Function: Subtraction**

This macro command is used to write the result of [F1] minus [F2] to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙	⊙		○
F2	⊙	⊙		○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)
F1		
F2		

**Example**

- \$u100 = \$u200 - \$u300 (W)




- \$u100 = \$u200 - \$u300 (D)



**Supplemental remarks**

- Operation is performed in the decimal system with signs. Be sure that the result [F0] falls within the permissible range.

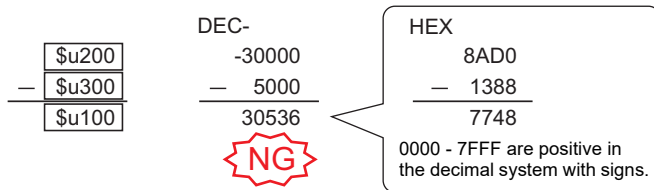

\* The execution result in the example above is an underflow.

- In a case where [F1] and [F2] are specified in the following ranges, they are treated as negative values -1 to -32768.  
32768 - 65535 (DEC)  
100000 - 177777 (OCT)  
8000 - FFFF (HEX)
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error


**MUL(X)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 x F2 (W)..... WORD**  
**F0 = F1 x F2 (D)..... DWORD**

**Function: Multiplication**

This macro command is used to write the result of [F1] multiplied by [F2] to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙	⊙		○
F2	⊙	⊙		○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)
F1		
F2		

**Example**

- \$u100 = \$u200 x \$u300 (W)



- \$u100 = \$u200 x \$u300 (D)



**Supplemental remarks**

- Operation is performed in the decimal system with signs. Be sure that the result [F0] falls within the permissible range.

\$u200	×	\$u300	\$u100

DEC-

30000	
×	2
-5536	

NG

HEX

7530	
×	0002
EA60	

8000 - FFFF are negative in the decimal system with signs.

\* The execution result in the example above is an overflow.

If an operation results in "65535" (WORD) or less, it matches the result in the decimal system without signs.

\$u200	×	\$u300	\$u100

DEC

30000	
×	2
60000	

OK

HEX

7530	
×	0002
EA60	

8000 - FFFF are positive in the decimal system without signs.

\* The execution result in the example above is an overflow.

- If the result [F0] is outside the permissible range, the extra portion is truncated.

\$u200	×	\$u300	\$u100

DEC-

30000	
×	3
24464	

NG

HEX

7530	
×	0003
15F90	
↓	Portion outside the range truncated
_5F90	

\* The execution result in the example above is

In this case, operation is performed in DWORD.

\$u201	\$u200	×	\$u301	\$u300	\$u101	\$u100

DEC-

30000	
×	3
90000	

- In a case where [F1] and [F2] are specified in the following ranges, they are treated as negative values -1 to -32768.  
 32768 - 65535 (DEC)  
 100000 - 17777 (OCT)  
 8000 - FFFF (HEX)
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error




**DIV(/)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 / F2 (W) ..... WORD**  
**F0 = F1 / F2 (D) ..... DWORD**

**Function: Division**

This macro command is used to write the result of [F1] divided by [F2] to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙	⊙		○
F2	⊙	⊙		○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)
F1		
F2		

**Example**

- \$u100 = \$u200 / \$u300 (W)



- \$u100 = \$u200 / \$u300 (D)



**Supplemental remarks**

- Operation is performed in the decimal system with signs. Be sure that the [F1] value falls within the permissible range.
- In a case where [F1] and [F2] are specified in the following ranges, they are treated as negative values -1 to -32768.  
 32768 - 65535 (DEC)  
 100000 - 17777 (OCT)  
 8000 - FFFF (HEX)
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
3	Calculation operation execution error
-1	Execution error


**MOD(%)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 % F2 (W).....WORD**  
**F0 = F1 % F2 (D).....DWORD**

**Function: Remainder of division**

This macro command is used to write the remainder of [F1] divided by [F2] to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙	⊙		○
F2	⊙	⊙		○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)
F1		
F2		

**Example**

- \$u100 = \$u200 % \$u300 (W)



- \$u100 = \$u200 % \$u300 (D)



**Supplemental remarks**

- Operation is performed in the decimal system with signs. Be sure that the [F1] value falls within the permissible range.
- In a case where [F1] and [F2] are specified in the following ranges, they are treated as negative values -1 to -32768.  
 32768 - 65535 (DEC)  
 100000 - 17777 (OCT)  
 8000 - FFFF (HEX)
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
3	Calculation operation execution error
-1	Execution error



### 4.3 Logical Operation

#### AND(&)


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 & F2 (W) ..... WORD**

**F0 = F1 & F2 (D) ..... DWORD**

**Function: Logical product**

This macro command is used to write the result of [F1] ANDed with [F2] bit by bit to [F0].

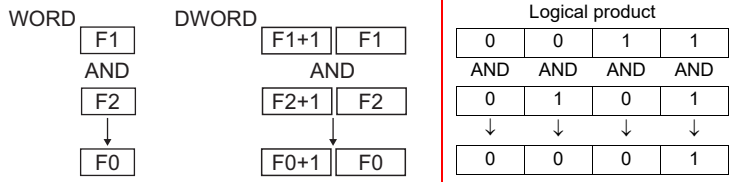

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		
F2		

**Example**

- \$u100 = \$u200 & \$u300 (W)

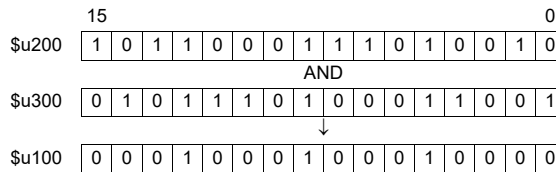

- \$u100 = \$u200 & \$u300 (D)

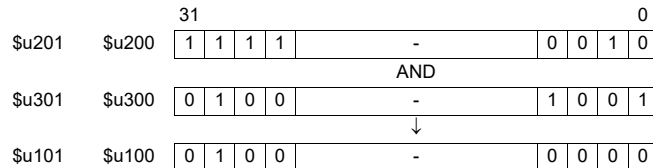

**Supplemental remarks**

- The result of macro execution is stored in \$s1056. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


**OR()**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 | F2 (W).....WORD**  
**F0 = F1 | F2 (D).....DWORD**

**Function: Logical add**

This macro command is used to write the result of [F1] ORed with [F2] bit by bit to [F0].

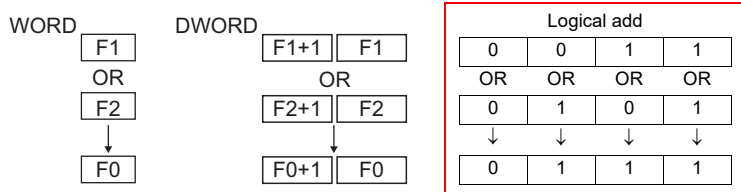

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		
F2		

**Example**

- \$u100 = \$u200 | \$u300 (W)

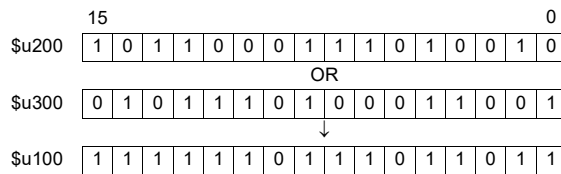

- \$u100 = \$u200 | \$u300 (D)

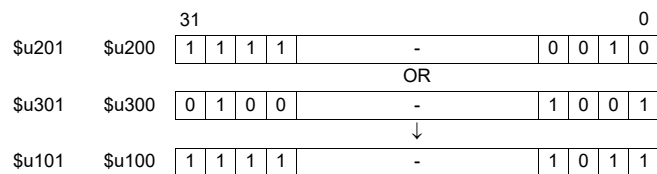

**Supplemental remarks**

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## XOR(^)


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 ^ F2 (W)..... WORD**

**F0 = F1 ^ F2 (D)..... DWORD**

### Function: Exclusive OR

This macro command is used to write the result of [F1] XORed with [F2] bit by bit to [F0].

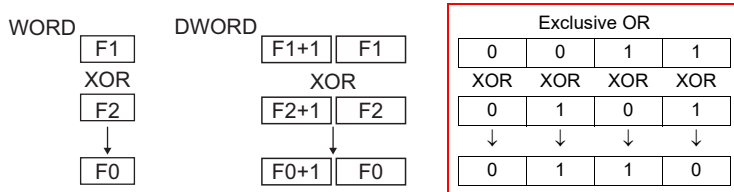

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)


⊙ : Setting enabled (indirect designation enabled)

### Setting range


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		
F2		

### Example

- \$u100 = \$u200 ^ \$u300 (W)

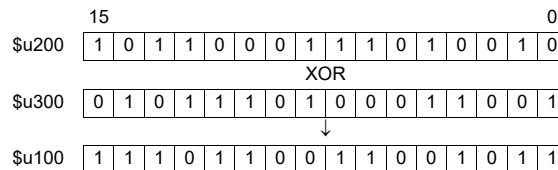

- \$u100 = \$u200 ^ \$u300 (D)

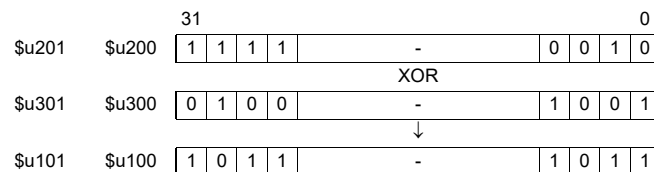

### Supplemental remarks

- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


**SHL(<<)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 << F2 (W) ..... WORD**  
**F0 = F1 << F2 (D) ..... DWORD**

**Function: Left shift**

This macro command is used to perform logical shift of [F1] to the left by the number of bits specified in [F2] and write the result to [F0]. The higher-order bits (by the number in [F2]) are truncated. "0" is assigned to the lower-order bits (by the number in [F2]).

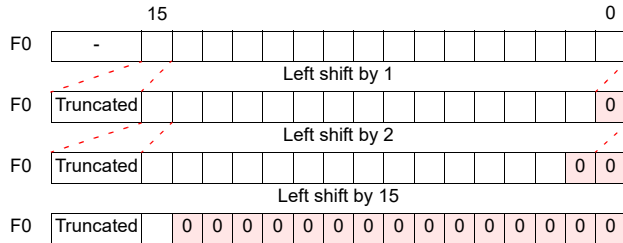

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	○			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		
F2	0 - 15	0 - 31

**Example**

- \$u100 = \$u200 << 3 (W)

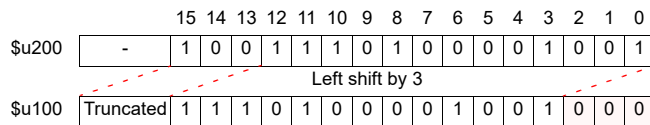

- \$u100 = \$u200 << 2 (D)

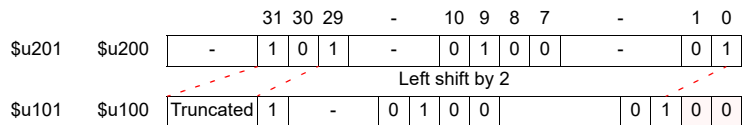

**Supplemental remarks**

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


**SHR(>>)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 >> F2 (W)..... WORD**  
**F0 = F1 >> F2 (D)..... DWORD**

**Function: Right shift**

This macro command is used to perform logical shift of [F1] to the right by the number of bits specified in [F2] and write the result to [F0]. The lower-order bits (by the number in [F2]) are truncated. "0" is assigned to the higher-order bits (by the number in [F2]).

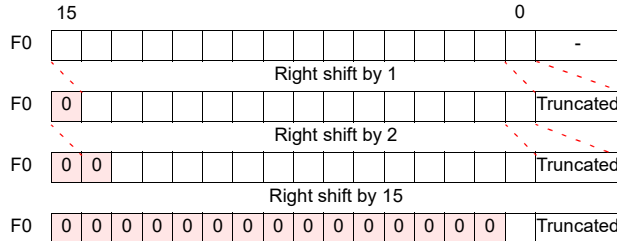

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	○			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		
F2	0 - 15	0 - 31

**Example**

- \$u100 = \$u200 >> 3 (W)

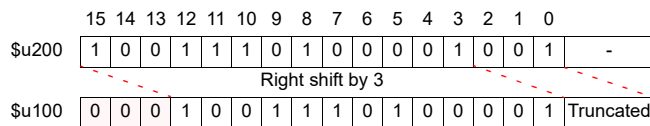

- \$u100 = \$u200 >> 2 (D)

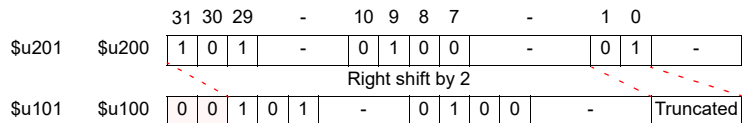

**Supplemental remarks**

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.4 Statistic

### MAX


All models	<input type="radio"/>
------------	-----------------------

**F0 = MAX (F1 C : F2) (W) ..... WORD**

**F0 = MAX (F1 C : F2) (D) ..... DWORD**

#### Function: Maximum

This macro command is used to find the maximum data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

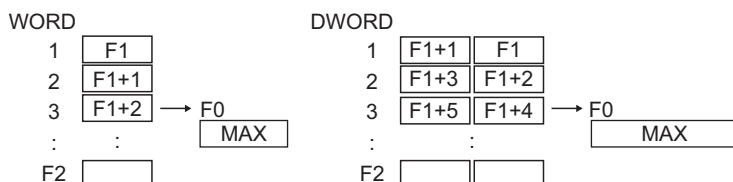

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)


⊙ : Setting enabled (indirect designation enabled)

#### Setting range


	WORD	DWORD
F0	-32768 - +32767	-2147483648 - +2147483647
F1	(Decimal system with signs)	(Decimal system with signs)
F2	0 - 512	0 - 512

#### Example

- \$u100 = MAX (\$u200 C : 5) (W)

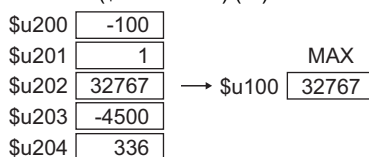

- \$u100 = MAX (\$u200 C : 5) (D)

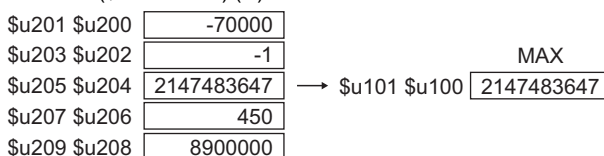

#### Supplemental remarks

- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error




## MIN

All models	<input type="radio"/>
------------	-----------------------

**F0 = MIN (F1 C : F2) (W).....WORD**  
**F0 = MIN (F1 C : F2) (D) .....DWORD**

### Function: Minimum

This macro command is used to find the minimum data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

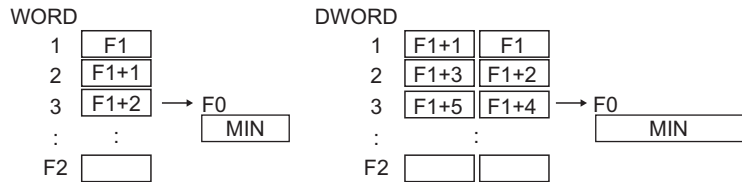

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range


	WORD	DWORD
F0	-32768 - +32767	-2147483648 - +2147483647
F1	(Decimal system with signs)	(Decimal system with signs)
F2	0 - 512	0 - 512

### Example

- \$u100 = MIN (\$u200 C : 5) (W)

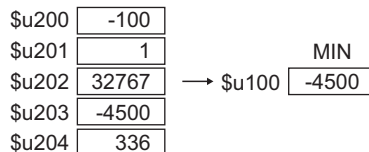

- \$u100 = MIN (\$u200 C : 5) (D)

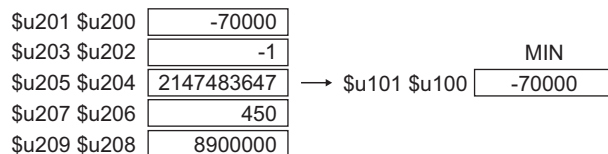

### Supplemental remarks

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## AVG

All models	<input type="radio"/>
------------	-----------------------

**F0 = AVG (F1 C : F2) (W) ..... WORD**  
**F0 = AVG (F1 C : F2) (D)..... DWORD**

### Function: Average

This macro command is used to average the data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

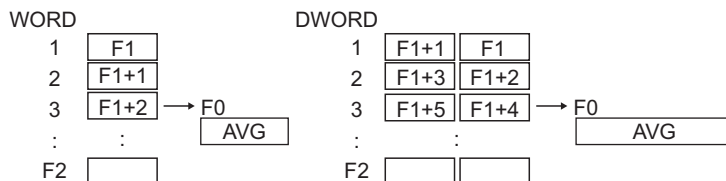

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range


	WORD	DWORD
F0	-32768 - +32767	-2147483648 - +2147483647
F1	(Decimal system with signs)	(Decimal system with signs)
F2	0 - 512	0 - 512

### Example

- \$u100 = AVG (\$u200 C : 5) (W)

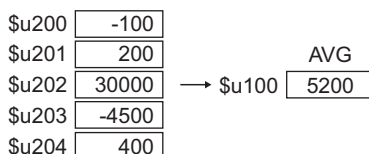

- \$u100 = AVG (\$u200 C : 5) (D)

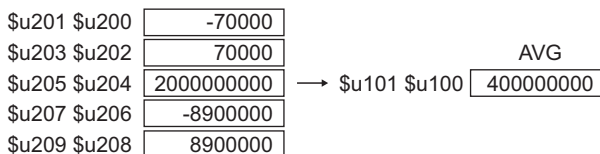

### Supplemental remarks

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
3	Calculation operation execution error
-1	Execution error

## SUM


All models	<input type="radio"/>
------------	-----------------------

**F0 = SUM (F1 C : F2) (W)..... WORD**

**F0 = SUM (F1 C : F2) (D)..... DWORD**

### Function: Sum

This macro command is used to determine the sum of the data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

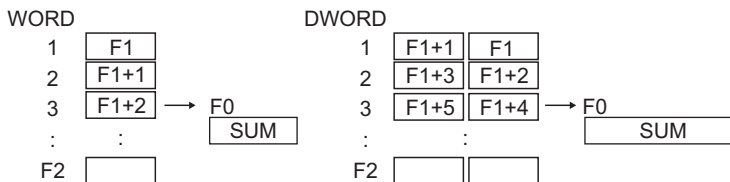

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range


	WORD	DWORD
F0	-32768 - +32767	-2147483648 - +2147483647
F1	(Decimal system with signs)	(Decimal system with signs)
F2	0 - 512	0 - 512

### Example

- \$u100 = SUM (\$u200 C : 5) (W)

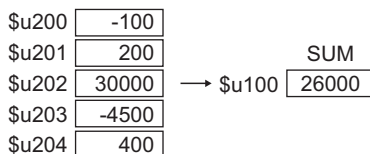

- \$u100 = SUM (\$u200 C : 5) (D)

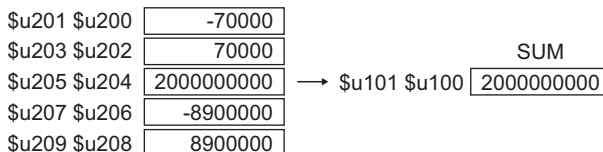

### Supplemental remarks

- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

## 4.5 Mathematics/trigonometric

### EXP

### F0 = EXP(F1) (F)

All models	<input type="radio"/>
------------	-----------------------

#### Function: Calculation of the exponent

This macro command is used to store the exponent of [F1] in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	

#### Example

- \$u100 = EXP (\$u200) (F)

$$2.71828 = e^{1.0}$$

When \$u200 = "1.0", on command execution "2.71828" is stored in \$u100.

#### Supplemental remarks

- For more information on the IEEE 32-bit single precision real number, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].


**EXPT**

**F0 = EXPT(F1,F2) (F)**

All models	<input type="radio"/>
------------	-----------------------

**Function: Calculation of powers**

This macro command is used to store [F1] to the power of [F2] in [F0]. Specify [F0], [F1], and [F2] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	
F1	IEEE 32-bit single precision real number
F2	

**Example**

- \$u100 = EXPT (\$u200,\$u300) (F)

$$8 = 2^3$$

When \$u200 = "2" and \$u300 = "3", on command execution "8" is stored in \$u100.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

**LN**

**F0 = LN(F1) (F)**

All models	<input type="radio"/>
------------	-----------------------

**Function: Calculation of natural logarithms**

This macro command is used to store the value of the natural logarithm of [F1] in [F0].

Specify [F0] and [F1] as floating decimal point (FLOAT) type values.

$$\log_e \left( \overset{\text{FLOAT}}{\boxed{F1+1}} \overset{\text{FLOAT}}{\boxed{F1}} \right) \rightarrow \overset{\text{FLOAT}}{\boxed{F0+1}} \overset{\text{FLOAT}}{\boxed{F0}}$$

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- \$u100 = LN (\$u200) (F)

$$2.302585 = \log_e (10.0)$$

When \$u200 = "10.0", on command execution "2.302585" is stored in \$u100.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real number, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

**LOG**

**F0 = LOG(F1) (F)**

All models	<input type="radio"/>
------------	-----------------------

**Function: Calculation of common logarithms**

This macro command is used to store the value of the common logarithm of [F1] in [F0].

Specify [F0] and [F1] as floating decimal point (FLOAT) type values.

$$\log_{10}(\overset{\text{FLOAT}}{\boxed{F1+1}} \overset{\text{FLOAT}}{\boxed{F1}}) \rightarrow \overset{\text{FLOAT}}{\boxed{F0+1}} \overset{\text{FLOAT}}{\boxed{F0}}$$

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- \$u100 = LOG (\$u200) (F)

$$1.0 = \log_{10} (10.0)$$

When \$u200 = "10.0", on command execution "1.0" is stored in \$u100.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real number, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

## SQRT

## F0 = SQRT(F1) (F)

All models	<input type="radio"/>
------------	-----------------------

### Function: Calculation of square roots

This macro command is used to store the value of the square root of [F1] in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.

$$\sqrt{\text{FLOAT } ( \text{F1+1} \text{ F1 } )} \rightarrow \text{FLOAT } ( \text{F0+1} \text{ F0 } )$$

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

4

### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	

### Example

- \$u100 = SQRT (\$u200) (F)

$$1.41421 = \sqrt{2.0}$$

When \$u200 = "2.0", on command execution "1.41421" is stored in \$u100.

### Supplemental remarks

- For more information on the IEEE 32-bit single precision real number, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].




**ABS**

All models	<input type="radio"/>
------------	-----------------------

**F0 = ABS (F1) (W) ..... WORD**  
**F0 = ABS (F1) (D) ..... DWORD**  
**F0 = ABS (F1) (F) ..... FLOAT**

**Function: Absolute value**

This macro command is used to store an absolute value of [F1] in [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD	FLOAT
F0	-32767 to +32767 (Decimal system with signs)	-2147483647 to +2147483647 (Decimal system with signs)	IEEE 32-bit single precision real number
F1			

**Example**

- \$u100 = ABS (\$u200) (W)  
 When \$u200 = “-1”, on command execution “1” is stored in \$u100.

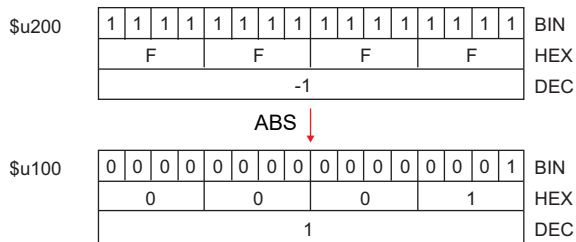

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].


**NEG**

All models	<input type="radio"/>
------------	-----------------------

**F0 = NEG (F1) (W)..... WORD**  
**F0 = NEG (F1) (D)..... DWORD**  
**F0 = NEG (F1) (F)..... FLOAT**

**Function: Sign inversion**

This macro command is used to store a value with its sign inverted from [F1] in [F0].

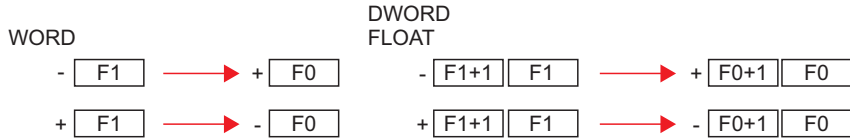

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD	FLOAT
F0	-32767 to +32767 (Decimal system with signs)	-2147483647to +2147483647 (Decimal system with signs)	IEEE 32-bit single precision real number
F1			

**Example**

- \$u100 = NEG (\$u200) (W)  
 When \$u200 = “-1”, on command execution “1” is stored in \$u100.



**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

**SIN**

**F0 = SIN (F1) (F)..... FLOAT**

All models	<input type="radio"/>
------------	-----------------------

**Function: Sine**

This macro command is used to store a sine of the angle (in radians) specified for [F1] in [F0].

Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)


**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain the value for sin 90° in radians;  
 \$u200 = RAD (90) (F)  
 \$u100 = SIN (\$u200) (F)  
 The operation result of "1" is stored in \$u100.

- \* The sine, cosine and tangent of the trigonometric functions can be obtained based on the formulae below.
  - Radian (circular measure)  
 1 rad = 360/2 π  
 = approx. 57.29578 deg.

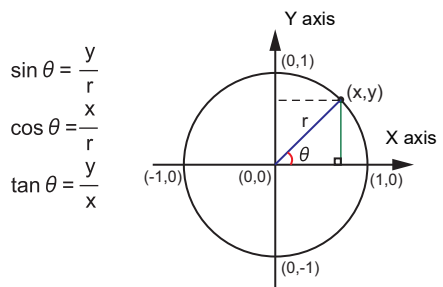

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).


**COS**

**F0 = COS (F1) (F) ..... FLOAT**

All models	<input type="radio"/>
------------	-----------------------

**Function: Cosine**

This macro command is used to store a cosine of the angle (in radians) specified for [F1] in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain the value for cos 0° in radians;  
 \$u200 = RAD (0) (F)  
 \$u100 = COS (\$u200) (F)  
 The operation result of “1” is stored in \$u100.

\* For more information on cosθ of the trigonometric functions, refer to “Example” of “Function: Sine” on page 4-26.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).



## TAN


## F0 = TAN (F1) (F) ..... FLOAT

All models	<input type="radio"/>
------------	-----------------------

### Function: Tangent

This macro command is used to store a tangent of the angle (in radians) specified for [F1] in [F0].

Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	

### Example

- To obtain the value for  $\tan 45^\circ$  in radians;  
 $\$u200 = \text{RAD} (45) (F)$   
 $\$u100 = \text{TAN} (\$u200) (F)$   
 The operation result of "1" is stored in  $\$u100$ .

\* For more information on  $\tan\theta$  of the trigonometric functions, refer to "Example" of "Function: Sine" on page 4-26.

### Supplemental remarks

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in  $\$s1056$ .  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow <sup>*1</sup>
2	Underflow <sup>*1</sup>
3	Calculation operation execution error <sup>*2</sup>

\*1 An indefinite value is stored in [F0].

\*2 When the value specified for [F1] is  $\pi \times (0.5 + n)$ , "-1" is stored in [F0]. (n: integer)

- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).


**ASIN**

**F0 = ASIN (F1) (F) . . . . . FLOAT**

All models	<input type="radio"/>
------------	-----------------------

**Function: Arcsine**

This macro command is used to store an arcsine of the angle (in radians) specified for [F1] in [F0].  
Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
⊙ : Setting enabled (indirect designation enabled)


**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain the value for  $\sin^{-1} 1$ ;  
\$u100 = ASIN (1) (F)  
The operation result of "1.570796" (=  $\pi/2$ ) is stored in \$u100.

\* The  $\sin^{-1}$  of the trigonometric functions is expressed in the graph shown on the right.

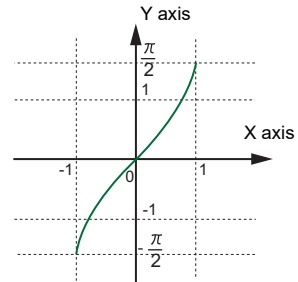

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*1
2	Underflow*1
3	Calculation operation execution error*2

\*1 An indefinite value is stored in [F0].  
\*2 When the value specified for [F1] is outside the range from "-1" to "1", "-1" is stored in [F0].

- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).

## ACOS

## F0 = ACOS (F1) (F)..... FLOAT

All models	<input type="radio"/>
------------	-----------------------

### Function: Arccosine

This macro command is used to store an arccosine of the angle (in radians) specified for [F1] in [F0].

Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)


### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	

### Example

- To obtain the value for  $\cos^{-1} 0$ ;  
 $\$u100 = \text{ACOS} (0) (F)$   
 The operation result of "1.570796" ( $= \pi/2$ ) is stored in  $\$u100$ .

\* The  $\cos^{-1}$  of the trigonometric functions is expressed in the graph shown on the right.

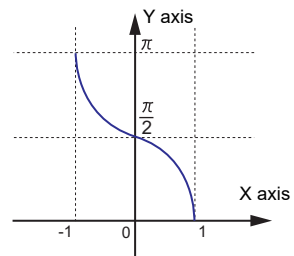

### Supplemental remarks

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in  $\$s1056$ .  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow <sup>*1</sup>
2	Underflow <sup>*1</sup>
3	Calculation operation execution error <sup>*2</sup>

\*1 An indefinite value is stored in [F0].

\*2 When the value specified for [F1] is outside the range from "−1" to "1", "−1" is stored in [F0].

- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).


**ATAN**

**F0 = ATAN (F1) (F) ..... FLOAT**

All models	○
------------	---

**Function: Arctangent**

This macro command is used to store an arctangent of the angle (in radians) specified for [F1] in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)


**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain the value for  $\tan^{-1} 0$ ;  
 $\$u100 = ATAN (0) (F)$   
 The operation result of "0" is stored in  $\$u100$ .

\* The  $\tan^{-1}$  of the trigonometric functions is expressed in the graph shown on the right.

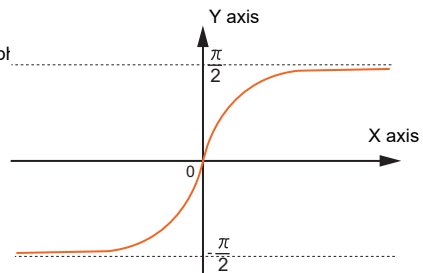

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in  $\$s1056$ . When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

- To convert the unit of an angle, use the macro command of DEG (page 4-32) or RAD (page 4-33).




**DEG**

**F0 = DEG (F1) (F) ..... FLOAT**

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert radians to degrees**

This macro command is used to convert the unit of an angle specified for [F1] from radians to degrees and store the converted value in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain a value in degrees;  
 \$u100 = ASIN (1) (F)  
 \$u200 = DEG (\$u100) (F)  
 The operation result of "90" is stored in \$u200.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].


**RAD**

**F0 = RAD (F1) (F) ..... FLOAT**

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert degrees to radians**

This macro command is used to convert the unit of an angle specified for [F1] from degrees to radians and store the converted value in [F0]. Specify [F0] and [F1] as floating decimal point (FLOAT) type values.



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	

**Example**

- To obtain 180° in radians;  
 \$u100 = RAD (180) (F)  
 The operation result of "3.141592" (= π) is stored in \$u100.

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow*
2	Underflow*

\* An indefinite value is stored in [F0].

## 4.6 Bit Operation

### BSET

All models	<input type="radio"/>
------------	-----------------------

### F0 (ON)

#### Function: Bit set

This macro command is used to set (ON) the memory bit specified in [F0].




#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)


#### Example

- \$u100 - 08 (ON)

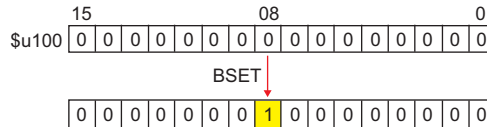

#### Supplemental remarks

- If you use PLC memory or temperature controller memory that is disabled for bit-by-bit read and write, the macro operation as the following takes place.  
 Ex.) Mitsubishi PLC D100-05 (ON)
  1. One word that specifies the bit is read.
  2. The bit specified by the above one word is set (ON).
  3. The data is written to the PLC.

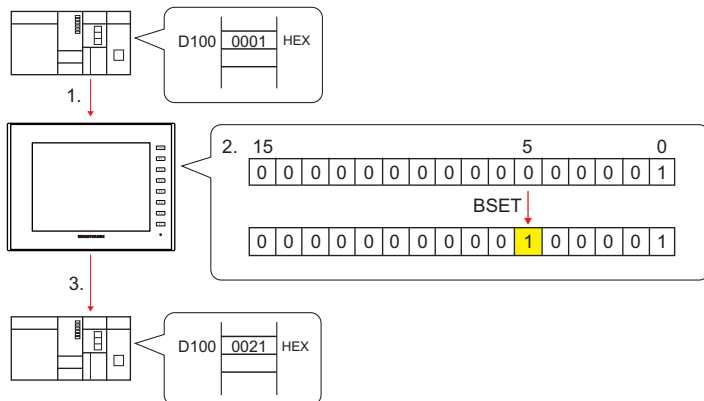

\* If the bit is changed in a sequence program during processing of step 2, step 3 for data writing is performed.

- The result of macro execution is stored in \$s72.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## BCLR

## F0 (OFF)

All models	○
------------	---

### Function: Bit reset

This macro command is used to reset (OFF) the memory bit specified in [F0].



### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)


### Example

- \$u100 - 08 (OFF)



### Supplemental remarks

- If you use PLC memory or temperature controller memory that is disabled for bit-by-bit read and write, the macro operation as the following takes place.  
 Ex.) Mitsubishi PLC D100-05 (OFF)
  1. One word that specifies the bit is read.
  2. The bit specified by the above one word is reset (OFF).
  3. The data is written to the PLC.

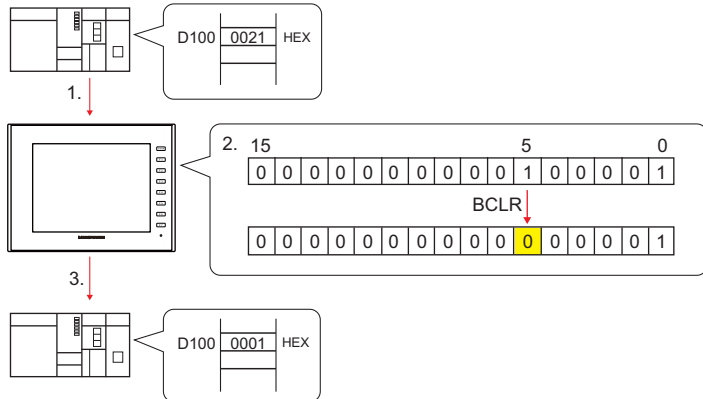

\* If the bit is changed in a sequence program during processing of step 2, step 3 for data writing is performed.

- The result of macro execution is stored in \$s72.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**BINV**

All models	<input type="radio"/>
------------	-----------------------

**F0 (INV)**

**Function: Bit inversion**

This macro command is used to invert the memory bit specified in [F0].



**Available device memory**


	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)


**Example**

- \$u100 - 08 (INV)

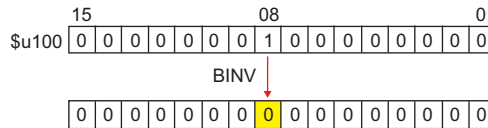

**Supplemental remarks**

- If you use PLC memory or temperature controller memory that is disabled for bit-by-bit read and write, the macro operation as the following takes place.  
Ex.) Mitsubishi PLC D100-05 (INV)
  1. One word that specifies the bit is read.
  2. The bit specified by the above one word is inverted.
  3. The data is written to the PLC.

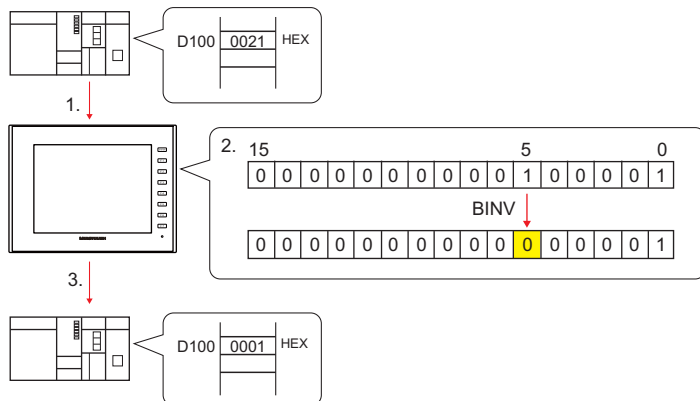

\* If the bit is changed in a sequence program during processing of step 2, step 3 for data writing is performed.

- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.7 Conversion

### BCD


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) BCD** ..... **WORD**

**F0 = F1 (D) BCD** ..... **DWORD**

#### Function: Conversion to BCD

This macro command is used to convert the binary data specified in [F1] to BCD and write the result to [F0].

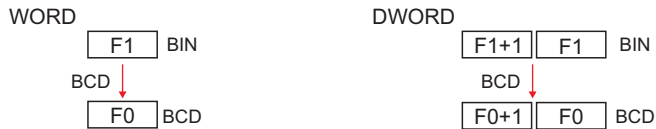

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	WORD	DWORD
F0	0 - 9999 (BCD)	0 - 99999999 (BCD)
F1	0 - 9999 (Decimal system without signs)	0 - 99999999 (Decimal system without signs)

#### Example

- \$u100 = \$u200 (W) BCD

\$u200	0 0 0 0 0 0 0 0 0 0 1 1 0 0 1 0 0	BIN
	0 0 6 4	HEX
	100	DEC

BCD ↓

\$u100	0 0 0 0 0 0 0 0 1 0 0 0 0 0 0 0 0	BIN
	0 1 0 0	HEX
	100	BCD

#### Supplemental remarks

- If the value in [F1] is outside the permissible range, [F0] becomes "0".
- The result of macro execution is stored in \$s1057.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**BIN**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) BIN ..... WORD**  
**F0 = F1 (D) BIN ..... DWORD**

**Function: Conversion to BIN**

This macro command is used to convert the BCD data specified in [F1] to binary data and write the result to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD
F0	0 - 9999 (Decimal system without signs)	0 - 99999999 (Decimal system without signs)
F1	0 - 9999 (BCD)	0 - 99999999 (BCD)

**Example**

- \$u100 = \$u200 (W)BIN

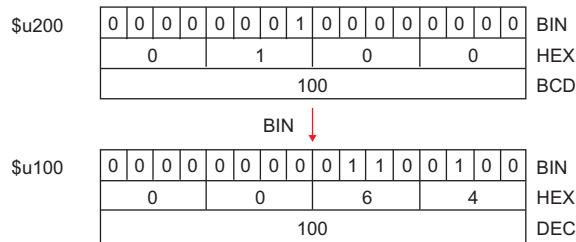

**Supplemental remarks**

- If the value in [F1] is outside the permissible range, [F0] becomes "0".
  - The result of macro execution is stored in \$s1057.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


**CWD**

**F0 = F1 D <-W**

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert one-word → double-word**

This macro command is used to convert the one-word data with sign specified in [F1] to double-word data with sign and write the result to [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)




**Setting range**

	Value
F0	-32768 - +32767 (Decimal system with signs)
F0+1	
F1	

**Example**

- \$u100 = \$u200 D <- W

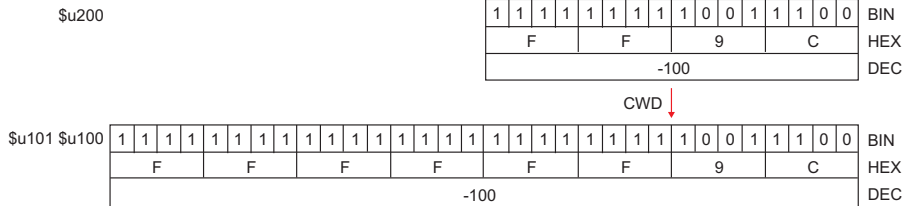

**Supplemental remarks**

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



**CVP**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) PLC <-..... WORD**  
**F0 = F1 (D) PLC <-..... DWORD**

**Function: Convert binary data to PLC1-format data**

This macro command is used to convert the binary data specified in [F1] to the PLC1-format data and write the result to [F0].

The following PLCs manipulate PLC-format data.

- Fuji Electric: MICREX-F all types
- Yaskawa: Memobus [Transmission Mode: Type 1]
- OMRON: All [Transmission Mode: Transmission Mode 2]

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

- The available memory address range and the type of data vary, depending on the PLCs. Refer to the PLC manual for details.

**Example**

- Fuji MICREX-F F70S BCD with signs (-7999 to +7999)

The most significant bit

OFF: Positive

ON: Negative

\$u100 = \$u200 (W) PLC<-

\$u200	1	1	1	1	1	1	1	1	1	0	0	1	1	1	0	0	BIN
	F				F				9				C				HEX
	-100																MONITOUCH (DEC)
CVP ↓																	
\$u100	1	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	BIN
	8				1				0				0				HEX
	-100																F70S (BCD with signs)

**Supplemental remarks**

- The macro command is used in combination with MOV or BMOV.
- To convert to characteristic data other than for PLC1, use " CVPFMT" (page 4-41).
- The result of macro execution is stored in \$s1057.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**CVPFMT**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) PLC F2 <- ..... WORD**  
**F0 = F1 (D) PLC F2 <- ..... DWORD**

**Function: Convert binary data to PLC-format data specified at [F2]**

This macro command is used to convert the binary data specified in [F1] to the PLC-format data specified at [F2] and write the result to [F0].

The following PLCs manipulate PLC-format data.

- Fuji Electric: MICREX-F all types
- Yaskawa: Memobus [Transmission Mode: Type 1]
- OMRON: All [Transmission Mode: Transmission Mode 2]

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	The available memory address range and the type of data vary, depending on the PLCs.
F1	Refer to the PLC manual for details.
F2	1 - 8

**Example**

- Fuji's MICREX-F series is connected as PLC2.
- Fuji MICREX-F F70S BCD with signs (-7999 to +7999)

The most significant bit

OFF: Positive

ON: Negative

\$u100 = \$u200 (W) PLC2 <-

\$u200	1 1 1 1 1 1 1 1 1 0 0 1 1 1 0 0	BIN
	F                  F                  9                  C	HEX
	-100	MONITOUCH (DEC)
	CVPFMT ↓	
\$u100	1 0 0 0 0 0 0 1 0 0 0 0 0 0 0 0	BIN
	8                  1                  0                  0	HEX
	-100	F70S (BCD with signs)

**Supplemental remarks**

- The macro command is used in combination with MOV or BMOV.
  - The result of macro execution is stored in \$s1057.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**CVB**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) <- PLC..... WORD**  
**F0 = F1 (D) <- PLC..... DWORD**

**Function: Convert PLC1-format data to binary data**

This macro command is used to convert the PLC1-format data specified in [F1] to binary data and write the result to [F0].

The following PLCs manipulate PLC-format data.

- Fuji Electric: MICREX-F all types
- Yaskawa: Memobus [Transmission Mode: Type 1]
- OMRON: All [Transmission Mode: Transmission Mode 2]

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

- The available memory address range and the type of data vary, depending on the PLCs. Refer to the PLC manual for details.

**Example**

- Fuji MICREX-F F70S BCD with signs (-7999 to +7999)

The most significant bit

OFF: Positive

ON: Negative

\$u100 = \$u200 (W) <-PLC

\$u200	1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1	BIN
	8 0 0 1	HEX
	-1	
CVB ↓		
\$u100	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	BIN
	F F F F	HEX
	-1	

**Supplemental remarks**

- The macro command is used in combination with MOV or BMOV.
- To convert to characteristic data other than for PLC1, use " CVBFMT" (page 4-43).
- The result of macro execution is stored in \$s1057.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**CVBFMT**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) <- PLC F2 ..... WORD**  
**F0 = F1 (D) <- PLC F2 ..... DWORD**

**Function: Convert PLC-format data specified at [F2] to binary data**

This macro command is used to convert the PLC-format data specified at [F2] in [F1] to the binary data and write the result to [F0].

The following PLCs manipulate PLC-format data.

- Fuji Electric: MICREX-F all types
- Yaskawa: Memobus [Transmission Mode: Type 1]
- OMRON: All [Transmission Mode: Transmission Mode 2]

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	The available memory address range and the type of data vary, depending on the PLCs.
F1	Refer to the PLC manual for details.
F2	1 - 8

**Example**

- Fuji's MICREX-F series is connected as PLC2.
- Fuji MICREX-F F70S BCD with signs (-7999 to +7999)

The most significant bit

OFF: Positive

ON: Negative

\$u100 = \$u200 (W) <- PLC2

\$u200	1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1	BIN
	8                      0                      0                      1	HEX
	-1	
CVBFMT ↓		
\$u100	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	BIN
	F                      F                      F                      F	HEX
	-1	

**Supplemental remarks**

- The macro command is used in combination with MOV or BMOV.
  - The result of macro execution is stored in \$s1057.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## SWAP

### F0 = C : F1 (SWAP)

All models	<input type="radio"/>
------------	-----------------------

#### Function: Swap MSB with LSB

This macro command is used to perform a swap between the higher-order byte and the lower-order byte of the data at the location starting from the address specified in [F0]. The data count is specified in [F1].

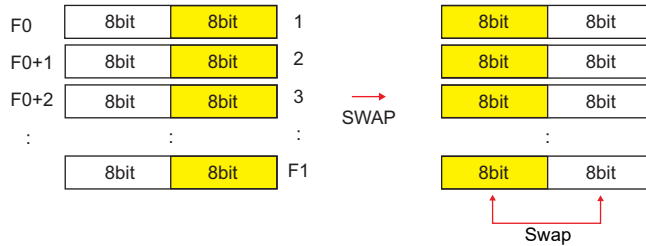

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	○			○

○ : Setting enabled (indirect designation disabled)


⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	0000 - FFFF (HEX)
F1	0 - 1024

#### Example

- \$u100 C : 2 (SWAP)

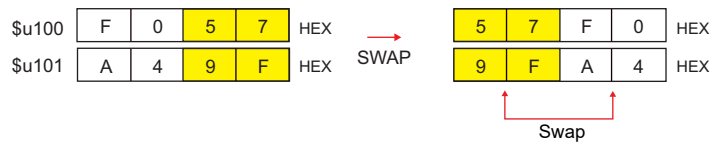

#### Supplemental remarks

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## CHR

## F0 = ''

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert text → code**

This macro command is used to convert the text placed in quotation marks '' to the shifted JIS/ASCII codes and write the result to [F0].

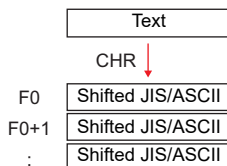**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	Shifted JIS/ASCII	82 bytes maximum Variable depending on the bytes of the text
F0+1		
:		
''	Text	80 bytes maximum

**Example**

- When [MSB → LSB] is selected for [Text Process] on the [Communication Setting] tab window.

\$u100 = 'string'

Text	string					
	CHR↓					
\$u100	7	3	7	4	HEX	ts
\$u101	7	2	6	9	HEX	ir
\$u102	6	E	6	7	HEX	gn
\$u103	0	0	0	0	HEX	Null code

**Supplemental remarks**

- Swap between the higher-order byte and the lower-order byte can be set by selecting an option for [Text Process] under [Communication Setting].
- Regardless of the setting above, use a "STRING" command (page 4-46) for [LSB → MSB] conversions.
- A null code is added to the end. Even-number-byte text thereby uses one extra word.
- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## STRING

## F0 = '(STRING)

All models	<input type="radio"/>
------------	-----------------------

### Function: Convert text → code

This macro command is used to convert the text placed in quotation marks '' to the shifted JIS/ASCII codes and write the result to [F0].

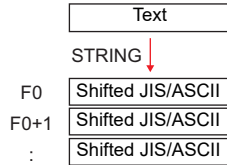

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value	Remarks
F0	Shifted JIS/ASCII	128 bytes maximum Variable depending on the bytes of the text
F0+1		
:		
' '	Text	128 bytes maximum

### Example

\$u100 = 'string' (STRING)

Text	string					
	STRING↓					
\$u100	7	4	7	3	HEX	ts
\$u101	6	9	7	2	HEX	ir
\$u102	6	7	6	E	HEX	gn
\$u103	0	0	0	0	HEX	Null code

### Supplemental remarks

- Regardless of the [Text Process] setting under [Communication Setting] for PLC1, the data is stored in memory in the [LSB → MSB] sequence.
- A null code is added to the end. Even-number-byte text thereby uses one extra word.
- The result of macro execution is stored in \$s1057.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

CVFD

F0(D) <- F1 (F) F2 (D)

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert floating decimal point → 32-bit binary**

This macro command is used to convert the 32-bit single precision real number specified in [F1] to 32-bit binary data and store the result in [F0].

[F2] specifies the exponent of "10" at the time of conversion.

If [F2] = 0, rounding to the nearest whole number\* is performed. If [F2] = 1, rounding to the nearest tenth\* is performed. The result is stored in [F0].

\* Rounding down and rounding up are also possible. Refer to page 4-48.

F1	31	30	29	-	24	23	22	21	-				5	4	3	2	1	0	Real number
	Sign		Exponent					Mantissa											
	$0 < \text{Exponent} < 255 : (-1)^{\text{Sign}} \times (1 + \text{Mantissa} \times 2^{-23}) \times 2^{(\text{Exponent} - 127)}$																		
	$\text{Exponent} = 0, \text{Mantissa} \neq 0 : (-1)^{\text{Sign}} \times (\text{Mantissa} \times 2^{-23}) \times 2^{-126}$																		
	$\text{Exponent} = 0, \text{Mantissa} = 0 : 0$																		
	$\text{Sign} = 0, \text{Exponent} = 255, \text{Mantissa} = 0 : \infty$																		
	$\text{Sign} = 1, \text{Exponent} = 255, \text{Mantissa} = 0 : -\infty$																		
	$\text{Exponent} = 255, \text{Mantissa} \neq 0 : \text{NaN}$																		
	CVFD ↓																		
F0	31	30	29	-				-				5	4	3	2	1	0	BIN	
	$2^{31}$	$2^{30}$	$2^{29}$	-				-				$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$		



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2				○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	-2147483648 - 2147483647 (BIN)
F1	IEEE 32-bit single precision real number
F2	-32 - +32

**Example**

- \$u100 (D) <- \$u200 (F) 0 (D)

\$u201,\$u200	31	30	29	-	24	23	22	21	-				2	1	0			
	0	127					4194304											
	Sign		Exponent					Mantissa										
	$(-1)^0 \times (1 + 4194304 \times 2^{-23}) \times 2^{(127-127)} = 1.5$																	
	CVFD ↓																	
\$u101,\$u100	31	30	29	-				-				2	1	0				
	0	0	0	-				-				0	1	0				
	$2_{\text{DEC}}$																	



- \$u100 (D) <- \$u200 (F) 1 (D)

\$u201,\$u200	31	30	29	-	24	23	22	21		-	2	1	0
	0	127						4194304					
	Sign	Exponent						Mantissa					
	$(-1)^0 \times (1 + 4194304 \times 2^{-23}) \times 2^{(127 - 127)} = 1.5$												
	CVFD ↓												
\$u101,\$u100	31	30	29							-	2	1	0
	0	0	0							-			
	15 <sub>DEC</sub>												

**Supplemental remarks**

- You can select whether to round to the nearest whole number, round down or round up by specifying the appropriate value for \$s99.\*

Setting	Operation	
Other than 1 or 2	Round to the nearest whole number	0 - 4 : Round down 5 - 9 : Round up
1	Round down	
2	Round up	0: Round down Other than 0: Round up

\* If [Retain compatibility with negative value handling of CVFD macro command] is checked in the [General Settings] tab window ([System Setting] → [Unit Setting] → [General Settings]), the action to round down is performed, irrespective of the value in memory at \$s99.

- The result of macro execution is stored in \$s1057.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

CVDF

F0(F) <- F1 (D) F2 (D)

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert 32-bit binary → floating decimal point**

This macro command is used to convert the 32-bit binary data specified in [F1] to 32-bit single precision real number and store the result in [F0]. [F2] specifies the exponent of "10" at the time of conversion.

F1	31	30	29									5	4	3	2	1	0	BIN	
	$2^{31}$	$2^{30}$	$2^{29}$									$2^5$	$2^4$	$2^3$	$2^2$	$2^1$	$2^0$		
CVDF ↓																			
F0	31	30	29	-	24	23	22	21					5	4	3	2	1	0	Real number
	Sign	Exponent							Mantissa										
$0 < \text{Exponent} < 255$ : $(-1)^{\text{Sign}} \times (1 + \text{Mantissa} \times 2^{-23}) \times 2^{(\text{Exponent} - 127)}$																			
$\text{Exponent} = 0, \text{Mantissa} \neq 0$ : $(-1)^{\text{Sign}} \times (\text{Mantissa} \times 2^{-23}) \times 2^{-126}$																			
$\text{Exponent} = 0, \text{Mantissa} = 0$ : 0																			
$\text{Sign} = 0, \text{Exponent} = 255, \text{Mantissa} = 0$ : $\infty$																			
$\text{Sign} = 1, \text{Exponent} = 255, \text{Mantissa} = 0$ : $-\infty$																			
$\text{Exponent} = 255, \text{Mantissa} \neq 0$ : NaN																			



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2				○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	Value
F0	IEEE 32-bit single precision real number
F1	-2147483648 - 2147483647 (BIN)
F2	-32 - +32

**Example**

- \$u100 (F) <- \$u200 (D) 0 (D)


\$u201,\$u200	31	30	29									2	1	0	BIN		
	00000001 <sub>BIN</sub>																
CVDF ↓																	
\$u101,\$u100	31	30	29	-	24	23	22	21					2	1	0	Real number	
	0	127							0								
$(-1)^0 \times (1 + 0 \times 2^{-23}) \times 2^{(127 - 127)} = 1$																	

- \$u100 (F) <- \$u200 (D) 1 (D)

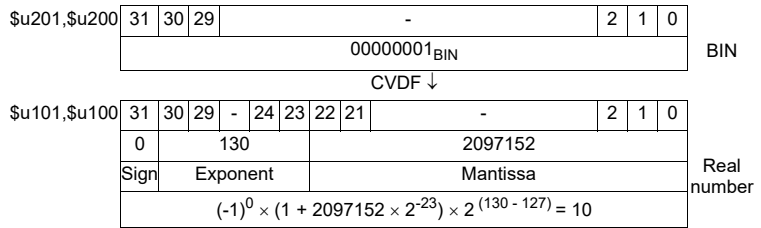

**Supplemental remarks**

MONITOUCH manipulates 32-bit single precision real numbers. Therefore, in the case of 24-bit binary data that exceeds the significant digit (-16777216 to 16777215 in the decimal system), the figure at the 25th bit from the leftmost digit of the converted binary data is rounded up and the figures at the 26th bit and after are truncated. Since the value obtained in the above manner is used for conversion to real number, an error is introduced.

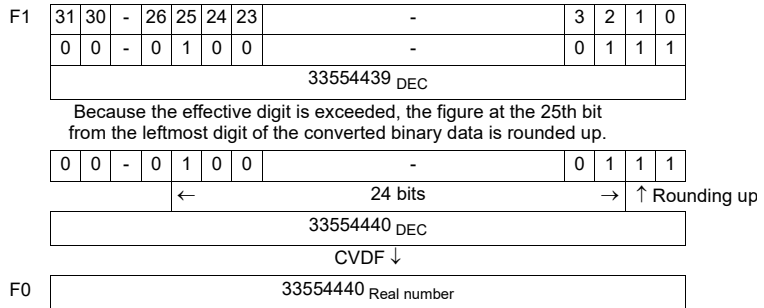

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## CLND\_TO\_GRE

## CLND\_TO\_GRE F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert calendar data → GMT-based UNIX time**

This macro is used to convert the calendar data [F1] in format [F2] to the UNIX time based on GMT, and to store the converted result in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value					
F0	Time data 0	DEC only				
F0+1	Time data 1	<table border="1"> <tr> <td>Time data 1</td> <td>Time data 0</td> </tr> <tr> <td colspan="2">GMT-based UNIX time from January 1, 1970</td> </tr> </table>	Time data 1	Time data 0	GMT-based UNIX time from January 1, 1970	
Time data 1	Time data 0					
GMT-based UNIX time from January 1, 1970						
F1	4 or 2 digits: Year					
F1+1	1 - 12: Month					
F1+2	1 - 31: Day					
F1+3	0 - 23: Hour					
F1+4	0 - 59: Minute					
F1+5	0 - 59: Second					
F2	Data format for [F1] 0: DEC 1: BCD					

	← MONITOUCH (return data)
--	---------------------------

**Example**

The calendar data in \$u200 - \$u205 in DEC format, 17 (hour):25 (minutes):10 (seconds) on June 10 in 2010, is converted to the GMT-based UNIX time, and the converted result is stored in \$u100 and \$u101.

\$u200 = 2010 (W)

\$u201 = 6 (W)

\$u202 = 10 (W)

\$u203 = 17 (W)

\$u204 = 25 (W)

\$u205 = 10 (W)

\$u300 = 0 (W)

CLND\_TO\_GRE \$u100 \$u200 \$u300

The GMT-based UNIX time "1276190710 seconds" is obtained.

Time data 0 → \$u100 = 8182 DEC

Time data 1 → \$u101 = 19473 DEC

**Supplemental remarks**

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**Restrictions**

- When setting a numerical data display to show the converted result of calendar data, 3 (hour):14 (minutes):7 (seconds) on January 19, 2038 or after, enable the display to show 2-word long data without sign.
- This macro handles any year divisible by 4 as a leap year. For example, the year 2100 is recognized as a leap year though it is not so. Therefore, an error of one day will result.
- The calendar data displayable on the V9 unit ranges from January 1, 2012 to January 19, 2038. Any data outside this range cannot be converted with this macro correctly.


**GRE\_TO\_CLND**

**GRE\_TO\_CLND F0 F1 F2**

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert GMT-based UNIX time → calendar data**

This macro is used to convert the UNIX time based on GMT in [F1] to the calendar data in format [F2], and to store the converted result in [F0].



**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)



**Setting range**

	Value			
F0	4 digits: Year			
F0+1	1 - 12: Month			
F0+2	1 - 31: Day			
F0+3	0 - 23: Hour			
F0+4	0 - 59: Minute			
F0+5	0 - 59: Second			
F0+6	0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday			
F1	Time data 0	DEC only		
F1+1	Time data 1	<table border="1" style="width: 100%;"> <tr> <td style="width: 50%; text-align: center;">Time data 1</td> <td style="width: 50%; text-align: center;">Time data 0</td> </tr> </table>	Time data 1	Time data 0
Time data 1	Time data 0			
GMT-based UNIX time from January 1, 1970				
F2	Data format for [F0] 0: DEC 1: BCD			

: ← MONITOUCH (return data)

**Example**

The GMT-based UNIX time, 1278663500 seconds, in \$u200 is converted to the calendar data in DEC format, and the converted result is stored in \$u100 and after.

```
GRE_TO_CLND $u100 $u200 0
```

The calendar data, "8 (hour):18 (minutes):20 (seconds) on Friday on July 9, 2010," is obtained.

- Year → \$u100 = 2010 DEC
- Month → \$u101 = 7 DEC
- Day → \$u102 = 9 DEC
- Hour → \$u103 = 8 DEC
- Minutes → \$u104 = 18 DEC
- Seconds → \$u105 = 20 DEC
- Day of the week → \$u106 = 5 DEC

**Supplemental remarks**

- The result of macro execution is stored in \$s1057.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**Restrictions**

- This macro handles any year divisible by 4 as a leap year. For example, the year 2100 is recognized as a leap year though it is not so. Therefore, an error of one day will result.
- The calendar data displayable on the V9 unit ranges from January 1, 2012 to January 19, 2038. Any data outside this range cannot be converted with this macro correctly.


## FORMAT\_DATA

## FORMAT\_DATA F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert string → numerical data**

This macro is used to convert the string [F1] according to the attributes [F2], and to store the converted result in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	⊙			
F2	○			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	Target memory: BIN data	The number of words depends on [F2+1] (data length).
F1	Source memory: String (ASCII code)*	The number of bytes depends on [F2+3] (character count). 32 bytes maximum (16 words) Character processing LSB → MSB fixed
F2	0: DEC without sign (decimal) 1: DEC with a negative sign (decimal) 2: DEC with a positive/negative sign (decimal) 3: HEX (hexadecimal) 4: OCT (octal) 5: BIN (binary) 6: FLOAT (real number)	Format for [F1] If "DEC with a negative sign" or "FLOAT" is selected for [F2] for the conversion of a positive value, add a space code (20H) to the leftmost position of the positive value. Otherwise, an error will result. A space code is not included in the number of digits. Example: For a string "123" to be converted, add a space to make it as "_123".
F2+1	0: 1 word 1: 2 words	Data length for [F0] If "FLOAT" is selected for [F2], specify "0".
F2+2	0: DEC 1: BCD	Data format for [F0] If "HEX," "OCT," "BIN," or "FLOAT" is selected for [F2], specify "0".
F2+3	1 - 32: [F2] = 0, 1, 2, 5, or 6 1 - 8: [F2] = 3 1 - 11: [F2] = 4	Number of digits for [F1] A positive/negative sign and a decimal point are not included in the number of digits. Example: For a string "-12.3" to be converted, the number of digits is three.
F2+4	0 - 10: [F2] = 0, 1, or 2 0 - 31: [F2] = 6	Decimal place for [F1] Example: For a string "12.34" to be converted, specify two decimal places.
F2+5	0: With zero suppress 1: Without zero suppress	Format for [F1]



	Value	Remarks
F2+6	Valid only when F2+5 = 0 0: Leading spaces removed 1: Trailing spaces removed	Format for [F1] When a value in [F1] includes leading spaces, specify "0". When a value in [F1] includes trailing spaces, specify "1". Example: 0: <code>__12</code> → 12 1: <code>12__</code> → 12
F2+7	0 fixed	

\* When specifying the source string, you can easily define it using the macro command "STRING" (Page 4-46).

**Example**

The string in \$u100 is converted to the numerical data, and the converted result is stored in \$u300.

- String "1234": DEC without sign

						Display
\$u100	3	2	3	1	HEX	"12"
\$u101	3	4	3	3	HEX	"34"
↓ FORMAT_DATA						
\$u300	1234					"1234"

```

$u00100 = '1234' (STRING)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 4 (W) [4 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200
    
```

The result "1234" is stored in \$u300.

- String "12.34": A positive value in DEC with a negative sign format and with two decimal places

```

$u00100 = ' _12.34' (STRING)
; (For a positive value, add a space code 20H to the leftmost position.)
$u00200 = 1 (W) [DEC with a negative sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 4 (W) [4 digits]
$u00204 = 2 (W) [Two decimal places]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200
    
```

The result "1234" is stored in \$u300.

- String “-12.34”: A negative value in DEC with a negative sign format and with two decimal places  

```

$u00100 = '-12.34' (STRING)
$u00200 = 1 (W) [DEC with a negative sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 4 (W) [4 digits]
$u00204 = 2 (W) [Two decimal places]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200

```

The result “-1234” is stored in \$u300.
- String “1234”: FLOAT  

```

$u00100 = ' 1234' (STRING)
;(For a positive value, add a space code 20H to the leftmost position.)
$u00200 = 6 (W) [FLOAT]
$u00201 = 0 (W) [0 fixed]
$u00202 = 0 (W) [0 fixed]
$u00203 = 4 (W) [4 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200

```

The result “1234” is stored in \$u300 and \$u301.
- String “001234”: DEC without sign format and without zero suppress  

```

$u00100 = '001234' (STRING)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 6 (W) [6 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 1 (W) [Without zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200

```

The result “1234” is stored in \$u300.
- String “ 1234”: DEC without sign format and with two leading spaces  

```

$u00100 = ' 1234' (STRING)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 6 (W) [6 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces removed]
$u00207 = 0 (W) [0 fixed]
FORMAT_DATA $u00300 $u00100 $u00200

```

The result “1234” is stored in \$u300.

- String "1234": DEC without sign format and with two trailing spaces  
 \$u00100 = '1234' (STRING)  
 \$u00200 = 0 (W) [DEC without sign]  
 \$u00201 = 0 (W) [1 word]  
 \$u00202 = 0 (W) [DEC]  
 \$u00203 = 6 (W) [6 digits]  
 \$u00204 = 0 (W) [Without decimal point]  
 \$u00205 = 0 (W) [With zero suppress]  
 \$u00206 = 1 (W) [Trailing spaces removed]  
 \$u00207 = 0 (W) [0 fixed]  
 FORMAT\_DATA \$u00300 \$u00100 \$u00200  
 The result "1234" is stored in \$u300.

**Supplemental remarks**

- If "HEX" is specified as an attribute for conversion, characters "A" - "F" of the source data is not case-sensitive.
- If this macro, with "FLOAT" specified as an attribute, results in underflow, "0" is obtained as the converted result.
- Conversion with this macro is in the order of LSB → MSB.
- The following PLCs provided with PLC-specific data format are capable of handling negative values in BCD with a sign format. When you run this macro using such a value with any of these PLCs, the internal memory is not valid for [F0]. Therefore, be sure to assign the PLC memory (specific to the PLC model) to [F0].
  - Fuji Electric: All of the MICREX-F series
  - Yaskawa: Memobus [Trans. Mode: Type 1]
  - Omron: All [Transmission Mode 2]
- The result of macro execution is stored in \$s1057.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## FORMAT\_STR

## FORMAT\_STR F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Convert numerical data → string**

This macro is used to convert the numerical data [F1] according to the attributes [F2], and to store the converted result in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙	⊙		
F2	○			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**


	Value	Remarks
F0	Target device memory: String (ASCII code)	The number of bytes depends on [F2+3] (character count). 32 bytes maximum (16 words) Character processing LSB → MSB fixed
F1	Source device memory: BIN data	The number of words depends on [F2+1] (data length).
F2	0: DEC without sign (decimal) 1: DEC with a negative sign (decimal) 2: DEC with a positive/negative sign (decimal) 3: HEX (hexadecimal) 4: OCT (octal) 5: BIN (binary) 6: FLOAT (real number)	Format for [F1] If “DEC with a negative sign” or “FLOAT” is selected for [F2] and the converted result is a positive value, a space code (20H) is added to the leftmost position of the positive value. Example: For numerical data “123” to be converted, a space is added to provide a converted result as “_123”.
F2+1	0: 1 word 1: 2 words	Data length for [F1] If “FLOAT” is selected for [F2], specify “0”.
F2+2	0: DEC 1: BCD	Data format for [F1] If “HEX,” “OCT,” “BIN,” or “FLOAT” is selected for [F2], specify “0”.
F2+3	1 - 32: [F2] = 0, 1, 2, 5, or 6 1 - 8: [F2] = 3 1 - 11: [F2] = 4	Number of digits for [F0] A positive/negative sign and a decimal point are not included in the number of digits. If the number of digits specified for [F2+3] is smaller than that of the converted string, the result is given as a hyphen “-”. Example: For a string “-12.3” as the converted result, the number of digits is three.
F2+4	0 - 10: [F2] = 0, 1, or 2 0 - 31: [F2] = 6	Decimal place for [F0] Example: For a string “12.34” as the converted result, the number of digits is four and two decimal places are given.

	Value	Remarks
F2+5	0: With zero suppress 1: Without zero suppress	Format for [F0] Select whether to execute zero suppress. Example: For a string "00012" as the converted result, specify "1".
F2+6	Valid only when F2+5 = 0 0: Leading spaces added 1: Trailing spaces added	Format for [F0] When a value in [F0] includes leading spaces, specify "0". When a value in [F1] includes trailing spaces, specify "1". Example: 0: 12 → <u>  </u> 12 1: 12 → 12 <u>  </u>
F2+7	0 fixed	

**Example**

The numerical data in \$u100 is converted to a string according to the specified attributes, and the converted result is stored in \$u300.

- Numerical data "1234": DEC without sign

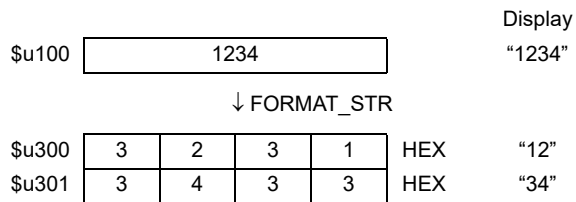

```

$u00100 = 1234 (W)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 4 (W) [4 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200
The result "1234" is stored in $u300 and $u301.
    
```

- Numerical data "1234": DEC without sign format and with zero suppress and leading spaces

```

$u00100 = 1234 (W)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 6 (W) [6 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200
The result "  1234" is stored in $u300 to $u302.
    
```

- Numerical data “1234”: DEC without sign format and with zero suppress and trailing spaces

```

$u00100 = 1234 (W)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 6 (W) [6 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 1 (W) [Trailing spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200

```

The result “1234\_” is stored in \$u300 to \$u302.
- Numerical data “1234”: DEC without sign format and without zero suppress

```

$u00100 = 1234 (W)
$u00200 = 0 (W) [DEC without sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 6 (W) [6 digits]
$u00204 = 0 (W) [Without decimal point]
$u00205 = 1 (W) [Without zero suppress]
$u00206 = 0 (W) [Leading spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200

```

The result “001234” is stored in \$u300 to \$u302.
- Numerical data “12.34”: DEC with a negative sign format and with two decimal places

```

$u00100 = 1234 (W)
$u00200 = 1 (W) [DEC with a negative sign]
$u00201 = 0 (W) [1 word]
$u00202 = 0 (W) [DEC]
$u00203 = 4 (W) [4 digits]
$u00204 = 2 (W) [Two decimal places]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200

```

The result “\_12.34” is stored in \$u300 to \$u302.  
(For a positive value, a space code 20H is added to the leftmost position.)
- Numerical data “1234.00”: FLOAT

```

$u00100 = 1234 (D)
$u00100(F) <- $u00100(D) 0 (D)
$u00200 = 6 (W) [FLOAT]
$u00201 = 0 (W) [0 fixed]
$u00202 = 0 (W) [0 fixed]
$u00203 = 6 (W) [6 digits]
$u00204 = 2 (W) [Two decimal places]
$u00205 = 0 (W) [With zero suppress]
$u00206 = 0 (W) [Leading spaces added]
$u00207 = 0 (W) [0 fixed]
FORMAT_STR $u00300 $u00100 $u00200

```

The result “\_1234.00” is stored in \$u300 to \$u303.  
(For a positive value, a space code 20H is added to the leftmost position.)

**Supplemental remarks**

- Conversion with this macro is in the order of LSB → MSB.
- A NULL code is added to the end of the string as a result of conversion. Even-number-byte string thereby uses one extra word.
- The following PLCs provided with PLC-specific data format are capable of handling negative values in BCD with a sign format. When you run this macro using such a value with any of these PLCs, the internal memory is not valid for [F1]. Therefore, be sure to assign the PLC memory (specific to the PLC model) to [F1].
  - Fuji Electric: All of the MICREX-F series
  - Yaskawa: Memobus [Trans. Mode: Type 1]
  - Omron: All [Transmission Mode 2]
- The result of macro execution is stored in \$s1057.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.8 Transfer


### MOV

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 (W) ..... WORD**  
**F0 = F1 (D)..... DWORD**

#### Function: Transfer

This macro command is used to transfer the data at the address specified in [F1] to the address in [F0].



#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range


	WORD	DWORD
F0	0000 - FFFF (HEX)	00000000 - FFFFFFFF (HEX)
F1		

#### Example

- \$u100 = PLC1 [D200] (W)

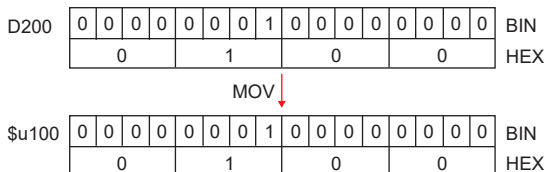

- \$u100 = PLC1 [D200] (D)

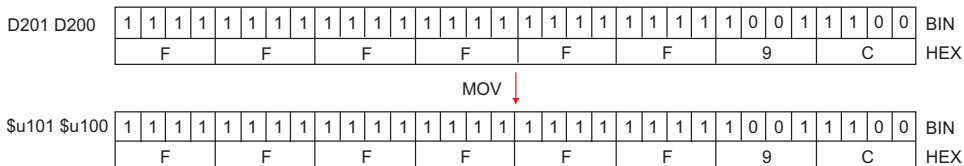

#### Supplemental remarks

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## BMOV


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 C : F2 (BMOV)(W)..... WORD**  
**F0 = F1 C : F2 (BMOV)(D)..... DWORD**


### Function: Block transfer

This macro command is used to transfer the data at the location starting from the address specified in [F1] in a block to the top address in [F0]. The data count is specified in [F2].

#### WORD

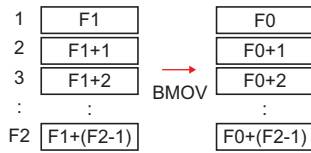

#### DWORD

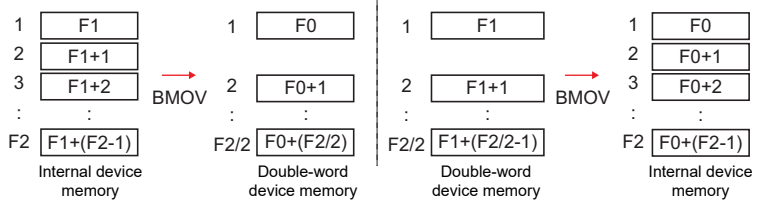

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range


	WORD	DWORD
F0	0000 - FFFF	00000000 - FFFFFFFF
F1	(HEX)	(HEX)
F2	0 - 4096	0 - 4096

### Example

- \$u100 = PLC1 [D200] C : 3 (BMOV) (W)



- PLC2 [1:#C100] = \$u100 C : 4 (BMOV) (D) or  
 PLC2 [1:#C100] = \$u100 C : 3 (BMOV) (D)

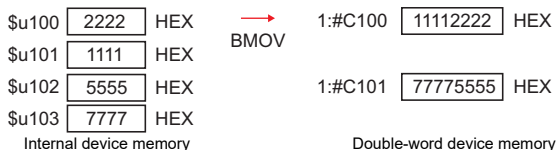


- \$u100 = PLC2 [1:#C100] C : 4 (BMOV) (D) or  
 \$u100 = PLC2 [1:#C100] C : 3 (BMOV) (D)




### Supplemental remarks

- If  Permit Double-Word Transfer by BMOV is not checked on the [General Settings] tab window ([System Setting] → [Unit Setting] → [General Settings]), DWORD cannot be selected.  
 If BMOV in double-word device memory is executed though the option is not checked, the following results:

PLC2 [1:#C100] = \$u100 C : 4 (BMOV)

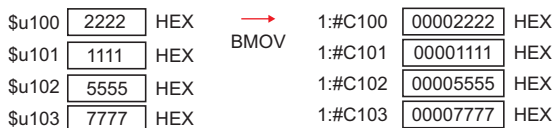

\$u100 = PLC2 [1:#C100] C : 4 (BMOV)

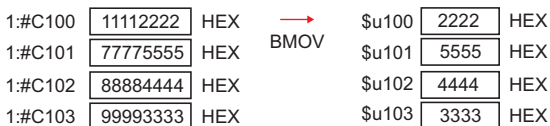

- The result of macro execution is stored in \$s1057.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**CVMOV**


All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 C : F2 (CVMOV)(W)..... WORD**  
**F0 = F1 C : F2 (CVMOV)(D)..... DWORD**


**Function: Block transfer**

This macro command is used to transfer the data at the location starting from the address specified in [F1] in a block to the top address in [F0]. The data count is specified in [F2]. Depending on the PLC models, data conversion takes place at the same time.

**WORD**

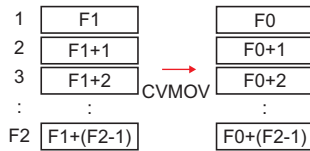

**DWORD**

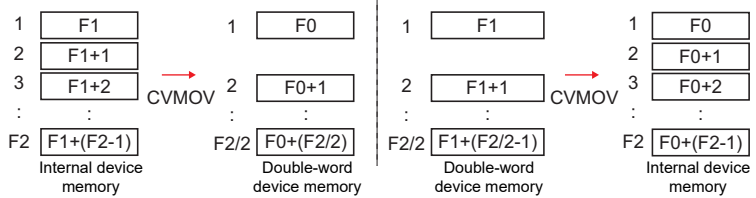

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD
F0	0000 - FFFF	00000000 - FFFFFFFF
F1	(HEX)	(HEX)
F2	0 - 4096	0 - 4096

**Example**

Refer to the operation example applicable to your PLC model. If any PLC other than listed below is in use, the operation identical to the BMOV command takes place.

Device selection		Remarks	Operation
Fuji Electric	MICREX-F Series		2
Hitachi	HIDIC-S10/2 $\alpha$ , S10mini		1
	HIDIC-S10/2 $\alpha$ , S10mini (Ethernet)		
	HIDIC-S10/4 $\alpha$		
	HIDIC-S10/ABS		
	HIDIC-S10V		
	HIDIC-S10V (Ethernet)		
OMRON	All models	[Transmission Mode: Transmission Mode 2] in the [Communication Setting] tab window	2
Siemens	S5 PG Port*		1
	S7		
	S7-200PPI		
	S7-300/400MPI		
	TI500/505		
Yaskawa	Memobus	[Transmission Mode: Type 1] in the [Communication Setting] tab window	2


Device selection (temperature controller / servo / inverter)		Remarks	Operation
IAI	PCON/ACON/SCON(MODBUS RTU)		1

- Operation 1: With Hitachi's PLC selected as PLC1
  - \$u100 = PLC1 [FW0064] C : 3 (CVMOV) (W)





In the case of WORD, the operation identical to BMOV takes place.

- \$u100 = PLC1 [FW0064] C : 3 (CVMOV) (D) or
- \$u100 = PLC1 [FW0064] C : 4 (CVMOV) (D)

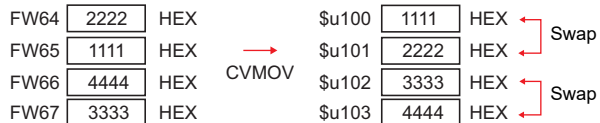


In the case of DWORD, a swap between the higher-order word and the lower-order word takes place.

- Operation 2: With Fuji's PLC selected as PLC2
  - \$u100 = PLC2 [WM100] C : 3 (CVMOV) (W)

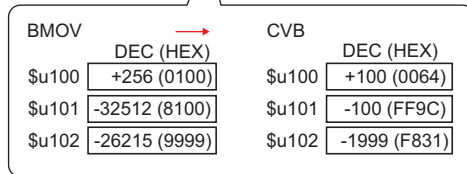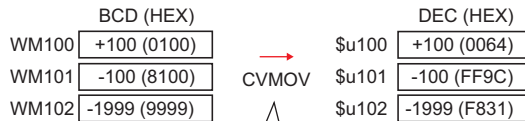

PLC-format data (BCD with signs) converted to binary data is stored.

- PLC2 [BD100] = \$u100 C : 2 (CVMOV) (D)



Binary data converted to PLC-format data (BCD with signs) is stored.

**Supplemental remarks**

- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## CVSMOV

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 C : F2 (CVSMOV) (W) ..... WORD**  
**F0 = F1 C : F2 (CVSMOV) (D)..... DWORD**

### Function: Block transfer with text process conversion

This macro command is used to transmit the data at the location starting from the address specified in [F1] in a block to the top address in [F0]. The data count is specified in [F2]. In transfer from the internal device memory to the PLCn device memory, from the PLCn device memory to the internal device memory, or from PLCm device memory to the PLCn device memory, text conversion is executed at the same time.

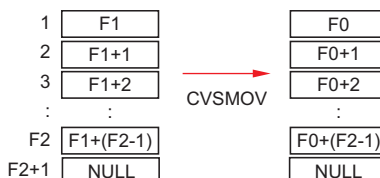

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value	Remarks
F0	Text	102 bytes maximum (Varies depending on the bytes of the text)
F0+1		
:		
F1	Text	102 bytes maximum (Varies depending on the bytes of the text)
F1+1		
:		
F2	0 - 100	100 bytes maximum

### Example

- When the [Communication Setting] → [Text Process] setting for the PLC that is the transfer destination (PLC3) is [MSB → LSB]:  
 - PLC3 [D100] = \$u100 C : 8 (CVSMOV) (W)

\$u100	7	4	7	3	HEX	ts
\$u101	6	9	7	2	HEX	ir
\$u102	6	7	6	E	HEX	gn
\$u103	0	0	0	0	HEX	Null code
↓ CVSMOV						
D100	7	3	7	4	HEX	ts
D101	7	2	6	9	HEX	ir
D102	6	E	6	7	HEX	gn
D103	0	0	0	0	HEX	Null code

**Supplemental remarks**

- A null code is added to the end. Even-number-byte text thereby uses one extra word.
- The result of macro execution is stored in \$s1057.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


## FILL

## F0 = F1 C : F2 (FILL)

All models	<input type="radio"/>
------------	-----------------------

### Function: Transfer all

This macro command is used to write the data specified in [F1] to the words starting from the address in [F0]. The number of the words is specified in [F2].

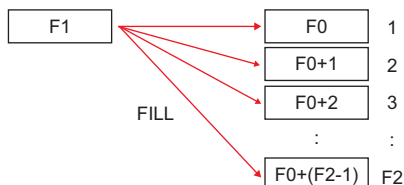

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙		
F1	○			○
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	WORD
F0	0000 - FFFF (HEX)
F1	
F2	0 - 4096

### Example

- \$u100 = \$u200 C : 3 (FILL)



### Supplemental remarks

- When a PLC device memory address is specified for [F0], code conversion is not performed.
- The result of macro execution is stored in \$s1057. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## 4.9 Comparison

### IF (CMP)

All models	<input type="radio"/>
------------	-----------------------

**IF (F0 condition F1) LB F2 (W) ..... WORD**

**IF (F0 condition F1) LB F2 (D) ..... DWORD**

#### Function: Comparison

This macro command is used to compare the data with signs specified in [F0] and [F1] and to execute a jump to the label in [F2] if the comparison satisfies the condition.

#### Conditions

Symbol	Contents
==	Equal
!=	Different
<	Less than
>	Greater than
<=	Less than or equal to
>=	Greater than or equal to

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			○
F1	⊙			○
F2				○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	WORD	DWORD
F0	0000 - FFFF	00000000 - FFFFFFFF
F1	(HEX)	(HEX)
F2	0 - 127	0 - 127

#### Example

- IF (\$u100 == 500) LB 0 (W)  
RET  
LB0  
:

If \$u100 = 500, a jump to LB0 (label 0) takes place and then macro execution proceeds to the next line.

If \$u100 ≠ 500, macro execution proceeds to the next line. In this example, RET terminates the macro.

**Supplemental remarks**

- A label (LB) must be specified as the jump target. If no label exists, "Error: 83" (no destination label for the jump) occurs as a result of an error check on MONITOUCH.
- The result of macro execution is stored in \$s1058.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**IF (TST)**

All models	<input type="radio"/>
------------	-----------------------

**IF condition (F0 & F1) LB F2 (W) ..... WORD**  
**IF condition (F0 & F1) LB F2 (D)..... DWORD**

**Function: Comparison with 0**

This macro command is used to compare the result of [F0] ANDed with [F1] with "0", and to execute a jump to the label specified in [F2] if the comparison satisfies the condition.

**Conditions**

Conditions	Contents
ZERO	0
NON ZERO	Other than 0

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			○
F1	⊙			○
F2				○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD
F0	0000 - FFFF	00000000 - FFFFFFFF
F1	(HEX)	(HEX)
F2	0 - 127	0 - 127

**Example**

- IFNZ (\$u100 & 8000H) LB0 (W)  
RET  
LB0  
:

If bit 15 at \$u100 is set (ON), a jump to LB0 (label 0) takes place and then macro execution proceeds to the next line.

If bit 15 at \$u100 is reset (OFF), macro execution proceeds to the next line. In this example, RET terminates the macro.

**Supplemental remarks**

- A label (LB) must be specified as the jump target. If no label exists, "Error: 83" (no destination label for the jump) occurs as a result of an error check on MONITOUCH.
- The result of macro execution is stored in \$s1058. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**IF**

All models	<input type="radio"/>
------------	-----------------------

**IF (F0 condition 1) F1 (W) ..... WORD**  
**IF (F0 condition 1) F1 (D) ..... DWORD**  
**IF condition 2 (F0) (B) ..... BIT**  
**(1)**  
**ELSE**  
**(2)**  
**ENDIF**

**Function: Conditional branch**

For WORD or DWORD, this macro command is used to compare [F0] and [F1], and to execute processing (1) if true, or (2) if false.

For BIT, [F0] and condition 2 is compared, and processing (1) is executed if true, or (2) if false.

Processing of "ELSE" and (2) can be omitted.



**Condition 1**

Symbol	Contents
==	Equal
!=	Different
<	Less than
>	Greater than
<=	Less than or equal to
>=	Greater than or equal to

**Condition 2**

Symbol	Contents
Z	0
NZ	Other than 0

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	○
F1	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD	BIT
F0	-32768 - +32767	-2147483648 - +2147483647	0, 1
F1	(Decimal system with signs)	(Decimal system with signs)	-

**Example**

- For WORD comparison  
 IF (\$u100 < 10) (W)  
 \$u100 = \$u100 + 1 (W)  
 ELSE  
 \$u100 = 0 (W)  
 ENDIF  
 "\$u100 = \$u100 + 1" is executed when \$u100 is smaller than 10. When \$u100 is 10 or more, "\$u100 = 0" is executed.

- For BIT comparison  
 IFNZ (\$u100-00) (B)  
 \$u100 = \$u100 + 1 (W)  
 ELSE  
 \$u100 = 0 (W)  
 ENDIF  
 “\$u100 = \$u100 + 1” is executed when \$u100-00 is set (ON). When \$u100-00 is reset (OFF), “\$u100 = 0” is executed.

**Restrictions**

- IF-ELSE-ENDIF commands can be nested up to 8 levels.

**Supplemental remarks**

- An error occurs to the macro editor when any of the following conditions is met.

1. When IF-ELSE-ENDIF commands are nested beyond 8 levels;

Ex.: IF (\$u100 > 0)  
       IF (\$u100 < 10)  
           :  
       IF (\$u200 == 1)  
       ENDIF

) × There are 9 or more IF commands between IF-ENDIF commands.

2. When the number of IF commands is not the same as the one of ENDIF commands;

Ex.: IF (\$u100 == 0)  
       IF (\$u100 == 0)  
       ENDIF

) × There are two IF commands while there is one ENDIF command.

3. When the number of IF commands is not the same as the one of ELSE commands;

Ex.: IF (\$u100 == 0)  
       ELSE  
       ELSE  
       ENDIF

) × There is one IF command while there are two ELSE commands.

4. When FOR and NEXT commands are specified in a series of IF-ELSE-ENDIF commands.

Ex.: IF (\$u100 == 0)  
       FOR 10  
       ELSE  
       ENDIF  
       NEXT

) × Only ELSE and ENDIF commands are specified between FOR and NEXT commands.

- The result of macro execution is stored in \$s1059.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error*

\* When reading from [F0] and [F1] ends in failure, an error occurs and “-1” is stored in \$s1059.  
 When an execution error occurs, it is regarded as a fault.

**IF (MULTI)  
IFELSE (MUITI)**

All models	<input type="radio"/>
------------	-----------------------

**IF(F0 condition 1 F1) AND/OR... (F6 condition 4 F7) THEN (W)  
... WORD**

**IF(F0 condition 1 F1) AND/OR... (F6 condition 4 F7) THEN (D)  
... DWORD**

(1)

**IFELSE(F0' condition 1 F1') AND/OR... (F6' condition 4 F7')  
THEN (W) ... WORD**

**IFELSE(F0' condition 1 F1') AND/OR... (F6' condition 4 F7')  
THEN (D) ... DWORD**

(2)

**ELSE**

(3)

**ENDIF**

**Function: Multiple conditional branches (IF AND/OR THEN)**

A maximum of 4 conditions can be specified.

Compare the ((condition 1 AND/OR condition 2) AND/OR condition 3) AND/OR condition 4. If the conditions are satisfied, execute process (1). If not satisfied, execute IFELSE and following processes.

AND and OR can be mixed within a single statement.

"IFELSE", "ELSE", process (2), process (3), condition 3 and condition 4 can be omitted.

**Function: Reconditional branches (IFELSE AND/OR THEN)**

This command is used to execute a conditional branch if the IF command in the same nest or the IFELSE command immediately preceding this command is not satisfied.

A maximum of 4 conditions can be specified.

Compare the ((condition 1 AND/OR condition 2) AND/OR condition 3) AND/OR condition 4. If the conditions are satisfied, execute process (2). If not satisfied, execute process (3).

AND and OR can be mixed within a single statement.

"ELSE", condition 3 and condition 4 can be omitted.

**Condition**

Symbol	Contents
==	Equal
!=	Different
<	Less than
>	Greater than
<=	Less than or equal to
>=	Greater than or equal to

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0 - F7 F0' - F7'	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range

	WORD	DWORD
F0 - F7	-32768 - +32767	-2147483648 - +2147483647
F0' - F7'	(Decimal system with signs)	(Decimal system with signs)

### Example

If there are three conditions

```

• IF($u100 < 100) AND ($u200 > 100) OR ($u300 == 0) THEN (W) ] 1.
  $u100 = $u100 + 1 (W)
  IFELSE($u100 >= 100) AND ($u200 < 20) OR ($u300 == 100) THEN (W) ] 2.
  $u200 = $u200 + 1 (W)
  ELSE
  $u300 = $u300 + 1 (W) ] 3.
  ENDIF

```

- \$u100 = \$u100 + 1 is executed when the (\$u100 < 100 AND \$u200 > 100) or \$u300 = 0.
- If the condition of step1. is not satisfied, execute \$u200 = \$u200 + 1, when (\$u100 >= 100 AND \$u200 < 20) or \$u300 = 100.
- If condition of step1. or 2. is not satisfied, execute \$u300 = \$u300 + 1.

### Restrictions

- IF-ELSE-ENDIF commands can be nested up to 8 levels.
- Up to 10 IFELSE (re-conditional branch) can be used within one IF-ELSE-ENDIF command.

### Supplemental remarks

• An error occurs to the macro editor when any of the following conditions is met.

- When IF-ELSE-ENDIF commands are nested beyond 8 levels;

```

Ex.: IF($u100 > 0) AND ($u100 < 100) THEN
      IF($u101 == 1) AND ($u102 == 1) THEN
          :
      IF ($u200 == 1)
      ENDIF

```

) ✘ There are 9 or more IF commands between IF-ENDIF commands.

- If there are more than 11 IFELSE commands within one IF-ELSE-ENDIF command.;

```

Ex.: IF($u100 > 0) AND ($u100 < 100) THEN
      IFELSE($u101 == 1) AND ($u102 == 1) THEN
      IFELSE($u101 == 2) AND ($u102 == 2) THEN
          :
      IFELSE($u101 == 11) AND ($u102 == 11) THEN
      ENDIF

```

) ✘ There are 11 or more IFELSE commands between IF-ENDIF commands.

- When the number of IF commands is not the same as the one of ENDIF commands;

```

Ex.: IF($u100 == 0) AND ($u101 == 0) THEN
      IF($u102 == 1) AND ($u103 == 1) THEN
      ENDIF

```

) ✘ There are two IF commands while there is one ENDIF command.

4. When the number of IF commands is not the same as the one of ELSE commands;

```
Ex.: IF($u100 == 0) AND ($u101 == 0) THEN
      ELSE
      ELSE
      ENDIF
```



There is one IF command while there are two ELSE commands.

5. When FOR and NEXT commands are specified in a series of IF-ELSE-ENDIF commands.

```
Ex.: IF($u100 == 0) AND ($u101 == 0) THEN
      FOR 10
      ELSE
      ENDIF
      NEXT
```



Only ELSE and ENDIF commands are specified between FOR and NEXT commands.

- The result of macro execution is stored in \$s1059. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error*

\* When reading from [F0] - [F7], [F0'] - [F7'] ends in failure, an error occurs and "-1" is stored in \$s1059. When an execution error occurs, it is regarded as a fault.



**SELECT\_CASE**  
**CASE**

All models	<input type="radio"/>
------------	-----------------------

**SELECT\_CASE F0 (W) ..... WORD**  
**SELECT\_CASE F0 (D) ..... DWORD**

**CASE condition F0**

(1)

**CASE\_ELSE**

(2)

**ENDSELECT**

**Function: Multiple conditional branches (CASE statement)**

This macro command is used to compare the data specified in [F0] and [F0] in CASE statements, and to jump to the process (1) of satisfied CASE condition. If the condition is not satisfied, execute process (2). A maximum of 10 CASE statements can be added.

**Condition**

Symbol	Contents
==	Equal
!=	Different
<	Less than
>	Greater than
<=	Less than or equal to
>=	Greater than or equal to

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)  
⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	WORD	DWORD
F0	-32768 - +32767 (Decimal system with signs)	-2147483648 - +2147483647 (Decimal system with signs)

**Example**

```

• SELECT_CASE $u100 (W)
  CASE == 5
    $u101 = 1 (W)
  CASE == 10
    $u101 = 2 (W)
  CASE == 15
    $u101 = 3 (W)
  CASE_ELSE
    $u101 = 0 (W)
ENDSELECT

```

"\$u101 = 1" is executed when \$u100 = 5, "\$u101 = 2" is executed when \$u100 = 10, and "\$u101 = 3" is executed when \$u100 = 15. Otherwise, "\$u101 = 0" is executed.

**Restrictions**

- SELECT\_CASE-CASE-ENDSELECT commands can be nested up to 8 levels.

**Supplemental remarks**

- An error occurs to the macro editor when any of the following conditions is met.

1. When SELECT\_CASE-CASE-ENDSELECT commands are nested beyond 8 levels;  
 Ex.:   SELECT\_CASE \$u100 (W)  
           SELECT\_CASE \$u101 (W)  
                   :  
           SELECT\_CASE \$u108(W)  
           ENDSELECT

) \* There are 9 or more SELECT\_CASE commands between SELECT\_CASE-ENDSELECT commands.

2. When the number of SELECT\_CASE commands is not the same as the one of ENDSELECT commands;

Ex.:   SELECT\_CASE \$u100 (W)  
           SELECT\_CASE \$u101 (W)  
           ENDSELECT

) \* There are two SELECT\_CASE commands while there is one ENDSELECT command.

3. When the number of SELECT\_CASE commands is not the same as the one of CASE\_ELSE commands;

Ex.:   SELECT\_CASE \$u100 (W)  
           CASE\_ELSE  
           CASE\_ELSE  
           ENDSELECT

) \* There is one IF command while there are two ELSE commands.

4. When FOR and NEXT commands are specified in a series of ISELECT\_CASE-CASE\_ELSE-ENDSELECT commands.

Ex.:   SELECT\_CASE \$u100 (W)  
           FOR 10  
               CASE\_ELSE  
           ENDSELECT  
           NEXT

) \* Only CASE\_ELSE and ENDSELECT commands are specified between FOR and NEXT commands.

5. When the CASE statement exceeds 10;

Ex.:   SELECT\_CASE \$u100 (W)  
           CASE == 0  
           CASE == 1  
                   :  
           CASE == 10  
           ENDSELECT

) \* There are 11 or more CASE statements between SELECT\_CASE-ENDSELECT commands.

- The result of macro execution is stored in \$s1059. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error*

When reading from [F0] ends in failure, an error occurs and “-1” is stored in \$s1059. When an execution error occurs, it is regarded as a fault.

## 4.10 Macro Operation Control


### CALL

All models	<input type="radio"/>
------------	-----------------------

### CALL F0

#### Function: Macro block number designation

This macro command is used to execute the macro block specified in [F0].

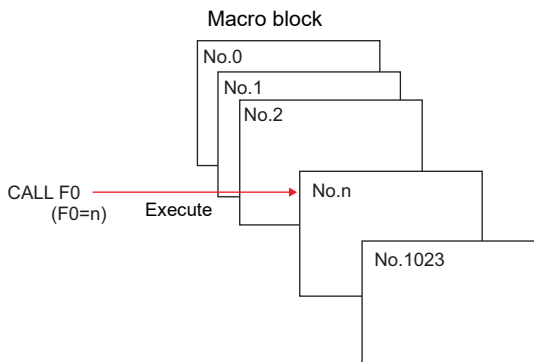

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)


: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	0 - 1023


#### Example

- CALL 5

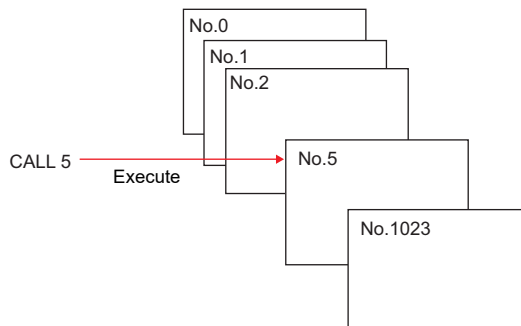

**Supplemental remarks**

- If the macro block number called by CALL is not registered, an error check triggers a warning.
- The macro command can be nested up to 8 levels.  
Ex.) 2 levels

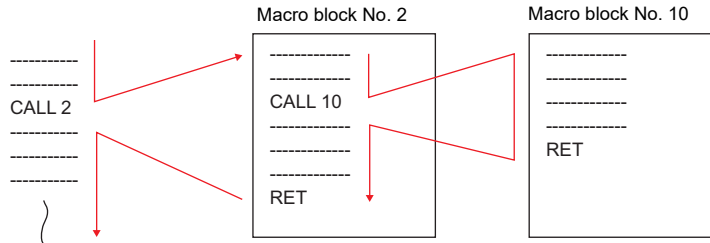

- The result of macro execution is stored in \$s1059.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	End in error (9 or more levels of macro commands are nested, an attempt is made to execute macro commands of 160001 lines or more, etc.)


## JMP

All models	<input type="radio"/>
------------	-----------------------

## JMP LB F0

### Function: Unconditional jump

This macro command is used to execute a jump to the label specified in [F0].

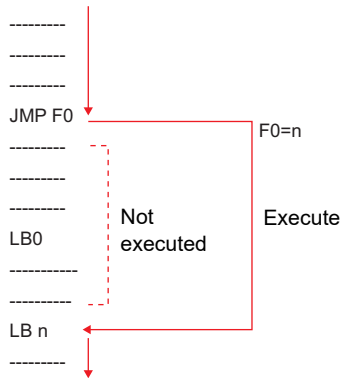

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0				<input type="radio"/>

: Setting enabled (indirect designation disabled)


: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	0 - 127

### Example

- JMP LB5

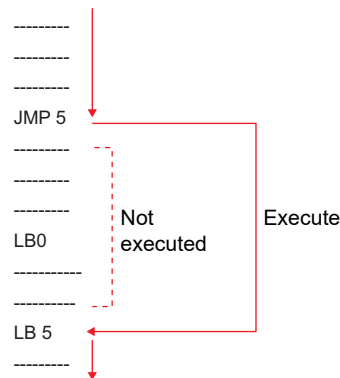

### Supplemental remarks

- A label (LB) must be specified as the jump target. If no label exists, error 83 (there is no destination label for the jump) will be detected by error check on MONITOUCH.
- The result of macro execution is stored in \$s1059.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	End in error (number of executed macro lines of 160001 or greater, etc.)


**LABEL**

All models	<input type="radio"/>
------------	-----------------------

**LB F0:**

**Function: Label number**

This macro command is used to create jump target labels for CMP, TST, and JMP.

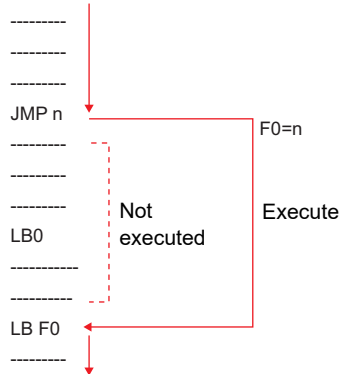

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0				○

○ : Setting enabled (indirect designation disabled)

◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	0 - 127

**Supplemental remarks**

- A label (LB) must be specified as the jump target. If no label exists, error 83 (there is no destination label for the jump) will be detected by error check on MONITOUCH.
- The result of macro execution is stored in \$s1059. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	End in error (number of executed macro lines of 160001 or greater, etc.)

## FOR/NEXT

All models	<input type="radio"/>
------------	-----------------------

## FOR F0 NEXT

### Function: FOR - NEXT

This macro command is used to execute a loop between FOR and NEXT the number of times specified in [F0].

```
FOR F0
  $u300 = $u300+5 ← The loop executes the number
NEXT                               of times specified in F0.
```

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)  
 : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	0 - 65535

### Example

```
$u300 = 0 (W)
$u301 = 0 (W)
FOR 3
  $u300 = $u300 + 1 (W)
  FOR $u400
    $u301 = $u301 + 5 (W)
  NEXT
NEXT
```

If \$u400 = 5, the loop is executed 5 times.

The loop is executed 3 times.

- Result  
 $\$u300 = 3$   
 $\$u301 = 75$

### Supplemental remarks

- Loop between FOR and NEXT can be nested\* up to 8 levels. Nesting beyond 8 levels triggers error 81 (macro: FOR-NEXT command number is wrong) as a result of error check on MONITOUCH.
- \* Nesting means incorporating a FOR-NEXT loop into a loop of the same kind.

```
:
FOR 2
:
FOR 3
:
NEXT
:
NEXT
:
```

- The result of macro execution is stored in \$s1059. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	End in error (nesting of 9 or more levels / number of executed macro lines of 160001 or greater, etc.)



## RET

All models	<input type="radio"/>
------------	-----------------------

## RET


### Function: Macro finish

This macro command is used to finish a macro. Any lines after RET are not executed.

\$u300 = 1 (W)	← Execute
\$u301 = 10 (W)	← Execute
RET	← Finish
\$u302 = 100 (W)	← Not executed
\$u303 = 1000 (W)	← Not executed

### Supplemental remarks

- In the case of a macro block called by CALL, RET executes a return to the original sequence.

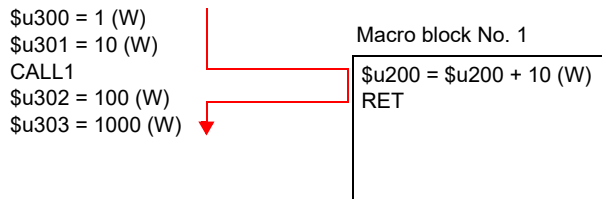

SWRET


All models	<input type="radio"/>
------------	-----------------------

SWRET


**Function: Execute switch function**

This macro command is used in a switch ON macro.

- With SWRET:  
Processing takes place in the order of the interruption of the macro, the execution of the switch function, and the execution of the remaining program of the macro.

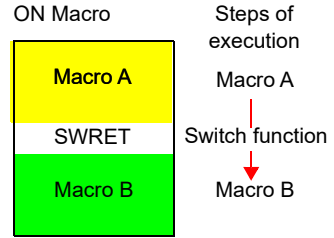


- Without SWRET:  
Processing takes place in the order of the execution of the switch ON macro and the execution of the switch function.

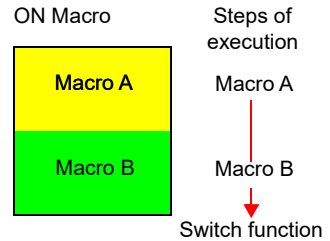

4


**Example**

- In a case where a macro runs based on the result written by the ENT key (in the entry mode) to the entry target D200, executing the switch function (for writing) by SWRET is required.

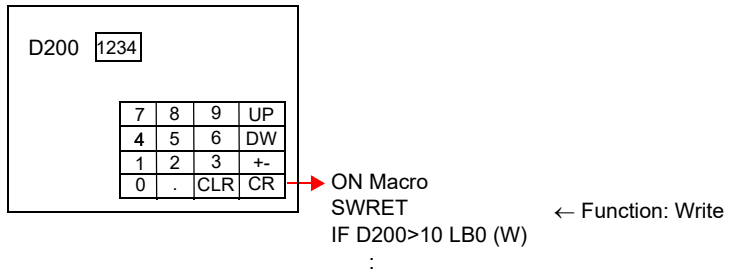

**Supplemental remarks**

- The macro command is valid in switch ON macros. The command, however, is not executed normally in the following cases:
  - SWRET exists in a macro block called by CALL.
  - JMP or FOR-NEXT triggers a movement to a label before the execution of SWRET.

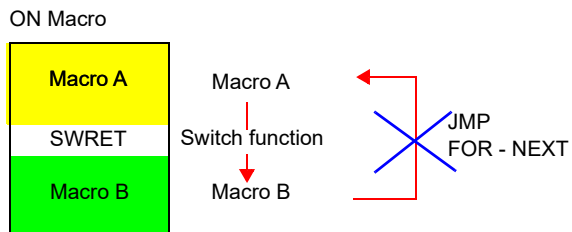


**EN\_INT**

All models	<input type="radio"/>
------------	-----------------------


**EN\_INT**

**Function: Enabling interruption of switch processing**

If a switch on MONITOUCH is pressed during the execution of macro processing, the switch processing is not executed immediately but is delayed until completion of the macro sheet.

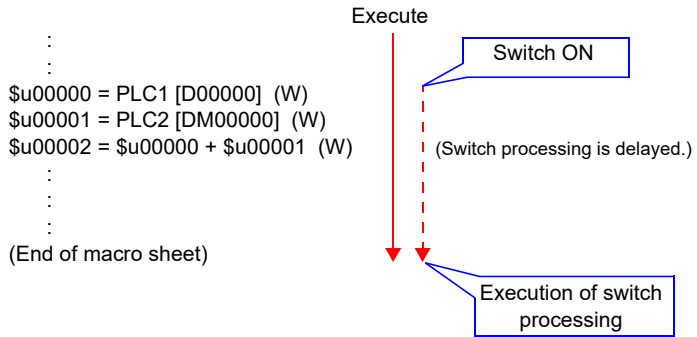

When this command is executed while switch processing is pending, macro processing is suspended while the switch processing is executed. On completion of the switch processing macro execution is continued from the point of suspension.

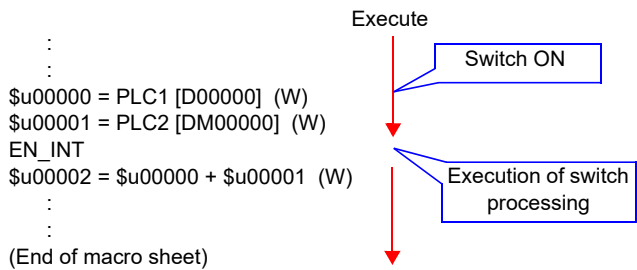

**Supplemental remarks**

- If there is no switch processing pending, nothing happens in response to this command.

## 4.11 FROM Backup

In the FP-ROM (flash memory) for the MONITOUCH screen program, its empty area can be used to back up the PLC device memory, internal device memory, and memory card. A maximum of 16k words can be allocated to the backup area.

### FROM\_WR

All models	<input type="radio"/>
------------	-----------------------

### FROM\_WR F0 F1

#### Function: Write to FROM

This macro command is used to write the data of words starting from the address specified in [F0] to the FP-ROM. The number of the words is specified in [F1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1				○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	Address in each device memory
F1	1 - 16384 (= 16k words)

#### Supplemental remarks

- When using the macro command, go to the [General Settings] tab window in the [Unit Setting] dialog ([System Setting] → [Unit Setting] → [General Settings]). On the window, check  Use Internal Flash ROM as Back-up Area].
  - \* Checking this option reduces the available screen program capacity by 66 kbytes.
- Do not turn off the power supply of MONITOUCH while executing the macro command.
- Each FP-ROM allows 100,000 write operations. (Each execution of FROM\_WR is counted as one time, regardless of the number of words.) It is thereby recommended that backup data be read after power-on and be written before power-off.
- Do not execute FROM\_WR in every cycle using a CYCLE macro, etc.
- Writing to FP-ROM takes three to five seconds.
- The result of macro execution is stored in \$s728.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## FROM\_RD

## FROM\_RD F0 F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Read from FROM**

This macro command is used to read the data of words from the FP-ROM into the address specified in [F0]. The number of the words is specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1				○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	Address in each device memory
F1	1 - 16384 (= 16k words)

**Supplemental remarks**

- When using the macro command, go to the [General Settings] tab window in the [Unit Setting] dialog ([System Setting] → [Unit Setting] → [General Settings]). On the window, check [ Use Internal Flash ROM as Back-up Area].  
\* Checking this option reduces the available screen program capacity by 66 kbytes.
- Do not execute FROM\_RD in every cycle using a CYCLE macro, etc.
- The result of macro execution is stored in \$s728.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.12 Printer

The following macro commands are used to send commands to the printer connected with MONITOUCH:

### MR\_OUT

All models	<input type="radio"/>
------------	-----------------------

### MR\_OUT F0

#### Function: Execution of MR400 format table call setting number

This macro command is used to print the data in the format table (call setting number) specified in [F0].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	1 - 128: Format table (call setting) number

#### Example

- MR\_OUT 50  
The above program prints the contents of the MR400 format table (call setting) No. 50.



#### Supplementary remarks

- The macro command is valid when [MR-400] is selected for [Model] at [System Setting] → [Hardware Setting] → [Printer].
- The result of macro execution is stored in \$s1060.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**MR\_REG**

All models	<input type="radio"/>
------------	-----------------------

**MR\_REG F0**

**Function: Execution of the MR400 format table registration setting number**

This macro command is used to write the data in the format table (registration setting number) specified in [F0] to the memory card.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	○


○: Setting enabled (indirect designation disabled)  
 ⊙: Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	1 - 128: Format table (registration setting) number


**Example**

- MR\_REG 22

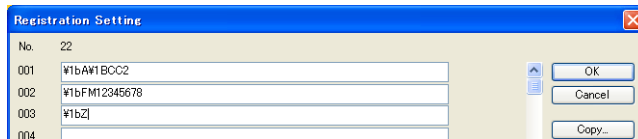

The memory card can be formatted.

- MR\_REG 1

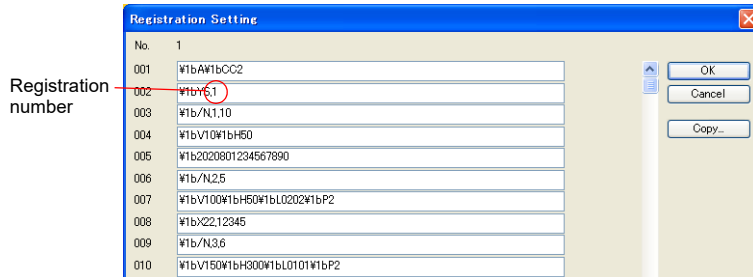

First: Format is registered as registration No. 1 in the MR400 memory card.

Second: Registration No. 1 contents are printed and the format can be checked.



**Supplementary remarks**

- The macro command is valid when [MR-400] is selected for [Model] in the [System Setting] → [Hardware Setting] → [Connection Device Selection] window of a printer.
- The result of macro execution is stored in \$s1060.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## OUT\_PR

All V9 models	○
X1	△
TELLUS4 HMI	△

## OUT\_PR F0 F1

### Function: Command output to printer

This macro command is used to send [F1]-specified bytes of data from the address specified in [F0] to the printer.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	○

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Command for each printer*
F0+1	
:	
F0+ (F1/2-1)	
F1	1 - 255: Number of bytes

\* X1 and TELLUS4 are supported only when printing with a barcode label printer from SATO.

### Example

- Paper feed and auto cut are performed on the CBM (293) printer.

From the command table in the CBM printer manual:

1BH4AHn (paper feed n/360 in.)

Auto cutter drive partial cut: 1BH6DH

Code to be sent to the printer: 1BH 4AH 96H 1BH 6DH  
n=150

Macros

\$u100 = 4A1BH

\$u101 = 1B96H

\$u102 = 006DH

OUT\_PR \$u100 5


} Set in the little endian\* system.

### Supplementary remarks

- Little endian:  
Data of two bytes or more are divided and transferred one byte at a time.  
This divided data is recorded/transmitted from the least significant byte.

Little endian

Big endian



- The command name varies by the printer model.  
MONITOUCH does not check the validity of the command before transmitting the command. Refer to the instruction manual for the printer and set the command correctly.
- The result of macro execution is stored in \$s1060.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.13 Video

### VIDEO

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

### VIDEO MEMORY F1 . . . . . Device Memory Designation

#### Function 1: Size

This macro command is used to change the video display size to the size specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)


⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	0: Size
F1+1	0: 160 × 120
	1: 320 × 240
	2: 640 × 480
	3: 640 × 240

#### Example

```
$u100 = 0 (W) [Size]
$u101 = 0 (W) [160 × 120]
VIDEO MEMORY $u100
```

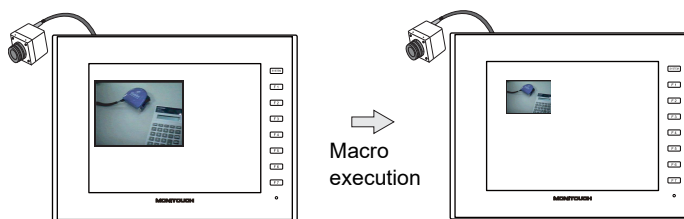

The above program changes the video display size to 160 × 120.

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 2: Size (dot)

This macro command is used to change the video display size to the size specified in [F1+1] and [F1+2] (by dots).

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

◎: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MEMORY
F1	7: Size (dot)
F1+1	1: ┆ Width 1024:
F1+2	1: ┆ Height 768:

### Example

\$u100 = 7 (W) [Size (dot)]

\$u101 = 100 (W) [Width 100]

\$u102 = 75 (W) [Height 75]

VIDEO MEMORY \$u100

The above program changes the video display size to 100 × 75.

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 3: Channel

This macro command is used to change the video display to the channel specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range


	Value
F0	MEMORY
F1	1: Channel
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH

#### Example

\$u100 = 1 (W) [Channel]

\$u101 = 2 (W) [2CH]

VIDEO MEMORY \$u100

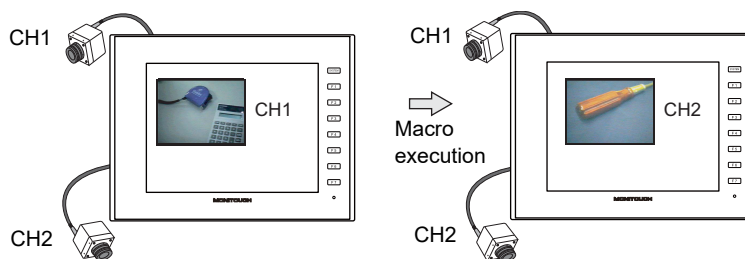

The above program changes the video display to channel 2.

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 4: Brightness

This macro command is used to change the brightness of the video display to the brightness specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

◎: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	3: Brightness
F1+1	0: Dark 1 255: Bright

#### Example

- \$u100 = 3 (W) [Brightness]
- \$u101 = 100 (W) [Brightness 100]
- VIDEO MEMORY \$u100

The above program changes the brightness level of the video display to "100".

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 5: Contrast

This macro command is used to change the contrast of the video display to the contrast specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	4: Contrast
F1+1	0: Low ? 255: High

#### Example

- \$u100 = 4 (W) [Contrast]
  - \$u101 = 150 (W) [Contrast 150]
- VIDEO MEMORY \$u100

The above program changes the contrast level of the video display to "150".

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 6: Color intensity

This macro command is used to change the color intensity of the video display to the intensity specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

◎: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	5: Color intensity
F1+1	0: Light ? 255:Dark

#### Example

- \$u100 = 5 (W) [Color intensity]
  - \$u101 = 120 (W) [Color intensity 120]
- VIDEO MEMORY \$u100

The above program changes the color intensity level of the video display to "120".

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
  - The result of macro execution is stored in \$s1061.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



### Function 7: Save settings/reset to default

This macro command is used to save the current video settings or to reset them to default and then writes them to FROM.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value	Default	
F0	MEMORY	-	
F1	6: Video_INF	-	
F1+1	0: SAVE	-	
F1+1	1: DEFAULT	BRIGHT	128
		CONTRAST	128
		COLOR	128

#### Example

- \$u100 = 6 (W) [Video\_INF]  
\$u101 = 0 (W) [SAVE]  
VIDEO MEMORY \$u100

The above program saves the video settings. The settings are maintained even after the V series is turned off.

#### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- Do not turn off the power supply of the V series while executing the macro command.
- After the SAVE command has been executed, the video settings are maintained even after power-off.
- Do not execute the command every cycle using cycle macros or other methods.
- When you use the VIDEO MEMORY command to return the video settings to their default values, the V series may stop for about one second.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO SIZE F1 ..... Command Designation

### Function: Size


This macro command is used to change the video display size to the size specified in [F1].

### Setting range

	Value
F0	SIZE
F1	160*120 320*240 640*480 640*240

### Example

- VIDEO SIZE 160\*120

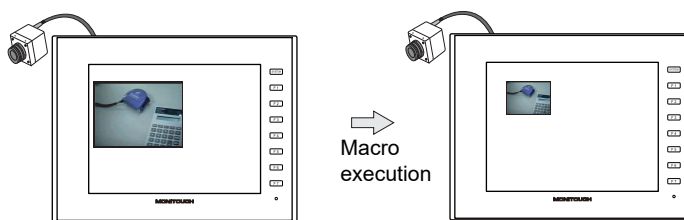

The above program changes the video display size to 160 × 120.

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO SIZE F1 F2 ..... Command Designation

### Function: Size (dot)

This macro command is used to change the video display size to the size specified in [F1] and [F2] (by dots).

### Setting range

	Value
F0	SIZE(Dot)
F1	1: ? Width 1024:
F2	1: ? Height 768:

### Example

VIDEO SIZE 100 75

The above program changes the video display size to 100 × 75.

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO SEL\_CH F1 ..... Command Designation

### Function: Channel


This macro command is used to change the video display to the channel specified in [F1].

### Setting range

	Value
F0	SEL_CH
F1	1 2 3 4

### Example

- VIDEO SEL\_CH2

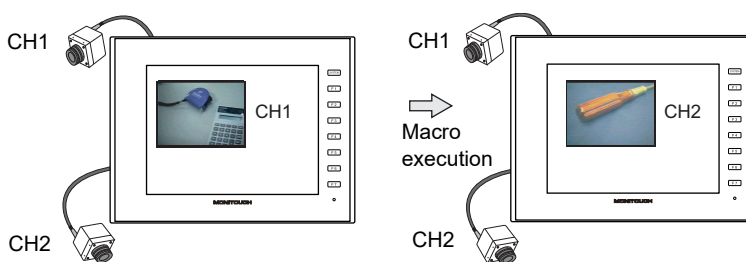

The above program changes the video display to channel 2.

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO BRIGHT F1 . . . . . Command Designation

### Function: Brightness

This macro command is used to change the brightness of the video display to the brightness specified in [F1].

### Setting range

	Value
F0	BRIGHT
F1	0: Dark 255: Bright

### Example

- VIDEO BRIGHT 100

The above program changes the brightness level of the video display to "100".

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO CONTRAST F1 ..... Command Designation

### Function: Contrast

This macro command is used to change the contrast of the video display to the contrast specified in [F1].

### Setting range

	Value
F0	CONTRAST
F1	0: Low 255: High

### Example

- VIDEO CONTRAST 150

The above program changes the contrast level of the video display to "150".

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO COLOR F1 . . . . . Command Designation

### Function: Color intensity

This macro command is used to change the color intensity of the video display to the intensity specified in [F1].

### Setting range

	Value
F0	COLOR
F1	0: Light 255: Dark

### Example

- VIDEO COLOR 120

The above program changes the color intensity level of the video display to "120".

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- The result of macro execution is stored in \$s1061.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO INF F1 ..... Command Designation

### Function: Save settings/reset to default

This macro command is used to save the current video settings or to reset them to default and then writes them to FROM.

### Setting range

	Value	Default	
F0	INF	-	
F1	SAVE	-	
F1	DEFAULT	BRIGHT	128
		CONTRAST	128
		COLOR	128

### Example

- VIDEO INF SAVE

The above program saves the video settings. The settings are maintained even after the V series is turned off.

### Supplementary remarks

- The macro command is valid when a [Video Overlap] display is placed.
- Do not turn off the power supply of the V series while executing the macro command.
- After the SAVE command has been executed, the video settings are maintained even after power-off.
- Do not execute the [VIDEO INF] command every cycle using cycle macros or other methods.
- The execution of "VIDEO INF DEFAULT" may cause the V series to pause approximately for one second.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



**VIDEO2**

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

**VIDEO2 MEMORY F1 . . . . . Device Memory Designation**

**Function 1: Single snapshot**

This macro command is used to save a snapshot of the channel specified in [F1+1] to a storage device using the file number specified in [F1+2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○ : Setting enabled (indirect designation disabled)  
 ◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	MEMORY
F1	0: SNAP
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
	-1: Auto *1
F1+2	00000: ? File number
	32767:
	-1: Auto *2

\*1 Auto: CH


- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:  
 When only one channel is displayed, the macro command is executed for the displayed channel.  
 When multiple channels are displayed, the command is invalid.

\*2 Auto: File

If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.  
 When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

**Example**

- \$u100 = 0 (W) [SNAP]
- \$u101 = 1 (W) [1CH]
- \$u102 = 5 (W) [File No. 5]
- VIDEO2 MEMORY \$u100

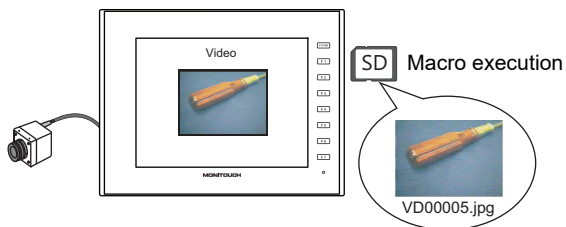**Supplementary remarks**

- The macro command is valid when a video image is displayed on the V series with a storage device connected.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 2: Background snapshot

This macro command is used to save a snapshot of the channel specified in [F1+1] in the size specified in [F1+3] to a storage device using the file number specified in [F1+2].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MEMORY
F1	11: SNAP (background)
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
F1+2	00000: ? File number
	32767:
	-1: Auto *1
F1+3	0: 160 × 120
	1: 320 × 240
	2: 640 × 480
	3: 640 × 240 *2

#### \*1 Auto: File


If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.

When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

#### \*2 The snapshot area is distinguished based on the value at \$s957.

**Example**

- \$u100 = 11 (W) [Background snapshot]
- \$u101 = 1 (W) [1CH]
- \$u102 = 1000 (W) [File No.]
- \$u103 = 0 (W) [Size]
- VIDEO2 MEMORY \$u100

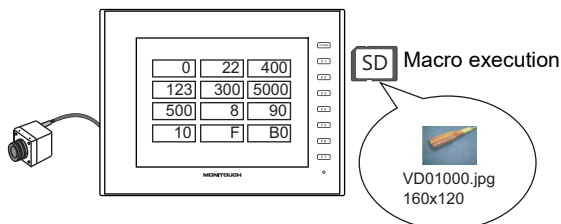

The above program saves the image of channel 1 in a size of 160 × 120 as “VD01000.jpg”.

**Supplementary remarks**

- The macro command is valid when a storage device is connected to the V series.
- Even if no video item setting is made in the screen program, the macro command takes a snapshot of the specified channel.
- If “PAUSE” is being executed for the specified channel, the channel image is re-captured and then a snapshot is taken.
- If the image of the specified channel is being zoomed in, zooming is canceled while the macro command is taking a snapshot.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 3: Strobe snapshot

This macro command is used to save a strobe snapshot of the channel specified in [F1+1] to a storage device using the file number specified in [F1+2].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	1: STROBE
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
	-1: Auto *1
F1+2	00000: ? File number
	32767:
	-1: Auto *2

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.


\*2 Auto: File

If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.

When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

**Example**

- \$u100 = 1 (W) [STROBE]
- \$u101 = 1 (W) [1CH]
- \$u102 = 15 (W) [File No.]
- VIDEO2 MEMORY \$u100

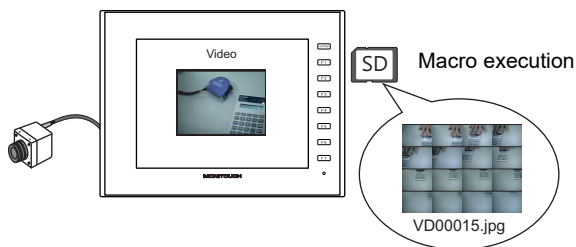**Supplementary remarks**

- The macro command is valid when a video image is displayed on the V series with a storage device connected.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 4: Resize

This macro command is used to resize a video image that was enlarged using the ZOOM macro command or by the strobe snapshot function to its original size.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)


⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	2: RE_SIZE

#### Example

- \$u100 = 2 [RE\_SIZE]  
VIDEO2 MEMORY \$u100

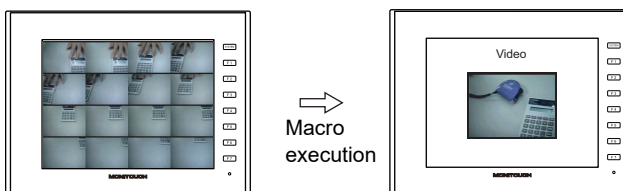

#### Supplementary remarks

- In addition to the RE\_SIZE command, double-clicking an enlarged image resizes it to its original size.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 5: Zoom

This macro command is used to enlarge the image of the channel specified in [F1+1] at the position specified in [F1+2] to 640 × 480.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

◎: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	3: ZOOM
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
	-1: Auto *1
F1+2	0: Centering
	1: Upper right
	2: Lower left

\*1 Auto: CH

- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.


- When a channel is not selected by tapping, the macro command is executed as follows:

When only one channel is displayed, the macro command is executed for the displayed channel.

When multiple channels are displayed, the command is invalid.

#### Example

- \$u100 = 3 (W) [ZOOM]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 0 (W) [Centering]
- VIDEO2 MEMORY \$u100

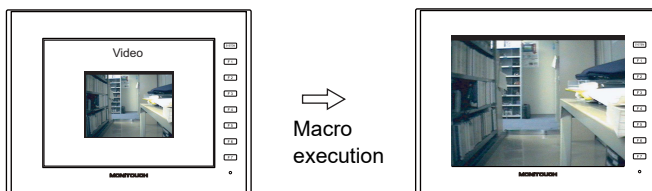

The above program enlarges the image of channel 1.



**Supplementary remarks**

- If this command is executed consecutively, the first action is valid, and the subsequent action is invalid.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 6: Brightness

This macro command is used to adjust the brightness of video images of the channel specified in [F1+1] according to the value specified in [F1+2].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MEMORY
F1	4: BRIGHT
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: Auto *1
F1+2	0: Dark ↕
	31: Bright

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- \$u100 = 4 (W) [BRIGHT]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 10 (W)
- VIDEO2 MEMOERY \$u100

The above program changes the brightness level of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 7: Contrast

This macro command is used to adjust the contrast of video images of the channel specified in [F1+1] according to the value specified in [F1+2].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MEMORY
F1	5: CONTRAST
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: Auto *1
F1+2	0: Low
	?
	31: High

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- \$u100 = 5 (W) [CONTRAST]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 10 (W)
- VIDEO2 MEMORY \$u100

The above program changes the contrast level of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 8: Color intensity

This macro command is used to adjust the color intensity of video images of the channel specified in [F1+1] according to the value specified in [F1+2].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MEMORY
F1	6: COLOR
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: Auto *1
F1+2	0: Light ↕
	31: Dark

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- \$u100 = 6 (W) [COLOR]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 10 (W)
- VIDEO2 MEMORY \$u100

The above program changes the color intensity of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 9: Save settings/reset to default

This macro command is used to save the settings of the channel specified in [F1+1] or to reset the settings to default. The settings made are then written to FROM.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value	Default	
F0	MEMORY	-	
F1	7: VIDEOINF	-	
F1+1	1: 1CH	-	
	2: 2CH		
	3: 3CH		
	4: 4CH		
	5: 5CH (RGB)		
	6: 6CH (RGB)		
	-1: Auto *1		
F1+2	0: SAVE	-	
	1: DEFAULT	BRIGHT	16
		CONTRAST	16
		COLOR	16
		Clip start position	*2
		Image clip size	
		MODE	Odd/even-numbered fields

□: ← V series (return data)

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

\*2 The default setting for the clip start position and the image clip size change according to the input signal. For more information, refer to V9 Series Reference Manual 2.

#### Example

- \$u100 = 7 (W) [VIDEOINF]
- \$u101 = 1 (W) [1CH]
- \$u102 = 0 (W)
- VIDEO2 MEMORY \$u100

The above program saves the video settings for channel 1.

**Supplementary remarks**

- Do not turn off the power supply of the V series while executing the macro command.
- After the SAVE command has been executed, the data is maintained even after power-off.
- Do not execute the command every cycle using cycle macros or other methods.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 10: Pause playback

This macro command is used to pause video playback of the channel specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	8: PAUSE
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: Auto *1

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

#### Example

- \$u100 = 8 (W) [PAUSE]
  - \$u101 = 1 (W) [1CH]
- VIDEO2 MEMORY \$u100

The above program pauses video playback of channel 1.

#### Supplementary remarks

- During the execution of "PAUSE", resizing is disabled.
- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 11: Pause cancel

This macro command is used to resume video playback that has been paused by the PAUSE command.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	9: RESTART
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: Auto *1

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

#### Example

- \$u100 = 9 (W) [RESTART]
- \$u101 = 1 (W) [1CH]
- VIDEO2 MEMORY \$u100

The above program resumes video playback of channel 1.

#### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



### Function 12: Deletion

This macro command is used to delete the snapshot file VDxxxxx.jpg from the storage device.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	10: DELETE
F1+1	00000: ? File number 32767:

#### Example

- \$u100 = 10 (W) [DELETE]
  - \$u101 = 1 (W) [File No.]
- VIDEO2 MEMORY \$u100

The above program deletes the file "VD00001.jpg" from the storage device.

#### Supplementary remarks

- The macro command is valid when a storage device is connected to the V series.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 13: Change periodical snapshot

This macro command is used to change the periodical snapshot operation of the channel specified in [F1+1] to the operation specified in [F1+2].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

◎: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	12: SNAP_SEQ
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
F1+2	0: Stop
	1: Start


#### Example

- \$u100 = 12 (W) [SNAP\_SEQ]
- \$u101 = 1 (W) [1CH]
- \$u102 = 1 (W) [Start]
- VIDEO2 MEMORY \$u100

The above program starts taking periodical snapshots of channel 1.


**Supplementary remarks**

- The interval and total time for taking snapshots periodically is set as follows according to the settings of a video/RGB item in the screen program.
  - When [Periodical Snap] is selected for [Double Click Action]:

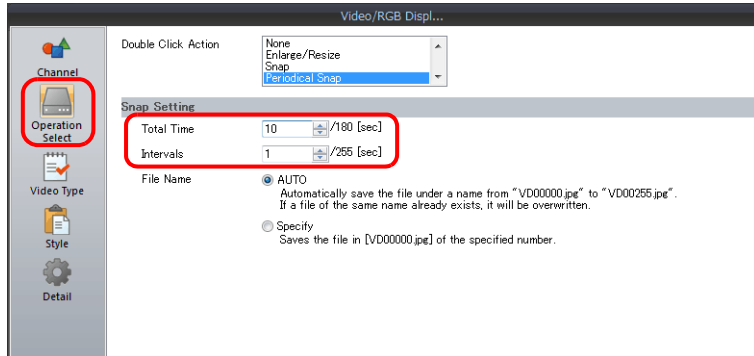

Total Time for Periodical Snapshot	Snapshot Interval
Same as [Operation Select] → [Total Time] setting	Same as [Operation Select] → [Intervals] setting

- When other than [Periodical Snap] is selected for [Double Click Action]:

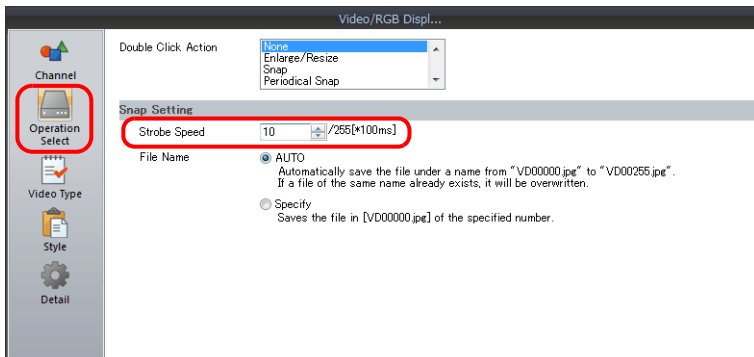

Total Time for Periodical Snapshot	Snapshot Interval
One minute (Fixed)	Same as [Operation Select] → [Strobe Speed] setting*

\* When this setting is shorter than 1 sec, the interval is 1 sec.

- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 14: Change the clip start position

This macro command is used to change the coordinates for starting clipping (clip start position) of the image of the channel specified in [F1+1] according to [F1+2] and [F1+3].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	13: CLIP_POS
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
F1+2	0: Starting X coordinate
	1023:
F1+3	0: Starting Y coordinate
	767:

#### Example

- \$u100 = 13 (W) [CLIP\_POS]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 100 (W) [Starting X coordinate 100]
  - \$u103 = 150 (W) [Starting Y coordinate 150]
- VIDEO2 MEMORY \$u100

The above program changes the clip start position coordinates to (100, 150).

#### Supplementary remarks

- For more information on the clip start position, refer to V9 Series Reference Manual 2.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 15: Change the image clip size

This macro command is used to change the size for clipping (image clip size) the image of the channel specified in [F1+1] according to [F1+2] and [F1+3].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	14: CLIP_SIZE
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	5: 5CH (RGB)
	6: 6CH (RGB)
F1+2	1 - 1024: Width
F1+3	1 - 768: Height

#### Example

- \$u100 = 14 (W) [CLIP\_SIZE]  
 \$u101 = 1 (W) [1CH]  
 \$u102 = 400 (W) [Width: 400]  
 \$u103 = 300 (W) [Height: 300]  
 VIDEO2 MEMORY \$u100

The above program changes the image clip size to 400 × 300 dots.

- \$u200 = 13 (W) [CLIP\_POS]  
 \$u201 = 1 (W) [1CH]  
 \$u202 = 100 (W) [Starting X coordinate: 100]  
 \$u203 = 150 (W) [Starting Y coordinate: 150]  
 VIDEO2 MEMORY \$u200

The above program changes the clip start position coordinates to (100, 150).

#### Supplementary remarks

- For more information on the image clip size, refer to V9 Series Reference Manual 2.
- The result of macro execution is stored in \$s1061.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 16: Change the operation mode

This macro command is used to change the operation mode of the channel specified in [F1+1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	○			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MEMORY
F1	15: MODE
F1+1	1: 1CH
	2: 2CH
	3: 3CH
	4: 4CH
	-1: All
F1+2	0: Odd/even-numbered fields
	1: Odd-number field

#### Example

- \$u100 = 15 (W) [MODE]
  - \$u101 = 1 (W) [1CH]
  - \$u102 = 1 (W) [Odd-number field]
- VIDEO2 MEMORY \$u100

The above program changes the operation mode of channel 1 to odd-numbered field.

#### Supplementary remarks

- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 SNAP F1 F2 ..... Command Designation

### Function: Single snapshot

This macro command is used to save a snapshot of the channel specified in [F1] to a storage device using the file number specified in [F2] as a background process.

### Setting range

	Value
F0	SNAP
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB) Auto *1
F2	VD00000 ? VD32767 Auto *2

\*1 Auto: CH


- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

\*2 Auto: File

If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number. When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

### Example

- VIDEO2 SNAP CH1 VD00005

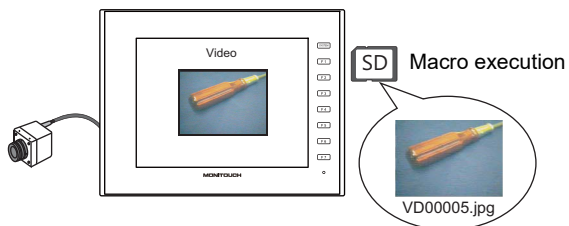

**Supplementary remarks**

- The macro command is valid when a video image is displayed on the V series with a storage device connected.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## VIDEO2 SNAP F1 F2 (Size) . . . . . Command Designation

### Function: Background snapshot

This macro command is used to save a snapshot of the channel specified in [F1] in the desired size to a storage device using the file number specified in [F2].

### Setting range

	Value
F0	SNAP
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB)
F2	VD00000 ? VD32767 Auto *1
<input checked="" type="checkbox"/> Snap in Background	160 × 120 320 × 240 640 × 480 640 × 240 *2

\*1 Auto: File


If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.

When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

\*2 The snapshot area is distinguished based on the value at \$s957.

### Example

- VIDEO2 SNAP CH1 VD01000 160 × 120

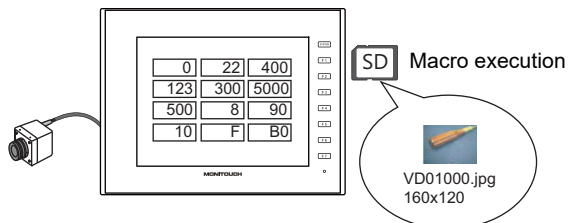

The above program saves the image of channel 1 in a size of 160 × 120 as "VD01000.jpg".

### Supplementary remarks

- The macro command is valid when a storage device is connected to the V series.
- Even if no video item setting is made in the screen program, the macro command takes a snapshot of the specified channel.
- Regardless of \$s931, superimposing of images is not performed.
- If "PAUSE" is being executed for the specified channel, the channel image is re-captured and then a snapshot is taken.
- If the image of the specified channel is being zoomed in, zooming is canceled while the macro command is taking a snapshot.
- The result of macro execution is stored in \$s1061.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 STROBE CH FileNo. . . . . Command Designation

### Function: Strobe snapshot

This macro command is used to save a strobe snapshot of the channel specified in [F1] to a storage device using the file number specified in [F2].

### Setting range

	Value
F0	STROBE
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB) Auto *1
F2	VD00000 ? VD32767 Auto *2

\*1 Auto: CH


- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

\*2 Auto: File

If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number. When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

### Example

- VIDEO2 STROBE CH1 VD00015

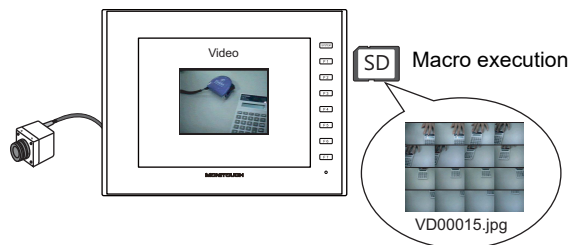

**Supplementary remarks**

- The macro command is valid when a video image is displayed on the V series with a storage device connected.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 RE\_SIZE ..... Command Designation

### Function: Resize


This macro command is used to resize a video image that was enlarged using the ZOOM macro command or by the strobe snapshot function to its original size.

### Setting range

	Value
F0	RE_SIZE

### Example

- VIDEO2 RE\_SIZE

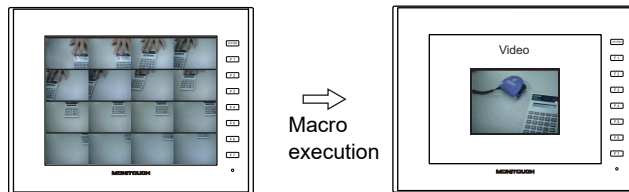

### Supplementary remarks

- In addition to the RE\_SIZE command, double-clicking an enlarged image resizes it to its original size.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 ZOOM F1 F2 . . . . . Command Designation

### Function: Zoom

This macro command is used to enlarge the image of the channel specified in [F1] at the position specified in [F2] to 640 × 480.

### Setting range

	Value
F0	ZOOM
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB) Auto *1
F2	Centering Upper right Lower left

\*1 Auto: CH


- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When a channel is not selected by tapping, the macro command is executed as follows:

When only one channel is displayed, the macro command is executed for the displayed channel.

When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 ZOOM 1CH Centering

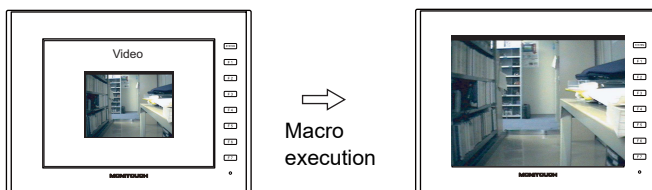

The above program enlarges the image of channel 1.

### Supplementary remarks

- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 BRIGHT F1 F2 . . . . . Command Designation

### Function: Brightness

This macro command is used to adjust the brightness of video images of the channel specified in [F1] according to the value specified in [F2].

### Setting range

	Value
F0	BRIGHT
F1	CH1 CH2 CH3 CH4 Auto *1
F2	0: Dark ? 31: Bright

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 BRIGHT CH1 10

The above program changes the brightness level of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 CONTRAST F1 F2. . . . . Command Designation

### Function: Contrast

This macro command is used to adjust the contrast of video images of the channel specified in [F1] according to the value specified in [F2].

### Setting range

	Value
F0	CONTRAST
F1	CH1 CH2 CH3 CH4 Auto *1
F2	0: Low 1 31: High

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 CONTRAST CH1 10

The above program changes the contrast level of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## VIDEO2 COLOR F1 F2 . . . . . Command Designation

### Function: Color intensity

This macro command is used to adjust the color intensity of video images of the channel specified in [F1] according to the value specified in [F2].

### Setting range

	Value
F0	COLOR
F1	CH1 CH2 CH3 CH4 Auto *1
F2	0: Light ? 31: Dark

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 COLOR CH1 10

The above program changes the color intensity of channel 1 to "10".

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 VIDEOINF F1 F2 . . . . . Command Designation

### Function: Save settings/reset to default

This macro command is used to save the settings of the channel specified in [F1] or to reset the settings to default. The settings made are then written to FROM.

### Setting range

	Value	Default	
F0	VIDEOINF	-	
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB) Auto *1	-	
F2	SAVE	-	
	DEFAULT	BRIGHT	16
		CONTRAST	16
		COLOR	16
		Clip start position	*2
		Image clip size	
MODE	Odd/even-numbered fields		

□ : ← V series (return data)

#### \*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

#### \*2 The default setting for the clip start position and the image clip size according to the input signal. For more information, refer to V9 Series Reference Manual 2.

### Example

- VIDEO2 VIDEO\_INF CH1 SAVE

The above program saves the video settings for channel 1.

### Supplementary remarks

- Do not turn off the power supply of the V series while executing the macro command.
- After the SAVE command has been executed, the data is maintained even after power-off.
- Do not execute the [VIDEO2 VIDEO\_INF] command every cycle using cycle macros or other methods.

- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 PAUSE F1 ..... Command Designation

### Function: Pause playback

This macro command is used to pause video playback of the channel specified in [F1].

### Setting range

	Value
F0	PAUSE
F1	CH1 CH2 CH3 CH4 Auto *1

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 PAUSE CH1

The above program pauses video playback of channel 1.

### Supplementary remarks

- During the execution of "PAUSE", resizing is disabled.
- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 RESTART F1 ..... Command Designation

### Function: Pause cancel

This macro command is used to resume video playback that has been paused by the PAUSE command.

### Setting range

	Value
F0	RESTART
F1	CH1 CH2 CH3 CH4 Auto *1

\*1 Auto: CH

- During "ZOOM", the macro command is executed with respect to the channel set for zooming.
- Tap the display area to select the channel for executing the macro command. The tapped channel number is stored in \$s934.
- When "ZOOM" is not in use and a channel is not selected by tapping, the macro command is executed as follows:
  - When only one channel is displayed, the macro command is executed for the displayed channel.
  - When multiple channels are displayed, the command is invalid.

### Example

- VIDEO2 RESTART CH1  
The above program resumes video playback of channel 1.

### Supplementary remarks

- The macro command is valid for video channels (1CH to 4CH) and invalid for RGB channels (5CH and 6CH).
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 DELETE F1 . . . . . Command Designation

### Function: Deletion

This macro command is used to delete the snapshot file VDxxxx.jpg from the storage device.

### Setting range

	Value
F0	DELETE
F1	VD00000 ? VD32767

### Example

- VIDEO2 DELETE VD00001

The above program deletes the file "VD00001.jpg" from the storage device.

### Supplementary remarks

- The macro command is valid when a storage device is connected to the V series.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 SNAP\_SEQ F1 F2 . . . . . Command Designation

### Function: Change periodical snapshot

This macro command is used to change the periodical snapshot operation of the channel specified in [F1] to the operation specified in [F2].

### Setting range


	Value
F0	SNAP_SEQ
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB)
F2	START STOP

### Example

- VIDEO2 SNAP\_SEQ CH 1 START  
The above program starts taking periodical snapshots of channel 1.


### Supplementary remarks

- The interval and total time for taking snapshots periodically is set as follows according to the settings of a video/RGB item in the screen program.
  - When [Periodical Snap] is selected for [Double Click Action]:

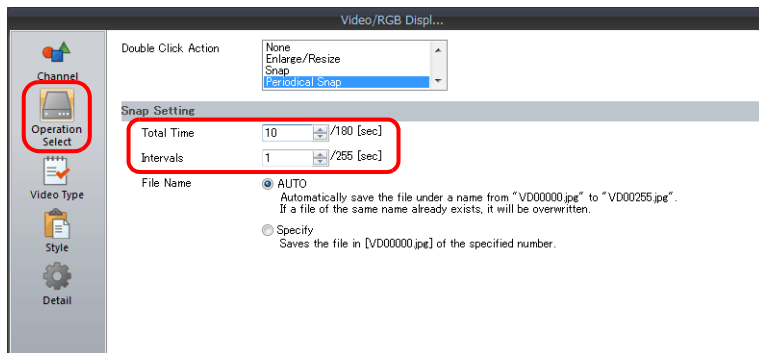

Total Time for Periodical Snapshot	Snapshot Interval
Same as [Operation Select] → [Total Time] setting	Same as [Operation Select] → [Intervals] setting

- When other than [Periodical Snap] is selected for [Double Click Action]:

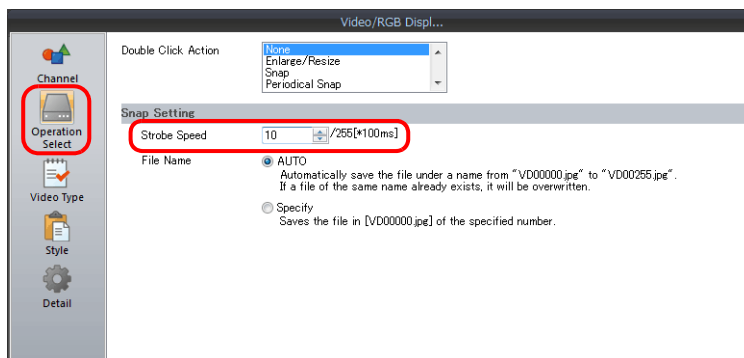

Total Time for Periodical Snapshot	Snapshot Interval
One minute (Fixed)	Same as [Operation Select] → [Strobe Speed] setting *

\* When this setting is shorter than 1 sec, the interval is 1 sec.

- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## VIDEO2 CLIP\_POS F1 F2 F3. . . . . Command Designation

### Function: Change the clip start position

This macro command is used to change the coordinates for starting clipping (clip start position) of the image of the channel specified in [F1] according to [F2] and [F3].

### Setting range

	Value
F0	CLIP_POS
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB)
F2	0: ? Starting X coordinate 1023:
F3	0: ? Starting Y coordinate 767:

### Example

- VIDEO2 CLIP\_POS CH 1 100 150

The above program changes the clip start position coordinates to (100, 150).

### Supplementary remarks

- For more information on the clip start position, refer to V9 Series Reference Manual 2.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 CLIP\_SIZE F1 F2 F3 . . . . . Command Designation

### Function: Change the image clip size

This macro command is used to change the size for clipping (image clip size) the image of the channel specified in [F1] according to [F2] and [F3].

### Setting range

	Value
F0	CLIP_SIZE
F1	CH1 CH2 CH3 CH4 CH5 (RGB) CH6 (RGB)
F2	1: ? Width 1024:
F3	1: ? Height 768:

### Example

- VIDEO2 CLIP\_SIZE CH 1 400 300  
The above program changes the image clip size to 400 × 300 dots.  
VIDEO2 CLIP\_POS CH 1 100 150  
The above program changes the clip start position coordinates to (100, 150).

### Supplementary remarks

- For more information on the image clip size, refer to V9 Series Reference Manual 2.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## VIDEO2 MODE F1 F2 F3 . . . . . Command Designation

### Function 16: Change the operation mode

This macro command is used to change the operation mode of the channel specified in [F1].

#### Setting range

	Value
F0	CLIP_SIZE
F1	CH1 CH2 CH3 CH4 All: All channels
F2	ODD/EVEN-FIELD: Odd/even-numbered fields ODD-FIELD: Odd-numbered field
F3	Fixed to 0

#### Example

- VIDEO2 MODE CH 1 ODD-FIELD 0  
The above program changes the operation mode of channel 1 to odd-numbered field.

#### Supplementary remarks

- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.14 USB Camera

### USBCAM\_REC

All V9 models	○
X1	
TELLUS4 HMI	

### USBCAM\_REC F0

#### Function: Event recording function start/stop

This macro command is used to start or stop the event recording function.

#### Setting range

	Value
F0	START: Start the event recording function STOP: Stop the event recording function

#### Example

- Starting the event recording function  
USBCAM\_REC START
- Stopping the event recording function  
USBCAM\_REC STOP

#### Supplementary remarks

- Stopping the event recording function terminates the file saving while the recording file is being saved. A file shorter than the set time is created.
- When the event recording function is stopped, the real-time display will not display anything.
- The result of macro execution is stored in \$s1061.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**USBCAM**

All V9 models	<input type="radio"/>
X1	
TELLUS4 HMI	

**USBCAM\_MEMORY F1 . . . . . Device Memory Designation**

**Function 1: Single snapshot**

This macro command is used to save a snapshot of video from the port number specified in [F1+1] to a storage device using the file number specified in [F1+2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**


	Value
F0	MEMORY
F1	4: SNAP
F1+1	1: Port 1
F1+2	00000: ? File number 32767: -1: Auto *1

\*1 Auto: File

- The number of a file created under the "Auto" setting is stored in \$s932.
  - If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.
- When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded].
- With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

**Example**

- \$u100 = 4 (W) [SNAP]
- \$u101 = 1 (W) [Port 1]
- \$u102 = 5 (W) [File No.5]
- USBCAM MEMORY \$u100

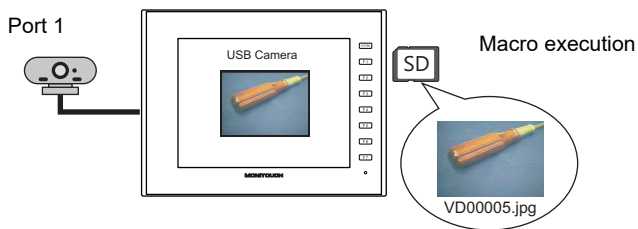

**Supplementary remarks**

- The macro command is valid when USB camera video is displayed and a storage device is connected to the V series unit. It is not possible to take a snapshot as a background operation.
- Bit 0 of \$s930 turns ON while taking a snapshot.
- The result of macro execution is stored in \$s1061. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## USBCAM SNAP F1 F2 . . . . . Command Designation

### Function: Single snapshot

This macro command is used to save a snapshot of video from the port number specified in [F1] to a storage device using the file number specified in [F2].

### Setting range


	Value
F0	SNAP
F1	1: Port 1
F2	VD00000 ? VD32767 Auto *1

\*1 Auto: File

- The number of a file created under the "Auto" setting is stored in \$s932.
  - If no files exist in the storage device, files are numbered by incrementing, starting from "0". If there are files in the storage device, files are numbered by incrementing the existing maximum file number.
- When the incremented value reaches [Maximum Number of Snap Files in Auto] in the [Video/RGB Setting] window, the subsequent action depends on the option selected for [When the Snap File Limitation is Exceeded]. With [Stop] selected, any further execution of the macro command is invalid. With [Overwrite] selected, the incremented value will be reset to "0" and the files will be overwritten.

### Example

- USBCAM SNAP PORT1 VD00005

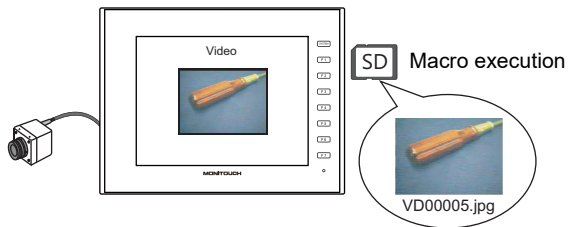

### Supplementary remarks

- The macro command is valid when USB camera video is displayed and a storage device is connected to the V series unit. It is not possible to take a snapshot as a background operation.
  - Bit 0 of \$s930 turns ON while taking a snapshot.
  - The result of macro execution is stored in \$s1061.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.15 PLC

### PLC\_CLND

### PLC\_CLND F0 PLC F1 F2 F3

All models	<input type="radio"/>
------------	-----------------------

#### Function: Calendar control function for PLC [F1]

This macro command is used to control the calendar for the PLC specified in [F1]. Depending on the value specified in [F0] it specifies reading or writing of the calendar data.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>
F1	<input type="radio"/>			<input type="radio"/>
F2	<input type="radio"/>			
F3	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

#### Setting range

	Value	
F0	0: Calendar reading * <sup>1</sup> 1: Calendar writing (specified by user) * <sup>2</sup> 2: Calendar writing (by the system) * <sup>3</sup>	
F1	2 - 8: PLC number	
F2	0 - 31: PLC station number	Invalid with 1:1 connections
F2+1	0 - 255: PLC sub station number	Invalid with 1:1 connections Only valid for PLCs with sub station number designations
F3	0 - : Year (4-digit/2-digit)	
F3+1	1 - 12: Month	
F3+2	1 - 31: Day	
F3+3	0 - 23: Hour	
F3+4	0 - 59: Minute	
F3+5	0 - 59: Second	
F3+6	0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday	Only valid with a read ([F0] = 0) setting Invalid with a write ([F0] = 1 or 2) setting because the calculation is done internally in the unit

\* Details of calendar function specification

\*<sup>1</sup> When [F0] = 0: Calendar reading

When the connection method specified in [F1] is "1:1", the calendar is read for the connected device and the information is saved in the [F3] device memory. (The contents in the [F2] device memory are ignored.)

When the connection method specified in [F1] is "1:n", the calendar for the connected device with the station number specified in [F2] or the sub station number specified in [F2+1] is read and saved in the [F3] device memory.

The V series system calendar is not changed by any command. To change the system calendar, use "SYS (SET\_SYS\_CLND) F1" (page 4-326).



- \*2 When [F0] = 1: Calendar writing (specified by user)  
 When the connection method specified in [F1] is "1:1", the calendar data in the [F3] device memory is written to the connected device.  
 (The contents in the [F2] device memory are ignored.)  
 When the connection method specified in [F1] is "1:n", the calendar data specified in [F3] is written to the connected device with the station number specified in [F2] or the sub station number specified in [F2+1].
- \*3 When [F0] = 2: Calendar writing (by the system)  
 When the connection method specified in [F1] is "1:1", MONITOUCH unit's system calendar data is written to the connected device.  
 (The contents in the [F2] device memory and the [F3] device memory are ignored.)  
 When the connection method specified in [F1] is "1:n", the system's calendar data specified in [F3] is written to the connected device with the station number specified in [F2] or the sub station number specified in [F2+1].  
 (The contents in the [F3] device memory are ignored.)

**Example**

- Setting the calendar for PLC2, station No. 1 to 20:00:00 on October 15, 2007  

```

$u100 = 1 (W)      — [PLC station number: 1]
$u200 = 2007 (W)  —
$u201 = 10 (W)   — [October 15, 2007, Monday, 20:00:00]
$u202 = 15 (W)   —
$u203 = 20 (W)   —
$u204 = 0 (W)    —
$u205 = 0 (W)    —
PLC_CLND 1 PLC2 $u100 $u200
SYS (SET_SYS_CLND) $u200 (V series calendar setting)
      
```

**Supplemental remarks**

- If the relevant equipment doesn't incorporate a calendar, nothing happens in response to the command. (MONITOUCH automatically judges whether or not the equipment incorporates a calendar.)
- Nothing happens to the equipment whose link has been dead in response to the command.
- The result of macro execution is stored in \$s729.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (HEX)	Contents
2004	A PLC [F1] communication error has occurred during processing.
FFFF	Execution error

PLC\_CTL

PLC\_CTL PLC F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: PLC [F1] control function**

This macro command is used to control the operation specified in the words starting from the address in [F1] in relation to the PLC specified in [F0]. The number of words is specified in [F2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>
F1	<input type="radio"/>			
F2				<input type="radio"/>

○ : Setting enabled (indirect designation disabled)  
 ◎ : Setting enabled (indirect designation enabled)



**Setting range**

	Value
F0	1 - 8: PLC number
F1	0 - 31: PLC station number
F1+1	Command and others
:	The items to be set differ depending on the equipment. For more information, refer to the V9 Series Connection Manual or the X1 Series Connection Manual.
F2	The number of words to be transferred

**Example**

- Bringing Omron's E5ZN (station No. 1) connected to the PLC2 to a state of RUN:  
 \$u100 = 1 (W) [PLC station number]  
 \$u101 = 30H (W) [Command]  
 \$u102 = 100H (W) [Operation command (RUN)]  
 PLC\_CTL PLC2 \$u100 3

Contents	F0	F1 (= \$u n) = \$u100	F2
Operation command	1 - 8 (PLC1 - 8)	n = \$u100 Station number*	3
		n+1 = \$u101 Command: 0030H	
		0000H: Communication writing OFF (disabled)	
		0001H: Communication writing ON (enabled)	
		0100H: RUN	
		0101H: STOP	
		0200H: Multi-SP (Set point 0)	
		0201H: Multi-SP (Set point 1)	
		0202H: Multi-SP (Set point 2)	
		0203H: Multi-SP (Set point 3)	
		0300H: AT cancel	
		0301H: AT execution	
		0400H: Write mode (Backup)	
0401H: Write mode (RAM)			
0500H: Save RAM data			
0600H: Software reset			
0700H: Move to set area 1			
0800H: Move to protect level			

\* 8000 (HEX): broadcasting

- The result of macro execution is stored in \$s729. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (HEX)	Contents
2002	Memory cannot be allocated.
2004	A PLC [F0] communication error has occurred during processing.

**TBL\_READ****TBL\_READ F0 <- TABLE:PLC F1 : F2**

All models	<input type="radio"/>
------------	-----------------------

**Function: Read from device memory map**

This macro command is used to transfer the data at the addresses registered in the device memory map specified in [F2] of the PLC specified in [F1] to the addresses starting with the one specified in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	○			○
F2	○			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

4

**Setting range**

	Value
F0	Top address of the target
F1	1 - 8: PLC number
F2	0 - 31: Device memory map No.

**Example**

- Transferring the data of the addresses registered in device memory map No. 5 defined at PLC3 to \$u500 onward  
TBL\_READ \$u500 <- TABLE : PLC3 : 5

**Supplemental remarks**

- As many addresses as the data count set in the device memory map must be allocated to the target memory, to which data will be transferred.
- The result of macro execution is stored in \$s729.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (HEX)	Contents
2001	The address set in the device memory map does not exist.
2002	The device memory cannot be allocated.
2004	A PLC [F1] communication error has occurred during processing.

## TBL\_WRITE

## TBL\_WRITE TABLE:PLC F1 : F0 <- F2

All models	<input type="radio"/>
------------	-----------------------

### Function: Write to device memory map

This macro command is used to transfer the data at the location starting from the address specified in [F2] to the address registered in the device memory map [F0] for the PLC [F1].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>
F1	<input type="radio"/>			<input type="radio"/>
F2	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	0 - 31: Device memory map No.
F1	1 - 8: PLC number
F2	Top memory address of the source

### Example

- Transferring the data of \$u500 onward to the addresses registered in device memory map No. 5 defined at PLC3  
TBL\_WRITE TABLE : PLC3 : 5 <- \$u00500

### Supplemental remarks

- As many addresses as the data count set in the device memory map must be allocated to the target memory, to which data will be transferred.
- The result of macro execution is stored in \$s729.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (HEX)	Contents
2001	The address set in the device memory map does not exist.
2002	The device memory cannot be allocated.
2004	A PLC [F1] communication error has occurred during processing.

## 4.16 Ethernet

### SEND

All models	<input type="radio"/>
------------	-----------------------

### SEND F0 C:F1 TO F2

#### Function: Transfer to server

This macro command is used to transfer the data of words starting from the address specified in [F0] to the server of the network table number in [F2]. The number of the words is specified in [F1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙			○
F2	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	Top address of the source
F1	0 - 2000: The number of words to be transferred
F2	0 - 255: Transfer target (network table number)

#### Example

- SEND PLC2 [D10] C:2 TO:3  
 The above program transfers two words of data starting from D10 of PLC2:B to network table No. 3 (server A).

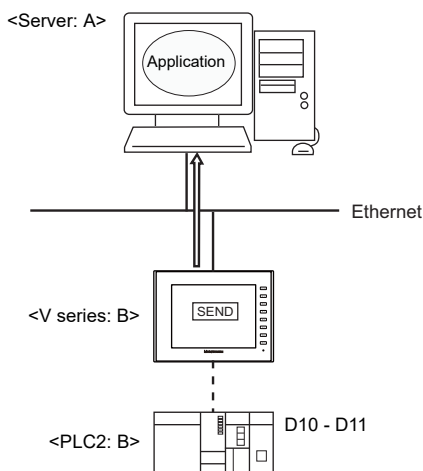

**Supplemental remarks**

The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored.	←V

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored.	←V

## EReAD

## EReAD F0 = F1 C:F2 F3

All models

### Function: Read on the network

This macro command is used to read the data of words starting from the address specified in [F1] set in the [F3]-specified network table into the address in [F0]. The number of the words is specified in [F2].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	⊙			○
F3	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Top address of the target
F1	Top address of the source
F2	0 - 2000: The number of words to be transferred
F3	0 - 255: Transfer source (network table number)

### Example

- EREAD PLC1 [D200] = PLC1 [D100] C:2 5  
 The above program reads two words of data starting from D100 of PLC1:B, which is connected to network table No. 5 (V series:B), into D200 onward of PLC1:A.

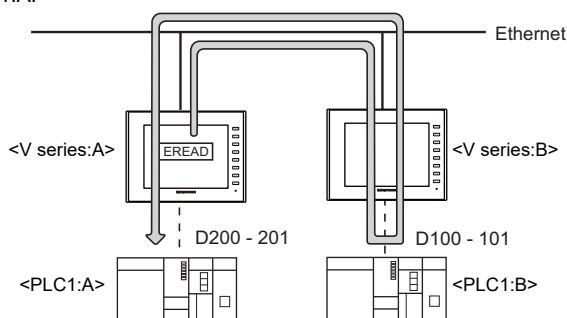

### Supplemental remarks

The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored.	←V



## EWRITE

All models

## EWRITE F0 F1 = F2 C:F3

### Function: Write on the network

This macro command is used to write data starting from the address specified in [F2] to the address specified in [F0] of the equipment connected to the network table number specified in [F1]. The number of words is specified in [F3].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙			○
F2	⊙	⊙	⊙	
F3	⊙			○


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Top address of the target
F1	0 - 255: Transfer target (network table number)
F2	Top address of the source
F3	0 - 2000: The number of words to be transferred

### Example

- EWRITE PLC1 [D100] 5 = \$u100 C:2  
 The above program writes two words of data starting from \$u100 of the V series:A to D100 onward of PLC1:B which is connected to network table No. 5 (V series:B).

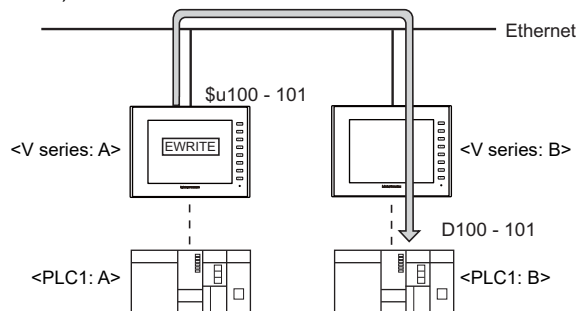

### Supplemental remarks

The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored.	←V

## 4.17 MES

### MES

All models	<input type="radio"/>
------------	-----------------------

### MES CHECK F1 F2 F3

#### Function: V-server start check

This macro command is used to check whether V-Server is running at the location specified in table No. [F2]. The returned value specified in [F3] is stored in the memory at the return address of [F1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			
F2	○			○
F3	○			○

○: Setting enabled (indirect designation disabled)


⊙: Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	MES CHECK
F1	Return address
F2	0 - 255: Network table number
F3	0 - 65535 (-32768 - 32767): Return value

#### Example

- MES CHECK (\$u0000, 10, 1)



The above program checks whether V-Server is running on the computer registered to network table number 10. If V-Server is running, a return value of "1" is stored at the return address of \$u0000.

### Supplementary remarks

- Execute the macro after setting a value other than the returned value at the return address.
- The returned value will not be placed at the [F1] return address immediately. Monitor the [F1] return address using an event timer macro, etc.
- If an error occurs when writing the result (return value, data retrieved by a search) of accessing the database, the result and the log data are not output to MONITOUCH.
- The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set. * When a macro command is executed while V-Server is not running and "1" (other than "0") is set for \$s514, no response is received from V-Server and MONITOUCH will enter the standby state. It is recommended to execute this command with "0" set for \$s514.	→V
\$s515	The result of macro execution is stored.	←V

## MES WRITE F1 F2 F3

### Function: Adding data to the database

This macro command is used to add the data set on the [Write] tab under MES setting No. [F3] to the database. The data is added using V-Server at the location specified in table No. [F2]. The result is stored at the [F1] return address.

If the database file is not found on the storage device when used in a stand-alone configuration, it is newly created.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			
F2	○			○
F3	○			○

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range


	Value	
F0	MES WRITE	
F1	Return address	Return value 0: Successful completion -1: Ended in error
F2	0 - 255: Network table number *	
F3	0 - 255: MES setting No.	

\* Invalid with stand-alone configuration.

For more information on the stand-alone, refer to the V9 Series Reference Manual 2 or the X1 Series Reference Manual 2.

### Example

- MES WRITE (\$u0000, 10, 0)

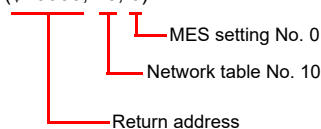

The above program adds data to the database of the computer specified in network table No. 10. The data to be added depends on the settings made for MES setting No. 0.

When the data is successfully written, a return value of "0" is stored at the return address of \$u0000.

### Supplementary remarks

- The returned value will not be placed at the [F1] return address immediately. Monitor the [F1] return address using an event timer macro, etc.
- The primary key for V-Server must be set to the database table. For more information, refer to the V9 Series Reference Manual 2 or the X1 Series Reference Manual 2.
- If an error occurs when writing the result (return value, data retrieved by a search) of accessing the database, the result and the log data are not output to MONITOUCH.
- The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored. -40: Settings on the [Write] tab are not configured for the specified MES setting number, or there is a setting error. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.	←V
\$s1030 (Built-in SD card drive)	On a stand-alone configuration, the storage error status is stored during the macro command execution. 12: Storage device is write-prohibited or there is not enough free space.	←V
\$s1035 (USB port)	16: Storage device is read-prohibited.	

## MES READ F1 F2 F3

### Function: Searching the database

This macro command is used to search the line set on the [Read] tab for MES setting No. [F3]. The search is performed based on the specified search conditions via V-Server at the location specified in table No. [F2]. The result is stored at the [F1] return address.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			
F2	○			○
F3	○			○

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	MES READ
F1	Return address
F2	0 - 255: Network table number *
F3	0 - 255: MES setting No.

\* Invalid with stand-alone configuration.

For more information on the stand-alone, refer to the V9 Series Reference Manual 2 or the X1 Series Reference Manual 2.

### Return address

The following data is stored at the addresses starting from the [F1] return address.

	Value
n	Execution result Successfully completion:0 Error: Other than 0
n + 1	Number of retrieved records The number of records that match the search conditions is stored. If no records are found, "0" is stored. The maximum number of records is set on the [Read] tab in the MES settings.
n+2 -	Obtained data 1 The retrieved data is stored in the format specified on the [Read] tab in the MES settings.
:	Obtained data 2
:	Obtained data 3
:	:
:	Obtained data m (maximum number of records)

**Example**

- MES READ (\$u0000, 10, 0)
- 

The above program searches the database on the computer specified in network table No. 10. The search is performed according to the settings on the [Read] and [Search condition] tabs for MES setting No. 0. When the search is successfully completed, a return value of “0” and the obtained data are stored at the addresses starting from the return address of \$u0000.

**Supplementary remarks**

- The returned value will not be placed at the [F1] return address immediately. Monitor the [F1] return address using an event timer macro, etc.
- If settings are not configured on the [Search condition] tab for the specified MES setting number, all records are extracted as the results of the search.
- If an error occurs when writing the result (return value, data retrieved by a search) of accessing the database, the result and the log data are not output to MONITOUCH.
- The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored. -40: Settings on the [Read] tab are not configured for the specified MES setting number, or there is a setting error. For more information on other error numbers, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.	←V
\$s1030 (Built-in SD card drive)	On a stand-alone configuration, the storage error status is stored during the macro command execution. 12: Storage device is write-prohibited or there is not enough free space.	←V
\$s1035 (USB port)	16: Storage device is read-prohibited.	

## MES DEL F1 F2 F3

### Function: Deleting records from the database

This macro command is used to search the database according to the settings on the [Search condition] tab for MES setting No. [F3]. The search is performed via V-Server at the location specified in table No. [F2]. The records that match the conditions are deleted. The result is stored at the [F1] return address.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			
F2	○			○
F3	○			○

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range


	Value	
F0	MES DEL	
F1	Return address	Return value 0: Successful completion -1: Ended in error
F2	0 - 255: Network table number *	
F3	0 - 255: MES setting No.	

\* Invalid with stand-alone configuration.

For more information on the stand-alone, refer to the V9 Series Reference Manual 2 or the X1 Series Reference Manual 2.

### Example

- MES DEL (\$u0000, 10, 0)

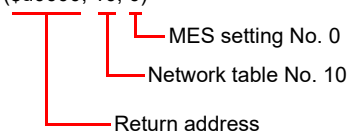

The above program searches the database of the computer specified in network table No. 10 and deletes the retrieved data. The search is performed according to the settings on the [Search condition] tab for MES setting No. 0. When the data deletion is successfully completed, a return value of "0" is stored at the return address of \$u0000.



### Supplementary remarks

- If an error occurs when writing the result (return value, data retrieved by a search) of accessing the database, the result and the log data are not output to MONITOUCH.
- The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored. -40: Settings on the [Search condition] tab are not configured for the specified MES setting number, or there is a setting error. For more information on other error numbers, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.	←V
\$s1030 (Built-in SD card drive)	On a stand-alone configuration, the storage error status is stored during the macro command execution. 12: Storage device is write-prohibited or there is not enough free space.	←V
\$s1035 (USB port)	16: Storage device is read-prohibited.	

## MES UPDATE F1 F2 F3

### Function: Updating the database

This macro command is used to search the line set on the [Write] tab for MES setting No. [F3]. The search is performed based on the specified search conditions via V-Server at the location specified in table No. [F2], and then the database is updated. The result is stored at the [F1] return address.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			
F2	○			○
F3	○			○

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

### Setting range


	Value	
F0	MES UPDATE	
F1	Return address	Return value 0: Successful completion -1: Ended in error
F2	0 - 255: Network table number *	
F3	0 - 255: MES setting No.	

\* Invalid with stand-alone configuration.

For more information on the stand-alone, refer to the V9 Series Reference Manual 2 or the X1 Series Reference Manual 2.

### Example

- MES UPDATE (\$u0000, 10, 0)

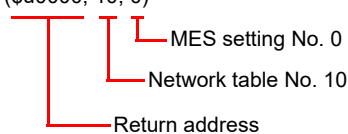

The above macro searches the database on the computer specified in network table No. 10 and updates the database. The search is performed according to the settings on the [Write] and [Search condition] tabs for MES setting No. 0.

When the data is successfully written, a return value of "0" is stored at the return address of \$u0000.

### Supplementary remarks

- The returned value will not be placed at the [F1] return address immediately. Monitor the [F1] return address using an event timer macro, etc.
- This macro command cannot be executed when "Update" is set on the [Search condition] tab.
- If an error occurs when writing the result (return value, data retrieved by a search) of accessing the database, the result and the log data are not output to MONITOUCH.
- The following system device memory addresses are related to this command. For more information, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.

Address	Contents	Remarks
\$s512	Select the port used for sending and receiving. 0: LAN (built-in) 1: Ethernet unit 2: LAN2 (built-in) 3: WLAN (wireless)	→V
\$s514	The macro execution format (wait request) is set.	→V
\$s515	The result of macro execution is stored. -40: Settings are not configured on the [Write] or [Search condition] tab for the specified MES setting number, or there is a setting error. For more information on other error numbers, refer to the V9 Series Reference Manual 1 or the X1 Series Reference Manual 1.	←V
\$s1030 (Built-in SD card drive)	On a stand-alone configuration, the storage error status is stored during the macro command execution. 12: Storage device is write-prohibited or there is not enough free space.	←V
\$s1035 (USB port)	16: Storage device is read-prohibited.	

## 4.18 Storage (Recipe)

### LD\_RECIPE

All models	<input type="radio"/>
------------	-----------------------

### LD\_RECIPE F0 F1

#### Function: Read CSV file

This macro command is used to transfer the CSV file specified in [F1] to the location starting from the address in [F0].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	○	○	○	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	Transfer target address
F1	0000 - 9999: CSV file number

#### CSV file

Storage target: \(\access folder\)RECIPE

File name: \RECxxx.csv


0000 - 9999: File No.

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in the CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**

- LD\_RECIPE \$u200 1  
The data in the REC0001.csv file is transferred to the location starting from \$u200.

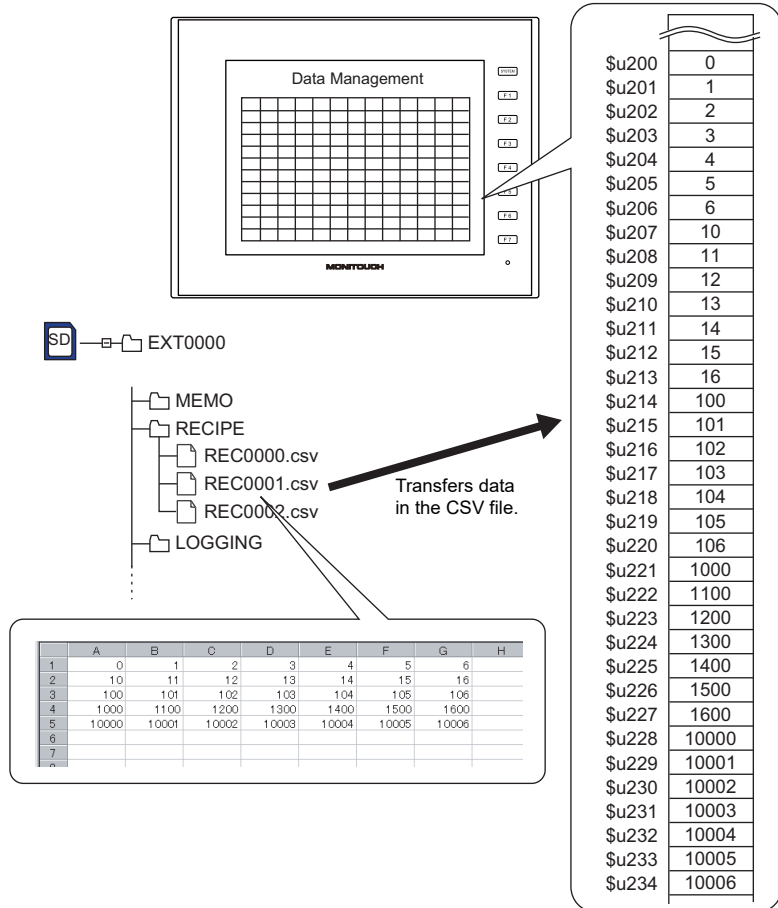

**Supplemental remarks**

- Recipe settings are required for each CSV file.

The file "REC0001.csv" is used.

- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected.


Go to the [General Setting] tab window in the [Unit Setting] dialog ([System Setting] → [Unit Setting] → [General Settings]). On the tab window, check or uncheck [ Convert NULL to Space with the LD/RD Macro].

Example:

CSV file

```
A,B,
C,,
```

Format setting

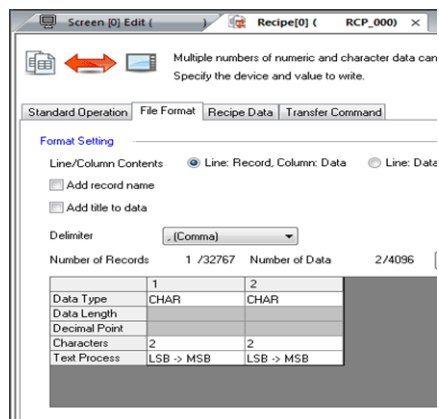

Execution result

Storage target	Checked	Unchecked
n	2041H	0041H
n+1	2042H	0042H
n+2	2043H	0043H
n+3	2020H	0000H

A null is converted to 20H.

A null remains "00".

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## LD\_RECIP2

## LD\_RECIP2 F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

### Function: Read CSV file (recipe number designation)

This macro command is used to transfer the CSV file number [F1] in the format of the recipe number [F2] to the location starting from the address [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	○	○	○	○
F2	○	○	○	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Transfer target address
F1	0000 - 9999: CSV file number
F2	0 - 255: Recipe number

### CSV file

Storage target: \(\access folder)\RECIP2

File name: \RECxxx.csv

0000 - 9999: File No.


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**

- LD\_RECIP2 \$u100 2 0


The above program transfers the data in the file "REC0002.csv" in the format of recipe No. 0 to the location starting from \$u100.

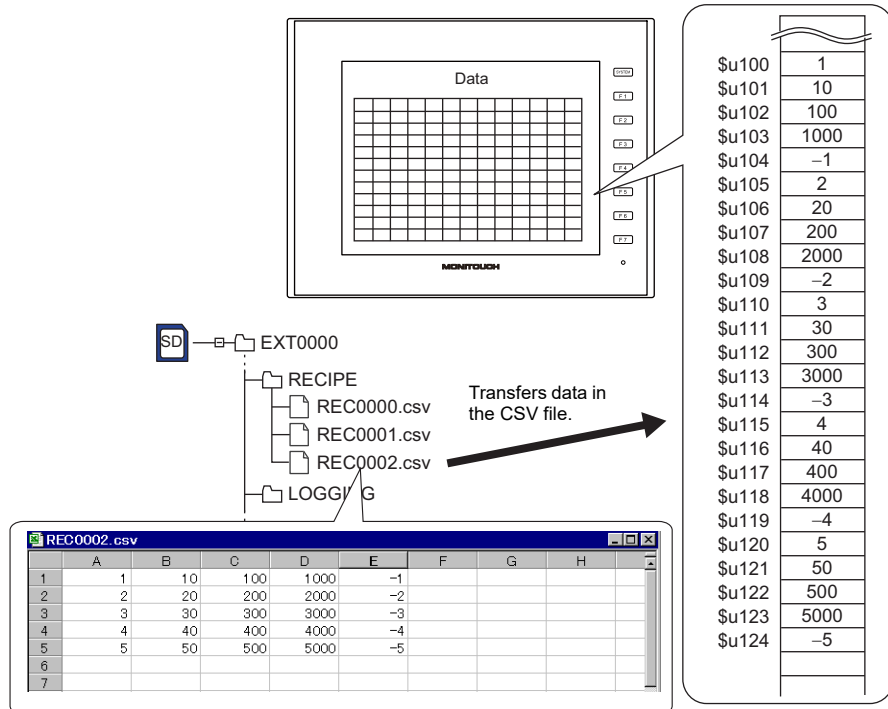

4

**Supplemental remarks**

- Recipe settings must be made in the same format as the CSV file.

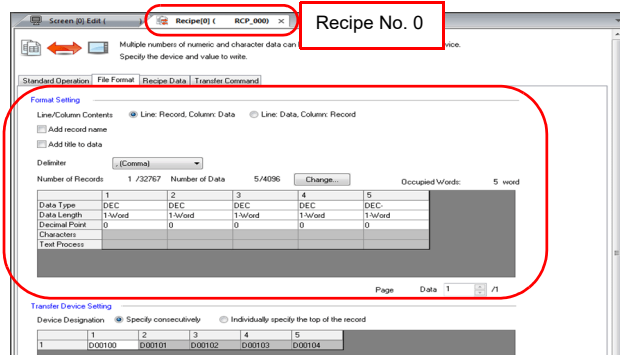

- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



**LD\_RECIPESSEL**

**LD\_RECIPESSEL F0 F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Read CSV file (in units of a cell)**

This macro command is used to transfer part of the CSV file specified in [F1] to the location starting from the address in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer source address	
F1	0000 - 9999: CSV file number	
F1+1	1 - 32767: Top line number	1 - 4096: Top line number
F1+2	0* - 4096: Top column number	0* - 4096: Top column number
F1+3	1 - 32767: Number of lines	1 - 4096: Number of lines
F1+4	1 - 4096: Number of columns	1 - 4096: Number of columns

\* Specify "0" if you wish to transfer the record name as well. In that case, select [Record Name + Data] for [Transfer Target] under [Transfer Device Setting] ([Recipe] → [File Format]) The number of columns specified in F1+4 includes the cell of the record name.

**CSV file**

Storage target: \(\access folder)\RECIPE

File name: \RECxxxx.csv

└─ 0000 - 9999: File No.


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**


- \$u100 = 1 (W) [File number 1]
- \$u101 = 2 (W) [Top line number]
- \$u102 = 3 (W) [Top column number]
- \$u103 = 2 (W) [Number of lines]
- \$u104 = 3 (W) [Number of columns]
- LD\_RECIPESSEL \$u300 \$u100

The above program transfers part of the data in the REC0001.csv file to the location starting from \$u300.

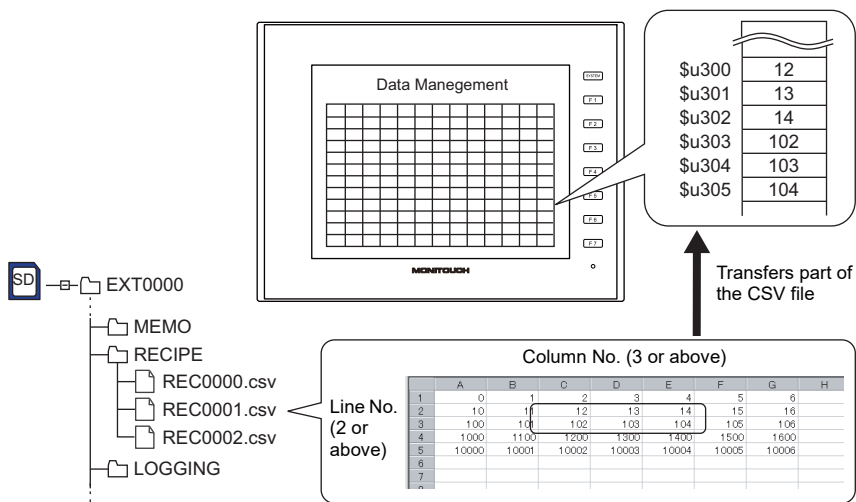

**Supplemental remarks**

- Attribute setting is required for each CSV file.

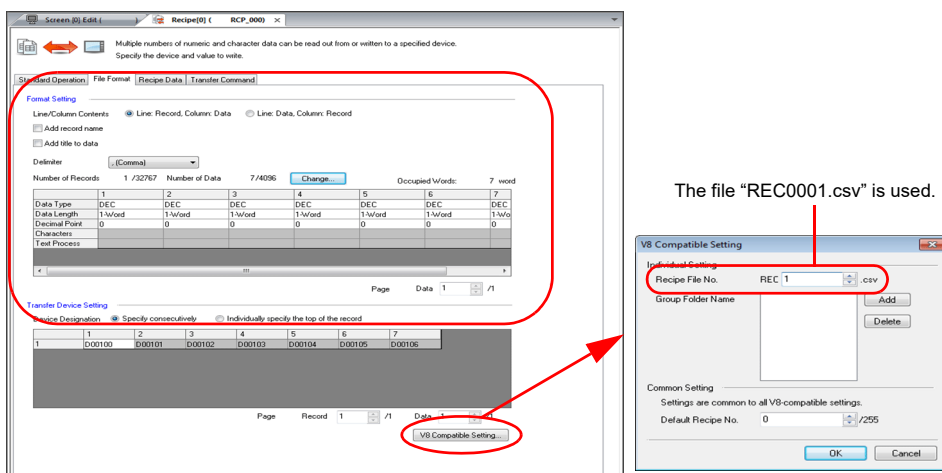

- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.

- Difference between reading one line and reading multiple lines

	Line: Record, Column: Data	Line: Data, Column: Record																																								
CSV	<p>CSV file</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	<p>CSV file</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <th>CHAR</th> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <th>DEC</th> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
One line	<p>Reading one line and two columns from top line No. 2 and top column No.2</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	<p>Reading one line and two columns from top line No. 2 and top column No.2</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <th>CHAR</th> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <th>DEC</th> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
Two lines	<p>Reading two lines and two columns from top line No. 2 and top column No. 2</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	<p>Reading two lines and two columns from top line No. 2 and top column No. 2</p> <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <th>CHAR</th> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <th>DEC</th> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>* Execute reading line by line (specifying multiple lines at one time is not allowed).</p>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## LD\_RECIPSEL2 LD\_RECIPSEL2 F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Read CSV file (in units of a cell/recipe No. designation)**

This macro command is used to transfer a part of data in the CSV file number [F1] in the format of the recipe number [F2] to the location starting from the address [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	○	○	○	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

4

**Setting range**

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer target address	
F1	0000 - 9999: CSV file number	
F1+1	1 - 32767: Top line number	1 - 4096: Top line number
F1+2	0* - 4096: Top column number	0* - 4096: Top column number
F1+3	1 - 32767: Number of lines	1 - 4096: Number of lines
F1+4	1 - 4096: Number of columns	1 - 4096: Number of columns
F2	0 - 255: Recipe number	

\* Specify "0" if you wish to transfer the record name as well. In that case, select [Record Name + Data] for [Transfer Target] under [Transfer Device Setting] ([Recipe] → [File Format]) The number of columns specified in F1+4 includes the cell of the record name.

**CSV file**

Storage target: \(\access folder\)RECIPE

File name: \RECxxx.csv

0000 - 9999: File number


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**


- \$u100 = 2 (W) [File number]
- \$u101 = 1 (W) [Top line number]
- \$u102 = 1 (W) [Top column number]
- \$u103 = 1 (W) [Number of lines]
- \$u104 = 5 (W) [Number of columns]
- LD\_RECIPSEL2 \$u500 \$u100 0

The above program transfers a part of data in the file "REC0002.csv" in the format of recipe No. 0 to the location starting from \$u500.

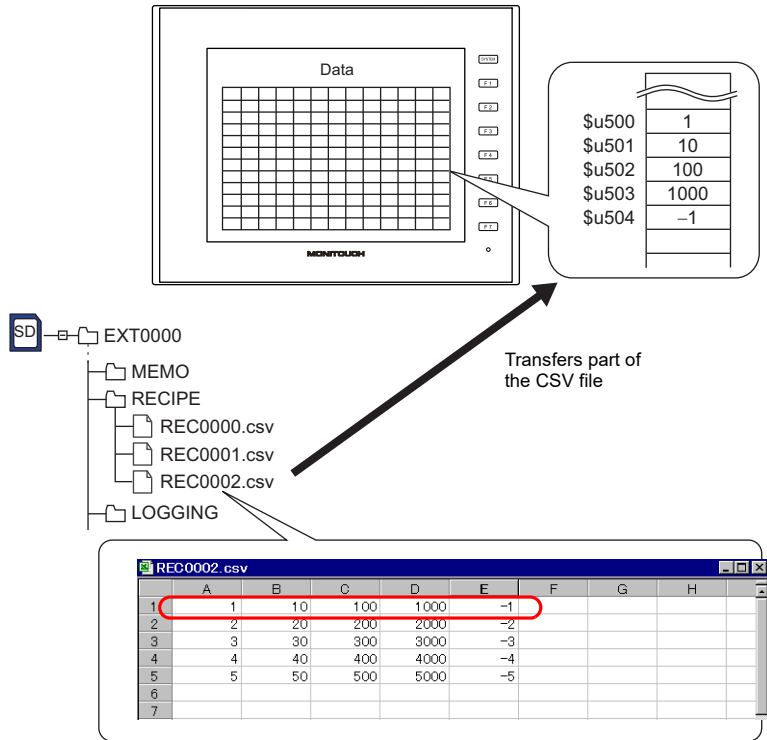

## Supplemental remarks

- Recipe settings must be made in the same format as the CSV file.

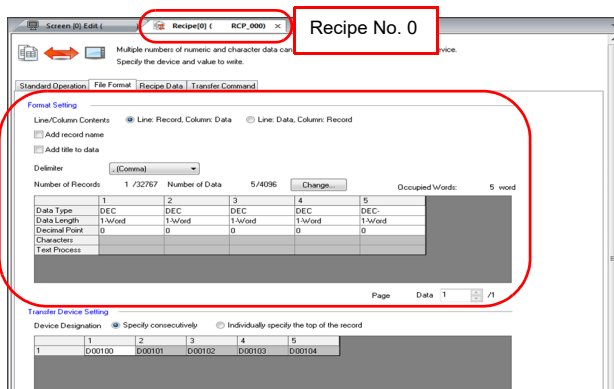

- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.
- Difference between reading one line and reading multiple lines

	Line: Record, Column: Data	Line: Data, Column: Record																																								
CSV	CSV file  <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	CSV file  <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>CHAR</td> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <td>DEC</td> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
One line	Reading one line and two columns from top line No. 2 and top column No. 2  <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	Reading one line and two columns from top line No. 2 and top column No. 2  <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>CHAR</td> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <td>DEC</td> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
Two lines	Reading two lines and two columns from top line No. 2 and top column No. 2  <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	Reading two lines and two columns from top line No. 2 and top column No. 2  <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>CHAR</td> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <td>DEC</td> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>* Execute reading line by line (specifying multiple lines at one time is not allowed).</p>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SV\_RECIPE

## SV\_RECIPE F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Save to CSV file**

This macro command is used to save the data of words starting from the address specified in [F0] to the CSV file in [F2]. The number of the words is specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	○	○	○	○
F2	○	○	○	○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

4

**Setting range**

	Value
F0	Transfer source address
F1	1 - 4096: Word count
F2	0000 - 9999: CSV file number

**CSV file**

Storage target: \(\access folder\)RECIPE

File name: \RECxxx.csv

0000 - 9999: File number

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.


	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			



**Example**


- SV\_RECIPE \$u500 5 2

The above program saves the five-word data at \$u500 - 504 to the REC0002.csv file.

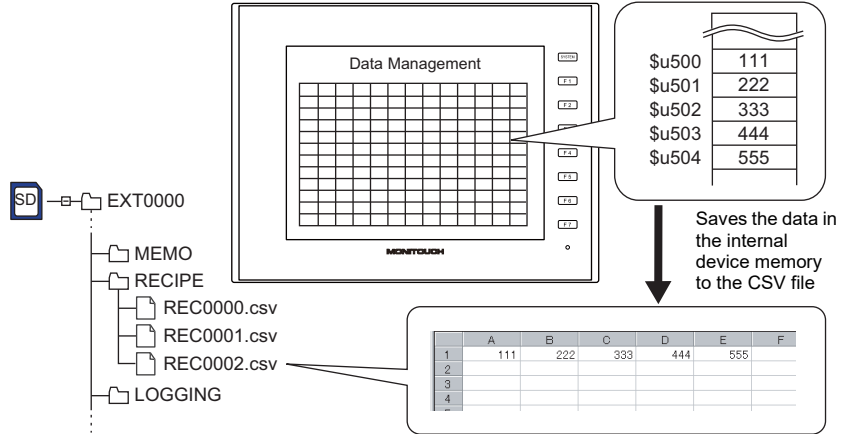

**Supplemental remarks**

- Recipe settings are required for each CSV file.

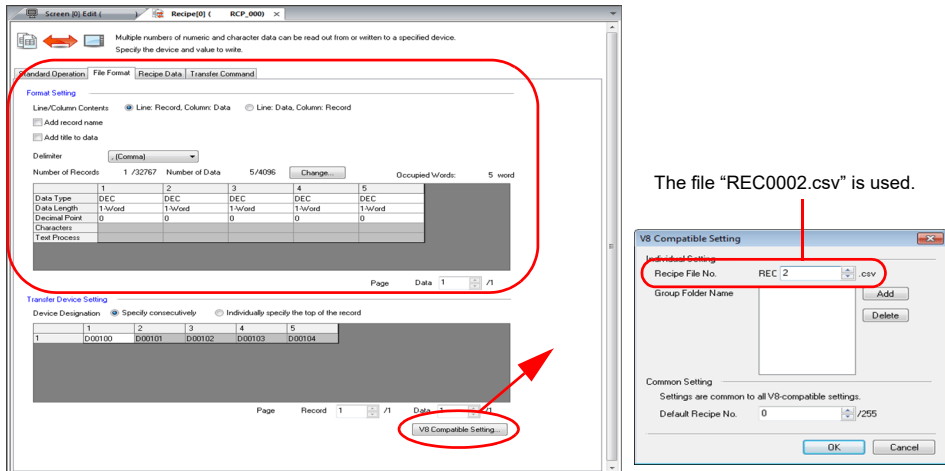

- If the specified CSV file does not exist in the storage, a new file will be created. Creating the CSV file in advance is not necessary.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SV\_RECIP2

## SV\_RECIP2 F0 F1 F2 F3

All models	<input type="radio"/>
------------	-----------------------

**Function: Save to CSV file (recipe No. designation)**

This macro command is used to save the data of words specified in [F1] starting from the address [F0] to the CSV file number [F2] in the format of the recipe number [F3].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	○	○	○	○
F2	○	○	○	○
F3	○	○	○	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	Transfer source address
F1	1 - 4096: Word count
F2	0000 - 9999: CSV file number
F3	0 - 255: Recipe number

**CSV file**

Storage target: \(\text{access folder})\RECIPE

File name: \RECxxx.csv

0000 - 9999: File No.


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr> <td>♦</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	♦									<table border="1"> <tr> <td colspan="3">Title</td> </tr> <tr> <td>♦</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr> <td>Record</td> <td>♦</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Record	♦								<table border="1"> <tr> <td>-</td> <td colspan="2">Title</td> </tr> <tr> <td>Record</td> <td>♦</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**


- SV\_RECIPE2 PLC1 [D400] 10 9999 0

The above program saves the ten-word data at D400 - 409 in PLC1 to the file "REC9999.csv" in the format of recipe No. 0.

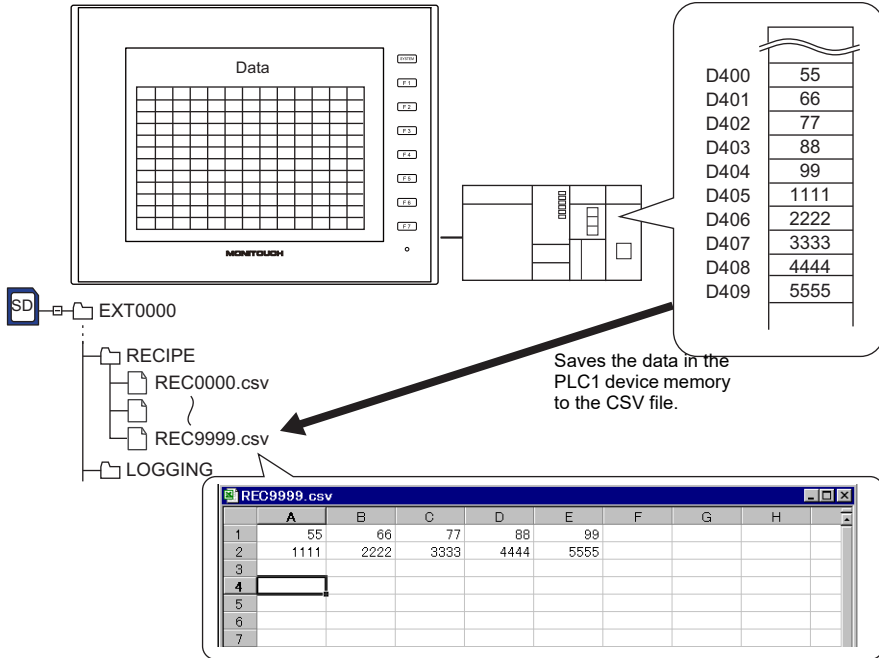

**Supplemental remarks**

- Recipe settings must be made in the same format as the CSV file.

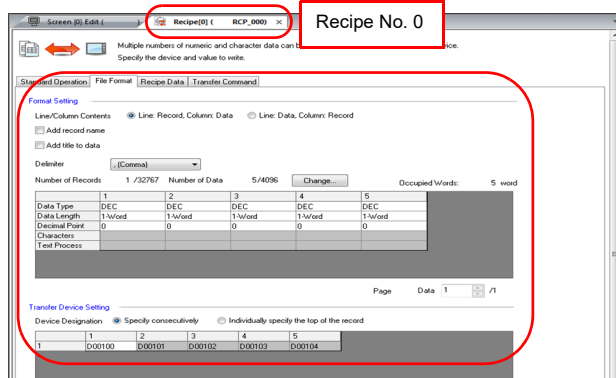

- If the specified CSV file does not exist in the storage, a new file will be created. Creating the CSV file in advance is not necessary.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SV\_RECIPESSEL

## SV\_RECIPESSEL F0 F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Save to CSV file**

This macro command is used to save the data at the location starting from the address specified in [F0] to the specified line/column in the CSV file in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer source address	
F1	0000 - 9999: CSV file number	
F1+1	1 - 32767: Top line number	1 - 4096: Top line number
F1+2	0* - 4096: Top column number	0* - 4096: Top column number
F1+3	1 - 4096: Number of lines	1 - 4096: Number of lines
F1+4	1 - 4096: Number of columns	1 - 4096: Number of columns

\* Specify "0" if you wish to transfer the record name as well. In that case, select [Record Name + Data] for [Transfer Target] under [Transfer Device Setting] ([Recipe] → [File Format]). The number of columns specified in F1+4 includes the cell of the record name.

**CSV file**

Storage target: \(\text{access folder})\RECIPE

File name: \RECxxx.csv

0000 - 9999: File No.


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**


- \$u100 = 0 (W) [File number]
- \$u101 = 3 (W) [Top line number]
- \$u102 = 1 (W) [Top column number]
- \$u103 = 1 (W) [Number of lines]
- \$u104 = 2 (W) [Number of columns]
- SV\_RECIPSEL \$u300 \$u100

The above program saves the data at the location starting from \$u300 to line No. 3 in the REC0000.csv file.

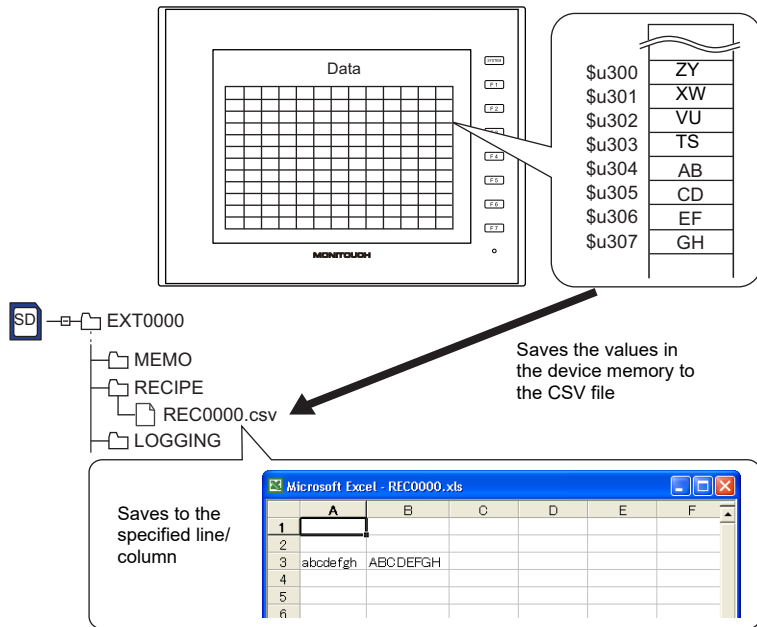

**Supplemental remarks**

- Recipe settings are required for each CSV file.

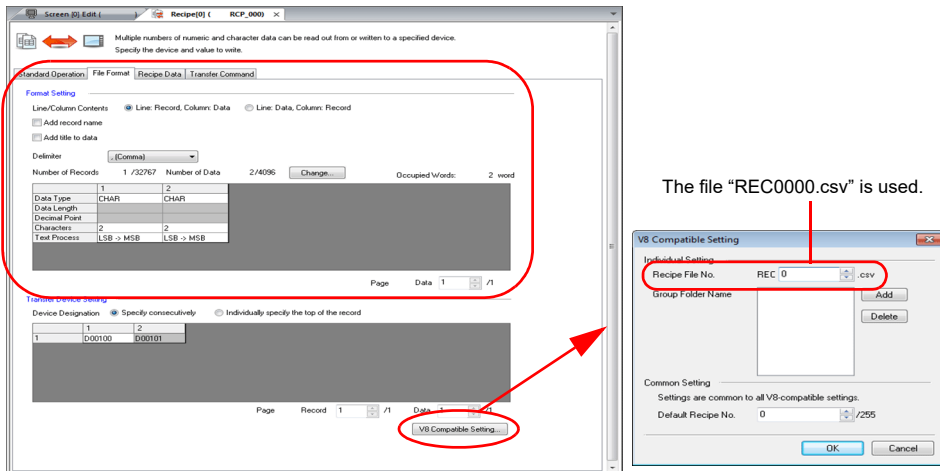

- If the specified CSV file does not exist in the storage, a new file will be created. Creating the CSV file in advance is not necessary.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SV\_RECIPESL2 SV\_RECIPESL2 F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

### Function: Save to CSV file (recipe No. designation)

This macro command is used to save the data at the location starting from the address specified in [F0] in the format of the recipe number in [F2] to the specified line/column in the CSV file in [F1].

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	○	○	○	○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer source address	
F1	0000 - 9999: CSV file number	
F1+1	1 - 32767: Top line number	1 - 4096: Top line number
F1+2	0* - 4096: Top column number	0* - 4096: Top column number
F1+3	1 - 32767: Number of lines	1 - 4096: Number of lines
F1+4	1 - 4096: Number of columns	1 - 4096: Number of columns
F2	0 - 255: Recipe number	

\* Specify "0" if you wish to transfer the record name as well. In that case, select [Record Name + Data] for [Transfer Target] under [Transfer Device Setting] ([Recipe] → [File Format]) The number of columns specified in F1+4 includes the cell of the record name.

#### CSV file

Storage target: \(\access folder)\RECIPE

File name: \RECxxxx.csv

0000 - 9999: File No.


The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**

- \$u100 = 9000 (W) [File number]
- \$u101 = 2 (W) [Top line number]
- \$u102 = 1 (W) [Top column number]
- \$u103 = 1 (W) [Number of lines]
- \$u104 = 5 (W) [Number of columns]
- SV\_RECIPSEL2 \$u300 \$u100 0


The above program saves the data at the location starting from \$u300 in the format of recipe No. 3 to line No. 2 in the REC9000.csv file.

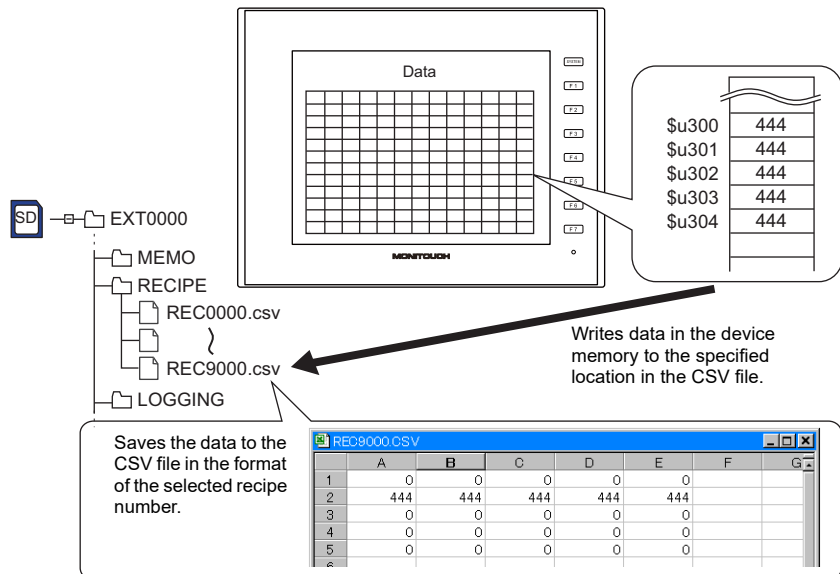

4

**Supplemental remarks**

- Recipe settings must be made in the same format as the CSV file.

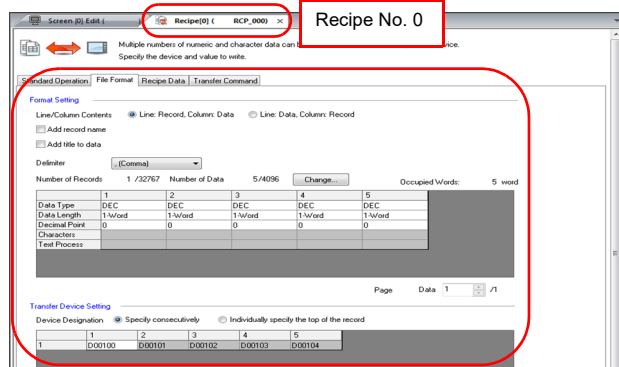

- If the specified CSV file does not exist in the storage, a new file will be created. Creating the CSV file in advance is not necessary.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$\$s1062.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## SET\_ RECIPEFOLDER

All models	<input type="radio"/>
------------	-----------------------

## SET\_RECIPFOLDER F0

### Function: Folder designation

This macro command is used to designate the folder storing CSV files in [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range


	Value
F0	
F0+1	ASCII code (8 one-byte upper-case alphanumeric characters* <sup>1</sup> ): Access target folder name* <sup>2</sup>
F0+2	
F0+3	

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 Text processing (LSB → MSB or MSB → LSB) for the folder name is determined whether [Follow to the PLC1 setting for the text process in a recipe file.] on the [General Settings] tab window that is displayed by [System Setting] → [Unit Setting] is checked or not.

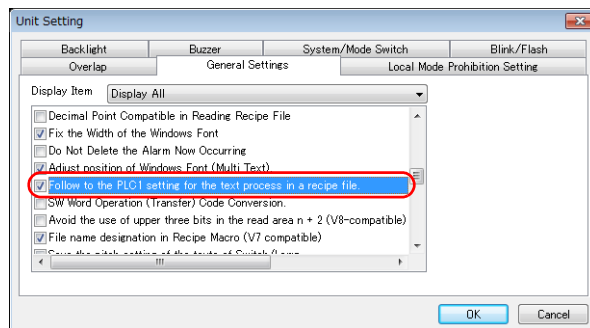

<input checked="" type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.	<input type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.
Text processing specified for the PLC1	Fixed to "LSB → MSB"

**Example**

```

• $u100 = 4154H (W)           54 41 52 47 45 54 = TARGET
  $u101 = 4752H (W)           (ASCII)
  $u102 = 5445H (W)
  $u103 = 0000H (W)
  SET_RECIPFOLDER $u100

```

The above program specifies the folder at \(\access folder)\RECIPE\TARGET.

- The CHR or STRING macro command will simplify the designation of a folder if it is a fixed name.
  - (When text processing is performed according to the setting on the PLC1: use a "CHR" command.)
 

```

          $u100 = 'TARGET'
          SET_RECIPFOLDER $u100
          
```
  - (When "LSB → MSB" is selected: use a "STRING" command.)
 

```

          $u100 = 'TARGET' (STRING)
          SET_RECIPFOLDER $u100
          
```

**Supplemental remarks**

- Four consecutive words starting from the address in [F0] are used. Be sure that these words are not already used elsewhere.
- Once the macro command is executed, the effect is maintained until any of the following takes place.
  - Turning off the power
  - Switching MONITOUCH from a state of RUN to STOP (Local mode)
  - Removing the storage device
 Execute the macro command again after any of the above or if you access a CSV file in a different folder.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## RD\_RECIPE\_FILE RD\_RECIPE\_FILE F0 F1

All models	<input type="radio"/>
------------	-----------------------

### Function: Read CSV file

This macro command is used to transfer all data in the CSV file specified in [F1] to the address in [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Transfer target
F1	ASCII code (8 one-byte upper-case alphanumeric characters*1): CSV file name**2
F1+1	
F1+2	
F1+3	

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to "Supplemental remarks" on Page 4-203.

### CSV file

Storage target: \(\access folder\)RECIPE\(\arbitrary folder\)

File name: \xxxxxxx.csv

8 one-byte upper-case alphanumeric characters or less

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">♦</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	♦									<table border="1" style="width: 100%;"> <tr> <td colspan="3" style="text-align: center;">Title</td> </tr> <tr> <td style="text-align: center;">♦</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">Record</td> <td style="text-align: center;">♦</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	Record	♦								<table border="1" style="width: 100%;"> <tr> <td style="text-align: center;">-</td> <td colspan="2" style="text-align: center;">Title</td> </tr> <tr> <td style="text-align: center;">Record</td> <td style="text-align: center;">♦</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> </tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			


**Example**

- \$u100 = 'TARGET'
  - SET\_RECIPFOLDER \$u100
  - \$u110 = 5250H (W)
  - \$u111 = 444FH (W)
  - \$u112 = 4355H (W)
  - \$u113 = 3154H (W)
  - RD\_RECIPF\_FILE PLC1 [D200] \$u110
- } Not required if SET\_FOLDER has already been executed
- } 50 52 4F 44 55 43 54 31 = PRODUCT1 (ASCII)

The above program transfers all data in the PRODUCT1.csv file stored in the TARGET folder to PLC1: D200.

**Supplemental remarks**

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
- If the CSV file specified in [F1] does not exist, a storage read error occurs (\$s497 = 16).
- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.
- Text processing (LSB → MSB or MSB → LSB) for the file name is determined whether [Follow to the PLC1 setting for the text process in a recipe file.] on the [General Settings] tab window that is displayed by [System Setting] → [Unit Setting] is checked or not.

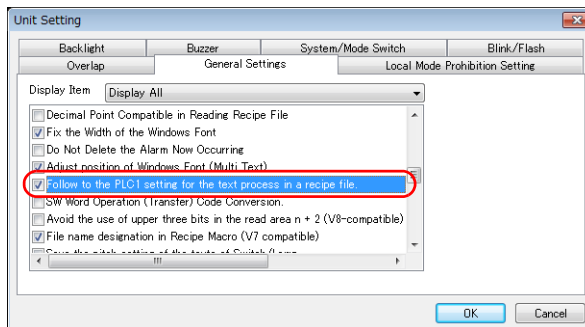

Device memory	<input checked="" type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.	<input type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.
Internal device memory	Text processing specified for the PLC1	Fixed to "LSB → MSB"
PLC 1 - 8 device memory	Text processing specified for the PLC1	Text processing specified for each PLC

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**RD\_RECIFE\_LINE RD\_RECIFE\_LINE F0 F1 F2 F3**

All models	<input type="radio"/>
------------	-----------------------

**Function: Read CSV file (line designation)**

This macro command is used to transfer the data of specified lines in the [F1]-specified CSV file to the address in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	⊙	⊙	⊙	○
F3	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value			
	Line: Record, Column: Data		Line: Data, Column: Record	
F0	Transfer target			
F1	ASCII code (8 one-byte upper-case alphanumeric characters <sup>*1</sup> ): CSV file name <sup>*2</sup>			
F1+1				
F1+2				
F1+3				
F2	1 - 32767:	Top line	1 - 4096:	Top line
F3	1 - 32767:	Final line	1 - 4096:	Final line

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to “Supplemental remarks” on page 4-203.

**CSV file**

Storage target: \(\access folder)\RECIPE\(\arbitrary folder)

File name: \xxxxxxx.csv

8 one-byte upper-case alphanumeric characters or less

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																					
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="4">Title</td></tr> <tr><td>♦</td><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table>	Title				♦							
♦																							
Title																							
♦																							
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="3">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table>	-	Title			Record	♦						
Record	♦																						
-	Title																						
Record	♦																						

### Example

- \$u100 = 'TARGET'  
SET\_RECIPFOLDER \$u100  
\$u110 = 5250H (W)  
\$u111 = 444FH (W)  
\$u112 = 4355H (W)  
\$u113 = 3154H (W)  
RD\_RECIPFOLDER PLC1 [D200] \$u110 3 3

Not required if SET\_FOLDER has already been executed

50 52 4F 44 55 43 54 31 = PRODUCT1 (ASCII)

The above program transfers line No. 3 (record No. 3) data in the PRODUCT1.csv file stored in the TARGET folder to PLC1: D200.

### Supplemental remarks

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
- If the CSV file specified in [F1] does not exist, a storage read error occurs (\$s497 = 16).
- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.
- Difference between reading one line and reading multiple lines

	Line: Record, Column: Data	Line: Data, Column: Record																																								
CSV	CSV file  <table border="1"> <thead> <tr><th>DEC</th><th>CHAR</th><th>DEC</th></tr> </thead> <tbody> <tr><td>1</td><td>A</td><td>100</td></tr> <tr><td>2</td><td>B</td><td>200</td></tr> <tr><td>3</td><td>C</td><td>300</td></tr> <tr><td>4</td><td>D</td><td>400</td></tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	CSV file  <table border="1"> <thead> <tr><th>DEC</th><th>1</th><th>2</th><th>3</th><th>4</th></tr> </thead> <tbody> <tr><td>CHAR</td><td>A</td><td>B</td><td>C</td><td>D</td></tr> <tr><td>DEC</td><td>100</td><td>200</td><td>300</td><td>400</td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
One line	Reading based on top line No. 2 and final line No. 2  <table border="1"> <thead> <tr><th>DEC</th><th>CHAR</th><th>DEC</th></tr> </thead> <tbody> <tr><td>1</td><td>A</td><td>100</td></tr> <tr><td><del>2</del></td><td><del>B</del></td><td><del>200</del></td></tr> <tr><td>3</td><td>C</td><td>300</td></tr> <tr><td>4</td><td>D</td><td>400</td></tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	<del>2</del>	<del>B</del>	<del>200</del>	3	C	300	4	D	400	Reading based on top line No. 2 and final line No. 2  <table border="1"> <thead> <tr><th>DEC</th><th>1</th><th>2</th><th>3</th><th>4</th></tr> </thead> <tbody> <tr><td>CHAR</td><td><del>A</del></td><td><del>B</del></td><td><del>C</del></td><td><del>D</del></td></tr> <tr><td>DEC</td><td>100</td><td>200</td><td>300</td><td>400</td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	DEC	1	2	3	4	CHAR	<del>A</del>	<del>B</del>	<del>C</del>	<del>D</del>	DEC	100	200	300	400										
DEC	CHAR	DEC																																								
1	A	100																																								
<del>2</del>	<del>B</del>	<del>200</del>																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	<del>A</del>	<del>B</del>	<del>C</del>	<del>D</del>																																						
DEC	100	200	300	400																																						

	Line: Record, Column: Data	Line: Data, Column: Record																																								
Two lines	Reading based on top line No. 2 and final line No. 3  <table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	Reading based on top line No. 2 and final line No. 3  <table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <th>CHAR</th> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <th>DEC</th> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>* Execute reading line by line (specifying multiple lines at one time is not allowed).</p>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
	DEC	CHAR	DEC																																							
1	A	100																																								
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## RD\_RECIPES\_COLUMN

All models	<input type="radio"/>
------------	-----------------------

## RD\_RECIPES\_COLUMN F0 F1 F2 F3

### Function: Read CSV file (column designation)

This macro command is used to transfer the data of specified columns in the [F1]-specified CSV file to the address in [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	⊙	⊙	⊙	○
F3	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

4

### Setting range

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer target	
F1	ASCII code (8 one-byte upper-case alphanumeric characters <sup>*1</sup> ): CSV file name <sup>*2</sup>	
F1+1		
F1+2		
F1+3		
F2	0: Column of record name 1 - 4096: Top column of data	
F3	0: Column of record name 1 - 4096: Final column of data	

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to "Supplemental remarks" on page 4-203.

### CSV file

Storage target: \(\access folder)\RECIPE\(\arbitrary folder)

File name: \xxxxxxx.csv

8 one-byte upper-case alphanumeric characters or less



The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**

- \$u100 = 'TARGET'  
 SET\_RECIPFOLDER \$u100  
 \$u110 = 5250H (W)  
 \$u111 = 444FH (W)  
 \$u112 = 4355H (W)  
 \$u113 = 3154H (W)  
 RD\_RECIPFOLDER\_COLUMN PLC1 [D300] \$u110 5 5

Not required if SET\_FOLDER has already been executed  
 50 52 4F 44 55 43 54 31 = PRODUCT1 (ASCII)

The above program transfers column No. 5 data in the PRODUCT1.csv file stored in the TARGET folder to PLC1: D300.

**Supplemental remarks**

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
- If the CSV file specified in [F1] does not exist, a storage read error occurs (\$s497 = 16).
- For reading text, whether to convert a null to 20H (space) or read it as "00" can be selected. For more information, refer to page 4-181.
- Difference between reading one column and reading multiple columns

	Line: Record, Column: Data	Line: Data, Column: Record																																			
CSV	CSV file <table border="1"> <tr><td>DEC</td><td>CHAR</td><td>DEC</td></tr> <tr><td>1</td><td>A</td><td>100</td></tr> <tr><td>2</td><td>B</td><td>200</td></tr> <tr><td>3</td><td>C</td><td>300</td></tr> <tr><td>4</td><td>D</td><td>400</td></tr> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	CSV file <table border="1"> <tr><td>DEC</td><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>CHAR</td><td>A</td><td>B</td><td>C</td><td>D</td></tr> <tr><td>DEC</td><td>100</td><td>200</td><td>300</td><td>400</td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400					
	DEC	CHAR	DEC																																		
1	A	100																																			
2	B	200																																			
3	C	300																																			
4	D	400																																			
DEC	1	2	3	4																																	
CHAR	A	B	C	D																																	
DEC	100	200	300	400																																	
One line	Reading based on top column No. 2 and final column No. 2 <table border="1"> <tr><td>DEC</td><td>CHAR</td><td>DEC</td></tr> <tr><td>1</td><td>A</td><td>100</td></tr> <tr><td>2</td><td>B</td><td>200</td></tr> <tr><td>3</td><td>C</td><td>300</td></tr> <tr><td>4</td><td>D</td><td>400</td></tr> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	Reading based on top column No. 2 and final column No. 2 <table border="1"> <tr><td>DEC</td><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>CHAR</td><td>A</td><td>B</td><td>C</td><td>D</td></tr> <tr><td>DEC</td><td>100</td><td>00</td><td>300</td><td>400</td></tr> <tr><td></td><td></td><td></td><td></td><td></td></tr> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	00	300	400					
DEC	CHAR	DEC																																			
1	A	100																																			
2	B	200																																			
3	C	300																																			
4	D	400																																			
DEC	1	2	3	4																																	
CHAR	A	B	C	D																																	
DEC	100	00	300	400																																	

	Line: Record, Column: Data	Line: Data, Column: Record																																								
Two lines	Reading based on top column No. 2 and final column No. 3	Reading based on top column No. 2 and final column No. 3																																								
	<table border="1"> <thead> <tr> <th>DEC</th> <th>CHAR</th> <th>DEC</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>A</td> <td>100</td> </tr> <tr> <td>2</td> <td>B</td> <td>200</td> </tr> <tr> <td>3</td> <td>C</td> <td>300</td> </tr> <tr> <td>4</td> <td>D</td> <td>400</td> </tr> </tbody> </table>	DEC	CHAR	DEC	1	A	100	2	B	200	3	C	300	4	D	400	<table border="1"> <thead> <tr> <th>DEC</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>CHAR</td> <td>A</td> <td>B</td> <td>C</td> <td>D</td> </tr> <tr> <td>DEC</td> <td>100</td> <td>200</td> <td>300</td> <td>400</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	DEC	1	2	3	4	CHAR	A	B	C	D	DEC	100	200	300	400										
	DEC	CHAR	DEC																																							
	1	A	100																																							
2	B	200																																								
3	C	300																																								
4	D	400																																								
DEC	1	2	3	4																																						
CHAR	A	B	C	D																																						
DEC	100	200	300	400																																						
	* Execute reading column by column (specifying multiple columns at one time is not allowed).																																									

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**WR\_RECIPE\_FILE WR\_RECIPE\_FILE F0 F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Save to CSV file**

This macro command is used to save the data at the location starting from the address specified in [F0] to the CSV file in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	
F1	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	

: Setting enabled (indirect designation disabled)  
 : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	Transfer source
F1	ASCII code (8 one-byte upper-case alphanumeric characters*1): CSV file name*2
F1+1	
F1+2	
F1+3	

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to “Supplemental remarks” on page 4-203.

**CSV file**

Storage target: \(\access folder)\RECIPE\(\arbitrary folder)

File name: \xxxxxxx.csv

            
 8 one-byte upper-case alphanumeric characters or less

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

**Example**

- \$u100 = 'TARGET'
  - SET\_RECIPFOLDER \$u100
  - \$u110 = 5250H (W)
  - \$u111 = 444FH (W)
  - \$u112 = 4355H (W)
  - \$u113 = 3754H (W)
  - WR\_RECIPF\_FILE PLC1 [D200] \$u110
- ] Not required if SET\_FOLDER has  
already been executed
- ] 50 52 4F 44 55 43 54 37 = PRODUCT7  
(ASCII)

The above program overwrites the PRODUCT7.csv file stored in the TARGET folder with the data at the location starting from PLC1: D200.

**Supplemental remarks**

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
  - If the CSV file specified in [F1] does not exist, a storage read error occurs (\$s497 = 16).
  - The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
  - The result of macro execution is stored in \$s1062.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**WR\_RECIPE\_LINE WR\_RECIPE\_LINE F0 F1 F2 F3**

All models	<input type="radio"/>
------------	-----------------------

**Function: Save to CSV file (line designation)**

This macro command is used to save the data at addresses from the one specified in [F0] in a specified line, or an additional final line, of the CSV file specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	⊙	⊙	⊙	○
F3	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer source	
F1	ASCII code (8 one-byte upper-case alphanumeric characters <sup>*1</sup> ): CSV file name <sup>*2</sup>	
F1+1		
F1+2		
F1+3		
F2	1 - 32767: Top line -1: Additional final line <sup>*3</sup>	1 - 4096: Top line
F3	1 - 32767: Final line -1: Additional final line <sup>*3</sup>	1 - 4096: Final line

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to "Supplemental remarks" on page 4-203.

\*3 An additional final line is only saved if "-1" is set for both F2 and F3.

**CSV file**

Storage target: \(\access folder\)RECIPE\(\arbitrary folder\)

File name: \xxxxxxx.csv

8 one-byte upper-case alphanumeric characters or less

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

### Example

- \$u100 = 'TARGET'  
SET\_RECIPFOLDER \$u100  
\$u110 = 5250H (W)  
\$u111 = 444FH (W)  
\$u112 = 4355H (W)  
\$u113 = 3754H (W)  
WD\_RECIPF\_LINE PLC1 [D200] \$u110 3 3
- Not required if SET\_FOLDER has already been executed
- 50 52 4F 44 55 43 54 37 = PRODUCT7 (ASCII)

The above program overwrites line No. 3 in the PRODUCT7.csv file stored in the TARGET folder with the data at the location starting from PLC1: D200.

### Supplemental remarks

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
- If the specified CSV file does not exist, specifying "1" or "-1" for [F2] creates a new file. If [F2] ≠ 1, a storage read error (\$s497 = 16) occurs. However, when [Line: Data, Column: Record] is selected, use "WR\_RECIPF\_COLUM" to create a new file.
- When setting "-1" for [F2] and [F3] and adding an additional final line, make sure that the number of lines does not exceed 32767. The macro will not operate correctly on files with more than 32767 lines.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**WR\_RECIPE\_**  
**COLUMN**

All models	<input type="radio"/>
------------	-----------------------

**WR\_RECIPE\_COLUMN F0 F1 F2 F3****Function: Save to CSV file (column designation)**

This macro command is used to save the data at the location starting from the address in [F0] to the specified column in the F1-specified CSV file.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙	⊙	⊙	
F1	⊙	⊙	⊙	
F2	⊙	⊙	⊙	○
F3	⊙	⊙	⊙	○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	Line: Record, Column: Data	Line: Data, Column: Record
F0	Transfer source	
F1	ASCII code (8 one-byte upper-case alphanumeric characters <sup>*1</sup> ): CSV file name <sup>*2</sup>	
F1+1		
F1+2		
F1+3		
F2	0: Column of record name 1 - 4096: Top column of data	
F3	0: Column of record name 1 - 4096: Final column of data	

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to "Supplemental remarks" on page 4-203.

**CSV file**

Storage target: \(\text{access folder})\RECIPE\(\text{arbitrary folder})

File name: \xxxxxxx.csv

8 one-byte upper-case alphanumeric characters or less

The designation of the line and column numbers in a CSV file differs, depending on the options selected for [Format Setting] ([Recipe] → [File Format]). The ♦ mark indicates the position of line No. 1 and column No. 1 in a CSV file.

	<input type="checkbox"/> Add title to data	<input checked="" type="checkbox"/> Add title to data																		
<input type="checkbox"/> Add record name	<table border="1"> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	♦									<table border="1"> <tr><td colspan="3">Title</td></tr> <tr><td>♦</td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Title			♦					
♦																				
Title																				
♦																				
<input checked="" type="checkbox"/> Add record name	<table border="1"> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	Record	♦								<table border="1"> <tr><td>-</td><td colspan="2">Title</td></tr> <tr><td>Record</td><td>♦</td><td></td></tr> <tr><td></td><td></td><td></td></tr> </table>	-	Title		Record	♦				
Record	♦																			
-	Title																			
Record	♦																			

### Example

- \$u100 = 'TARGET'  
SET\_RECIPFOLDER \$u100  
\$u110 = 5250H (W)  
\$u111 = 444FH (W)  
\$u112 = 4355H (W)  
\$u113 = 3754H (W)  
WR\_RECIPF\_COLUMN PLC1 [D300] \$u110 5 5
- ] Not required if SET\_FOLDER has already been executed  
] 50 52 4F 44 55 43 54 37 = PRODUCT7 (ASCII)

The above program overwrites column No. 5 in the PRODUCT7.csv file stored in the TARGET folder with the data at the location starting from PLC1: D300.

### Supplemental remarks

- Four consecutive words starting from the address in [F1] are used. Be sure that these words are not already used elsewhere.
- If the CSV file specified in [F1] does not exist, a storage read error occurs (\$s497 = 16).
- When [Line: Data, Column: Record] is selected, a new CSV file is created by specifying [F2] = 1.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



**GET\_RECIPE\_**  
**FILEINFO**

All models	<input type="radio"/>
------------	-----------------------

**GET\_RECIPE\_FILEINFO F0 F1 F2****Function: CSV file information**

This macro command is used to store the number of lines/columns of the F1-specified CSV file in memory at the address in [F2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
F1	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	
F2	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	0: Number of lines 1: Number of columns
F1	0000 - 9999: CSV file number designation (RECxxx.csv) -1 (FFFFH): CSV file name designation (xxxxxxx.csv)
F1+1	Valid if F1 = -1 ASCII code (8 one-byte upper-case alphanumeric characters* <sup>1</sup> ): CSV file name* <sup>2</sup>
F1+2	
F1+3	
F1+4	
F2	Information storage device memory

\*1 These options under [System Setting] → [Unit Setting] → [General Setting] must be checked:

- [File name designation in Recipe Macro (V7 compatible)]
- [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)]

Maximum number of the character will be 64 words when [Allow max. 8 characters for naming files used in V8 recipe mode (V8 compatible)] is not checked. (32 words in total from F0 to F0 + 31 will be occupied.)

\*2 For details on text processing of the file name, refer to "Supplemental remarks" on page 4-203.

**Example**

- CSV file number designation  
\$u100 = 0 (W) [Line]  
\$u200 = 1 (W) [File number]  
GET\_RECIPE\_FILEINFO \$u100 \$u200 \$u300

The above program stores the number of lines of the REC0001.CSV file located in the RECIPE folder in \$u300.

- CSV file name designation  
`$u400 = 'TEST'`  
`SET_RECIPFOLDER $u400` ] Not required if SET\_FOLDER has  
already been executed  
`$u100 = 1 (W) [Column]`  
`$u200 = -1 (W) [File name]`  
`$u201 = 'SUBDATA' [File name]`  
`GET_RECIPF_FILEINFO $u100 $u200 $u300`

The above program reads the number of columns in the file "SUBDATA.CSV" under the TEST folder from the recipe setting and stores it in \$u300.

### Supplemental remarks

- When a CSV file name is specified, the next four consecutive words starting from the address in [F1+1] are used. Be sure that these words are not already used elsewhere.
- If [Add title to data] is checked under [Format Setting] ([Recipe] → [File Format]), the number of lines to be stored does not include the title line.
- If [Add record name] is checked under [Format Setting] ([Recipe] → [File Format]), the number of columns to be stored does not include the column of the record name.
- In the event of storing the number of columns with [Line: Record, Column: Data] checked or storing the number of lines with [Line: Data, Column: Record] checked under [Format Setting] ([Recipe] → [File Format]), the data is stored based on the readout from the settings made under [Format Setting].
- The result of macro execution is stored in \$s990.

Code (DEC)	Contents
0	Normal
1	F0 parameter invalid
2	F1 parameter invalid
3	F2 parameter invalid
4	F3 parameter invalid
5	Error found during accessing the specified file
6	Unable to process the specified file

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.19 Storage (Sampling)

### SMPL\_BAK

All models	<input type="radio"/>
------------	-----------------------

### SMPL\_BAK F0

#### Function: Save backup (bin file)

This macro command is used to make a backup file of logging or alarm data in block No. [F0] and to save the file to the year/month/day folder in the storage.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

#### \$s1671

The output destination server (logging server, alarm server, V8 compatible operation) is changed according to the value in \$s1671.

\$s1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

#### Setting range

	Value
F0	0 - 11: Block number

#### File

- Logging server

Storage target: \(\access folder)\LOGGING\(\year/month folder)\(\year/month/day folder)

File name: LOGGINGxx\_YYYYMMDDHHMMSS.bin

00 - 11: Block number

Output time in year, month, day, hour, minute, and second

- Alarm server

Storage target: \(\access folder)\ALARM\(\year/month folder)\(\year/month/day folder)

File name: ALARMxx\_YYYYMMDDHHMMSS.bin (alarm)

EVENTxx\_YYYYMMDDHHMMSS.bin (event)


00 - 11: Block number

Output time in year, month, day, hour, minute, and second

### Example

- $\$s01671 = 1$  (W) [Logging server designation]  
SMPL\_BAK 2


The above program creates a backup file for logging block 2 (LOGGING02.bin) on April 20, 2014.

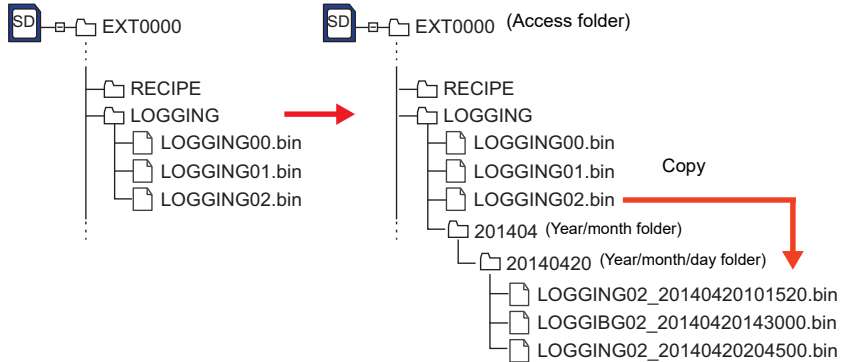

4

### Supplemental remarks

- This macro command is valid when [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window of the logging or alarm block.

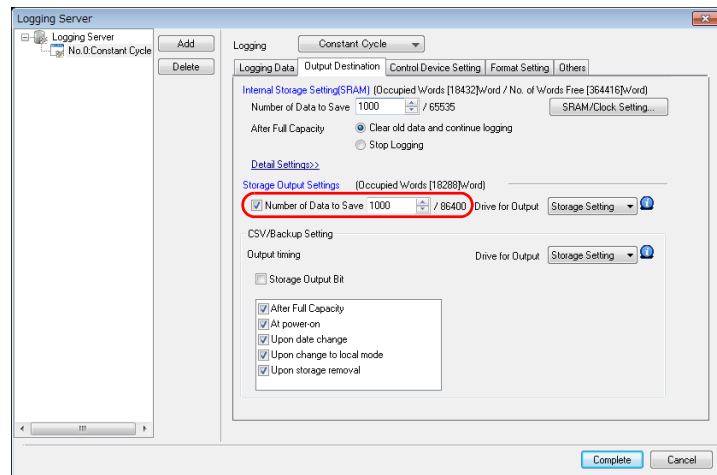

- Data stored in SRAM is output to the storage and saved in a backup file.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in  $\$s1062$ .  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SMPL\_CSV**

All models	<input type="radio"/>
------------	-----------------------

**SMPL\_CSV F0****Function: Create CSV file**

This macro command is used to convert the logging or alarm data in block No. [F0] to the CSV file, and to save the file to the LOGGING or ALARM folder in the storage.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**\$\$s1671**

The output destination server (logging server, alarm server, V8 compatible operation) is changed according to the value in \$\$s1671.

\$\$s1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

**Setting range**

	Value
F0	0 - 11: Block number

**File**

- Logging server

Storage target: \(\access folder)\LOGGING

File name: \xxxxxxx.csv

File name

- Alarm server

Storage target: \(\access folder)\ALARM

File name: \xxxxxxx.csv

File name


- \* Specify a file name as desired in [Form Setting] in the [Logging Block] or [Alarm Block] window.

**Example**


- \$s01671 = 1 (W)[Logging server designation]  
SMPL\_CSV 1

The above program converts the data of logging block 1 to CSV format (SMP\_01.CSV) and saves the file.


With [Number of Data to Save] under [Storage Output Settings] unchecked:

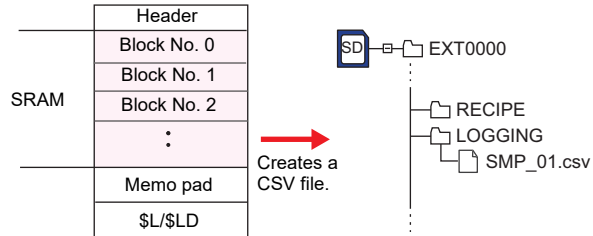

With [Number of Data to Save] under [Storage Output Settings] checked:

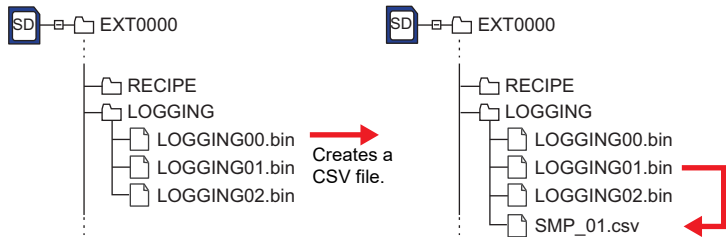**Supplemental remarks**

- When [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window, data stored in SRAM is output to the storage device and saved in a CSV file.
- [Format Setting] is required for each block number.

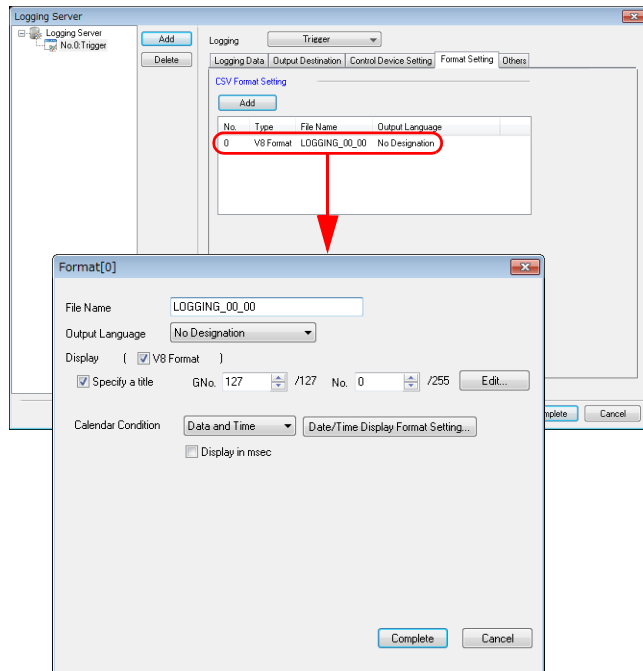

- If the specified file already exists, it will be overwritten.
- If the block is empty, no CSV file will be created.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SMPL\_CSV2**

All models	<input type="radio"/>
------------	-----------------------

**SMPL\_CSV2 F0 F1****Function: Create CSV file (file name designation)**

This macro command is used to convert the logging or alarm data in block No. [F0] to the CSV file under a name specified for [F1], and to save the file to the LOGGING or ALARM folder in the storage. If the specified file does not exist, a new file will be created.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			○
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**\$\$s1671**

The output destination server (logging server, alarm server, V8 compatible operation) is changed according to the value in \$\$s1671.

\$\$s1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

**Setting range**

	Value
F0	0 - 11: Block number
F1	ASCII code (64 one-byte uppercase alphanumerics at the maximum): CSV file name


**File**

- Logging server  
Storage target: \ (access folder) \ LOGGING  
File name: xxxxxxxx.csv
- Alarm server  
Storage target: \ (access folder) \ ALARM  
File name: xxxxxxxx.csv




**Example**


- The file named "SEISAN.CSV" is created from the data in logging block No. 1.  
 \$s01671 = 1 (W) [Logging server designation]  
 \$u00100 = 'SEISAN' (STRING) [Filename]  
 SMPL\_CSV2 1 \$u00100

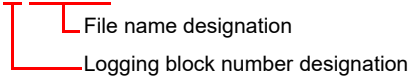

With [Number of Data to Save] under [Storage Output Settings] unchecked:

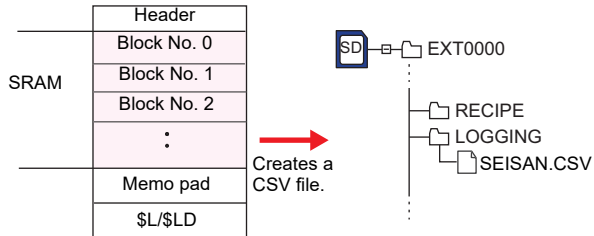


With [Number of Data to Save] under [Storage Output Settings] checked:

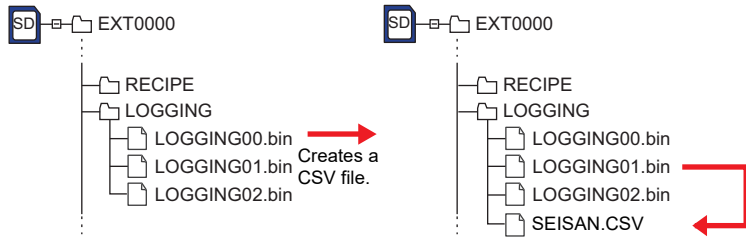

\* If  [Insert/Overwrite together with STRING Command] is checked in the [Device Setting] or [Macro Editing Support] dialog, the macro command STRING can also be registered.  
 For more information on STRING, refer to page 4-46.

### Supplemental remarks

- When [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window, data stored in SRAM is output to the storage device and saved in a CSV file.
- [Format Setting] is required for each block number.

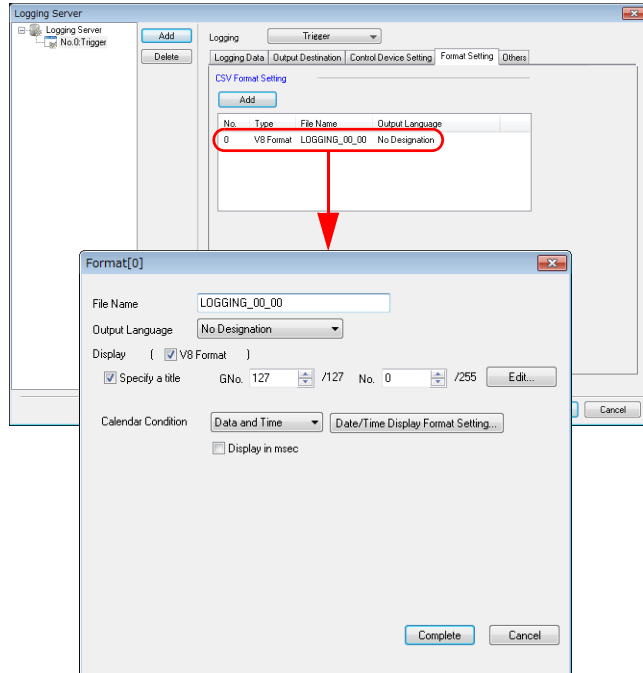

- If the specified file already exists, it will be overwritten.
- If the block is empty, no CSV file will be created.
- A full pathname can be specified for [F1].
  - \* When using X1 series or TELLUS Ver.4, any path after the storage folder can be specified as desired. For details on storage folder of X1 series / TELLUS Ver. 4, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Restrictions

- Symbols, [N], [I], [:], [\*], [?], ["], [<], [>] and [[]], cannot be used for a file name.

## SMPL\_SAVE

All models	<input type="radio"/>
------------	-----------------------

## SMPL\_SAVE

**Function: Save logging/alarm data stored in SRAM**

This macro command is used to save the logging or alarm data stored in SRAM to the storage at the desired set timing.

**\$\$s1673**

The macro command operation is specified by the value in \$\$s1673.

\$\$s1673	Contents
0	V8 compatible output (buffering area output)
Other than 0	Output all blocks.

**File**


- Logging server  
Storage target: \(\access folder\)LOGGING  
File name: \LOGGINGxx.bin  

00 - 11: Block number
- Alarm server  
Storage target: \(\access folder\)ALARM  
File name: \ALARMxx.bin  

00 - 11: Block number

**Supplemental remarks**

- This macro command is valid when [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window of the logging or alarm block.

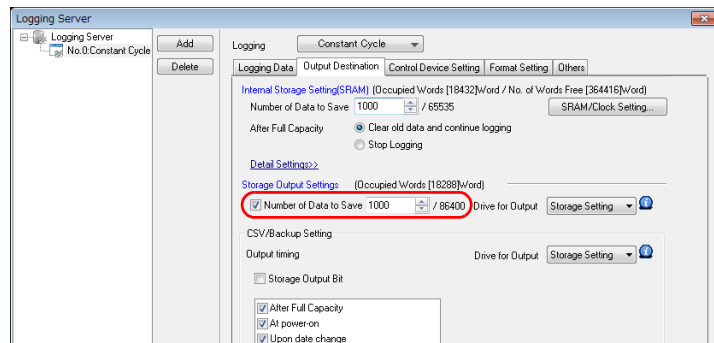

- Data stored in SRAM is output to the storage and saved in a backup file.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$\$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SMPLCSV\_BAK

## SMPLCSV\_BAK F0

All models	<input type="radio"/>
------------	-----------------------

**Function: Save backup (CSV file)**

This macro command is used to convert the logging or alarm data in block No. [F0] to the CSV file, and to save the file to the year/month/day folder in the storage.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**\$\$1671**

The output destination server (logging server, alarm server, V8 compatible operation) is changed according to the value in \$\$1671.

\$\$1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

**Setting range**

Device	Value
F0	0 - 11: Block number

**File**

- Logging server

Storage target: \\(access folder)\LOGGING\year/month folder\year/month/day folder)

File name: \xxxxxxx\_YYYYMMDDHHMMSS.csv

File name

Output time in year, month, day, hour, minute, and second

- Alarm server

Storage target: \\(access folder)\ALARM\year/month folder\year/month/day folder)

File name: \xxxxxxx\_YYYYMMDDHHMMSS.csv

File name


Output time in year, month, day, hour, minute, and second

- \* Specify a file name as desired in [Form Setting] in the [Logging Block] or [Alarm Block] window.


**Example**

- \$s01671 = 1 (W) [Logging server designation]  
 SMPLCSV\_BAK 1  
 The above program creates a CSV file for logging block 1 (LOGGING01.bin) on April 20, 2014.

With [Number of Data to Save] under [Storage Output Settings] unchecked:

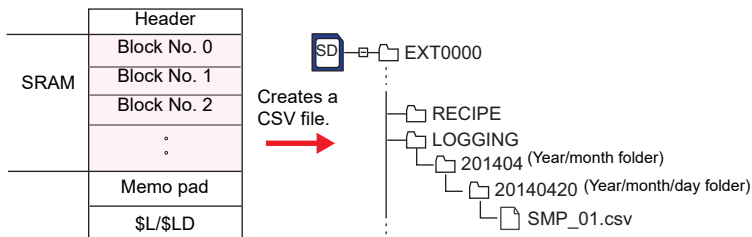


With [Number of Data to Save] under [Storage Output Settings] checked:

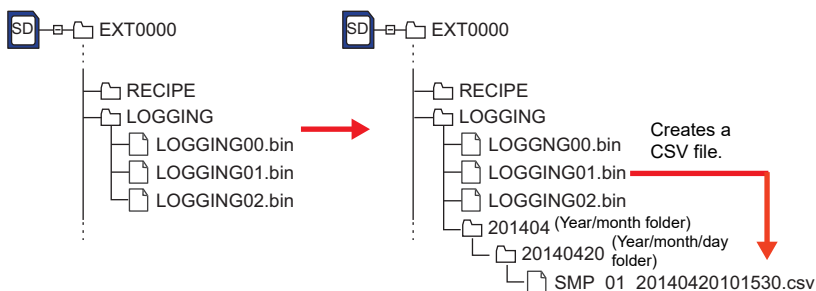

**Supplemental remarks**

- When [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window, data stored in SRAM is output to the storage device and saved in a CSV file.
- [Format Setting] is required for each block number.

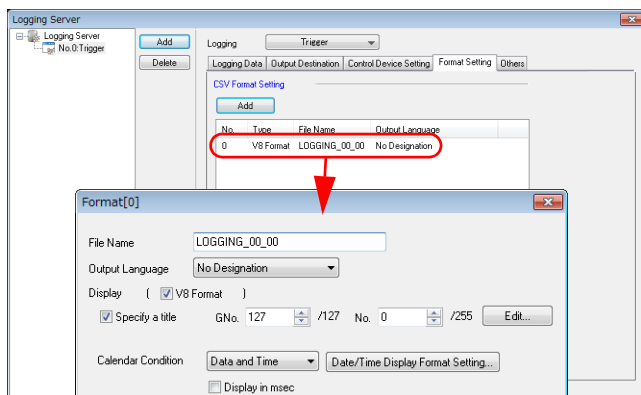

- If the block is empty, no CSV file will be created.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SMPLCSV\_BAK2

## SMPLCSV\_BAK2

All models **Function: Create CSV backup file (file name designation)**

This macro command is used to convert the logging or alarm data in block No. [F0] to the CSV file under a name specified for [F1], and to save the file to the year/month/day folder in the storage.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			○
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**\$\$s1671**

The output destination server (logging server, alarm server, V8 compatible operation) is changed according to the value in \$\$s1671.

\$\$s1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

**Setting range**

	Value
F0	0 - 11: Block number
F1	ASCII code (64 one-byte uppercase alphanumerics at the maximum): CSV file name

**File**

- Logging server

Storage target: \\(access folder)\LOGGING\year\month\folder\year\month\day\folder

File name: \xxxxxxx\_YYYYMMDDHHMMSS.csv

File name      Output time in year, month, day, hour, minute, and second

- Logging server


Storage target: \\(access folder)\LOGGING\year\month\folder\year\month\day\folder

File name: \xxxxxxx\_YYYYMMDDHHMMSS.csv

File name      Output time in year, month, day, hour, minute, and second


**Example**

- A CSV file is created for block No. 1 backup.  
 April 20, 2014, file name "SEISAN.CSV"  
 $\$s01671 = 1$  (W) [Logging server designation]  
 $\$u00100 = 'SEISAN'$  (STRING)  
 SMPLCSV\_BAK2 1  $\$u00100$

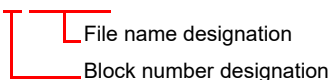


- \* If  Insert/Overwrite together with STRING Command is checked in the [Device Setting] or [Macro Editing Support] dialog, the macro command STRING can also be registered.  
 For more information on STRING, refer to page 4-46.

With [Number of Data to Save] under [Storage Output Settings] unchecked:

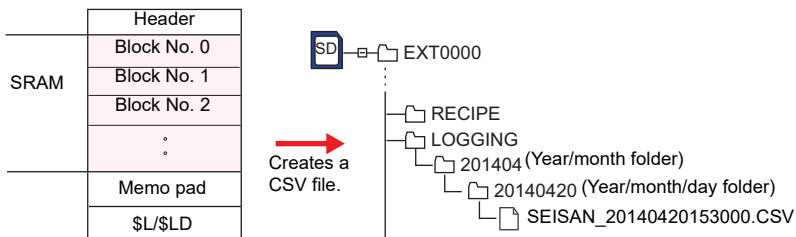

With [Number of Data to Save] under [Storage Output Settings] checked:

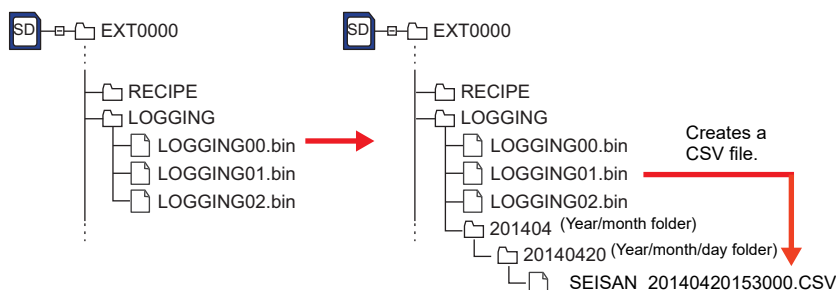

**Supplemental remarks**

- When [Number of Data to Save] under [Storage Output Settings] is checked in the [Output Destination] window, data stored in SRAM is output to the storage device and saved in a CSV file.
- The format setting must be made for each block number. (Refer to page 4-225.)
- If the block is empty, no CSV file will be created.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in  $\$s1062$ .  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**Restrictions**

- Symbols, [], [/, [:], [\*], [?], ["], [<], [>] and [], cannot be used for a file name.

## 4.20 Storage (Others)

### HDCOPY

All models	<input type="radio"/>
------------	-----------------------

### HDCOPY

#### Function: Hardcopy

This macro command is used to save the image of the screen displayed at the time of the macro execution to the storage.


#### Storage target

Storage target:    \\(access folder)\HDCOPY  
File name:         \\HDxxx.PNG

0000 - 1023: Screen number

#### Supplemental remarks

- One file saves one screen. If a screen file you wish to save already exists in the storage, the file will be overwritten.
- Files can also be saved in JPEG format.  
Select the [System Setting] → [Other] → [Storage Setting] → [Store HDCOPY Macro in JPEG Format] checkbox.

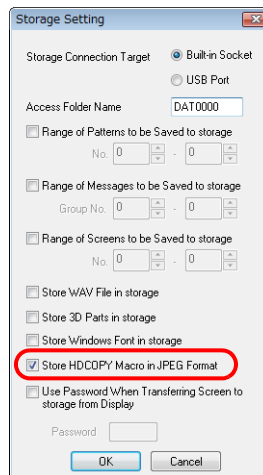

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## HDCOPY2

All models	<input type="radio"/>
------------	-----------------------

## HDCOPY2 F0

### Function: Hardcopy

This macro command is used to save the image of the screen displayed at the time of macro execution with the backup number specified in [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	0 - 99: Backup number


### Storage target

Storage target: (access folder)\HDCOPY  
 File name: \HDxxx~yy.PNG

| |  
 00 - 99: Backup number  
 000 - 999: Screen number  
 (Screen Nos. 1000 - 1023 invalid)

### Supplemental remarks

- With the use of backup numbers, a maximum of 100 hardcopy images can be saved per screen. You can, therefore, view time-series variations in these images.
- Files can also be saved in JPEG format.  
 Select the [System Setting] → [Other] → [Storage Setting] → [Store HDCOPY Macro in JPEG Format] checkbox.

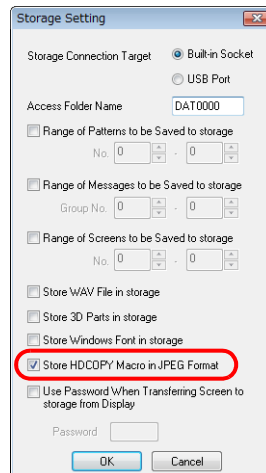

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended..

Code (DEC)	Contents
-1	Execution error

## HDCOPY3

All models	<input type="radio"/>
------------	-----------------------

## HDCOPY3

**Function: Hardcopy (file name designation)**

This macro command is used to save the screen image (PNG) displayed at the time of the macro execution, under a file name specified in [F0], to the storage.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	ASCII code (64 one-byte uppercase alphanumerics at the maximum): File name

**File**

Storage target: \ (access folder)\HDCOPY

File name: \xxxxxxx.PNG

└ File name

**Example**

- The file named "SCREEN10.PNG" is created.

\$u00100 = 'SCREEN10' (STRING)

HDCOPY3 \$u00100


└ File name designation

- \* If  [Insert/Overwrite together with STRING Command] is checked in the [Device Setting] or [Macro Editing Support] dialog, the macro command STRING can also be registered. For more information on STRING, refer to page 4-46.

**Supplemental remarks**

- One file saves one screen. If a screen file you wish to save already exists in the storage, the file will be overwritten.
- A full pathname can be specified for [F0].
  - \* When using X1 series or TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder of X1 series / TELLUS Ver. 4, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- Files can also be saved in JPEG format.

Select the [System Setting] → [Other] → [Storage Setting] → [Store HDCOPY Macro in JPEG Format] checkbox.

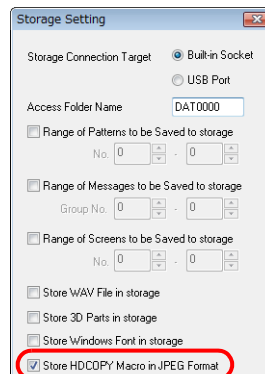

- \* If a full path is specified, the image will be saved with the extension (\*.JPG or \*.PNG) specified in the path.

- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Restrictions

- Symbols, [\], [/], [:], [\*], [?], ["], [<], [>] and [[]], cannot be used for a file name.

**SET\_DRIVE**

All models	<input type="radio"/>
------------	-----------------------

**SET\_DRIVE F0****Function: Select drive**

This macro command is used to select a storage drive to be accessed by the recipe macro command.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			

- : Setting enabled (indirect designation disabled)  
 : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	V9	X1/TELLUS Ver.4 *1
F0	Drive name designation *2 C: Built-in SD card drive D: Storage device connected to USB port	Drive name designation *2 For X1 C: "sd" folder D: "usb" folder or external USB storage For TELLUS Ver.4 C: "sd" folder D: "usb" folder

\*1 For details on the location to be accessed by storage of X1 series or TELLUS Ver.4, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.

\*2 The drive name must be followed by a colon.  
For details on text processing of the drive name, refer to "About text processing".

**Example**

- \$u0010 ='D:' (STRING)  
SET\_DRIVE \$u0010

The above program switches access to the D drive (storage device connected to the USB port of the V9 series).

**Supplemental remarks**

- If the drive name is not correctly specified, no operation takes place.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

- A drive change due to this macro command occurs only when any recipe macro command is executed.  
No drive change will be made for sampling data storage and macro commands other than that which is recipe-related.

- After the drive has been changed with this command, files under the folder specified for [Access Folder Name] in [System Setting] → [Storage Setting] are accessed. To change the folder to access using a recipe-related macro command, use "SET\_RECIPFOLDER" (page 4-200).

### About text processing

Text processing (LSB → MSB or MSB → LSB) for the drive name is determined whether [Follow to the PLC1 setting for the text process in a recipe file.] on the [General Settings] window that is displayed by [System Setting] → [Unit Setting] is checked or not.

Use the character code conversion commands according to the above checks.

<input checked="" type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.	<input type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.
Text processing specified for the PLC1	Fixed to "LSB → MSB"
Use [CHR] command. (page 4-45)	Use [STRING] command.(page 4-46)

**COPY\_FILE****COPY\_FILE F0 F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Copy file**

This macro command is used to copy the file specified in [F0] to the file specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	Full pathname of the copy source (within 255 alphanumeric) *1*2	Drive name designation For V9 series C: Built-in SD card drive D: Memory device connected to USB port
F1	Full pathname of the copy destination (within 255 alphanumeric) *1*2	For X1 series *3 C: "sd" folder D: "usb" folder or external USB storage W/X/Y/Z: External USB storage For TELLUS Ver.4 *2 C: "sd" folder D: "usb" folder

\*1 For details on text processing of the drive name, refer to "About text processing" on page 4-243.

\*2 When using TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.


\*3 When using the X1 series, the method of specifying the path differs depending on [System Setting] → [Other] → [Storage Setting]. For details, refer to "Example: X1 series" described later.

**Example: V9 series / TELLUS Ver. 4**

## • Operation 1

The program below copies "C:\EXT0000\RECIPE\abc.csv" to "D:\EXT0000\RECIPE\abc.csv".


- \$u00100 = 'C:\EXT0000\RECIPE\abc.csv' (STRING)
- \$u00200 = 'D:\EXT0000\RECIPE\' (STRING)
- COPY\_FILE \$u00100 \$u00200

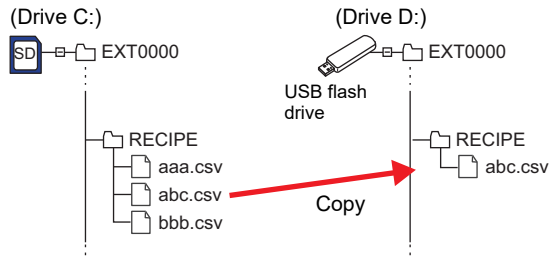

## • Operation 2

The program below copies all files stored in "C:\EXT0000\RECIPE" to "D:\EXT0000\RECIPE".

- \$u00100 = 'C:\EXT0000\RECIPE\\*.\*' (STRING)
- \$u00200 = 'D:\EXT0000\RECIPE\' (STRING)
- COPY\_FILE \$u00100 \$u00200

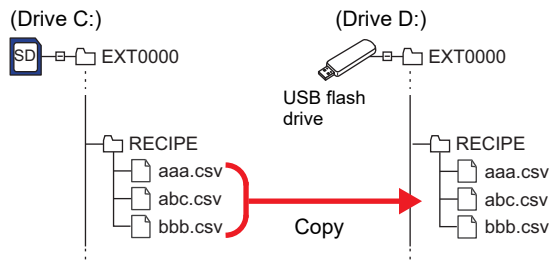


## • Operation 3

The program below copies "C:\EXT0000\RECIPE\aaa.csv" to "D:\EXT0000\RECIPE\LINE1" and rename the file.

In this example, the file name "ccc.csv" to be used for the renaming, is stored in PLC3 devices WM100 to 103.

- \$u00100 = 'C:\EXT0000\RECIPE\aaa.csv' (STRING)
- \$u00200 = 'D:\EXT0000\RECIPE\LINE1\' (STRING)
- \$u00212 = PLC3[WM00000100] C:4(BMOV) (W) \*
- COPY\_FILE \$u00100 \$u00200

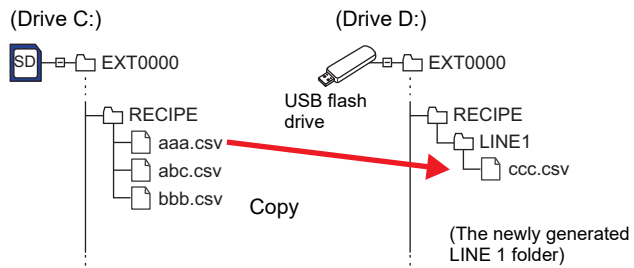


\* If PLC3's character processing is "MSB → LSB", convert the 4 words of data starting from \$u212 to "LSB → MSB" using SWAP command (page 4-44), and then execute COPY\_FILE command.




### Example: X1 series

The method of specifying the path and accessible area differ depending on [System Setting] → [Other] → [Storage Setting].

[External USB storage]

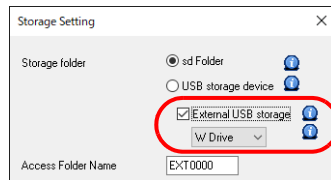

[Allow access to external storage when using macros]

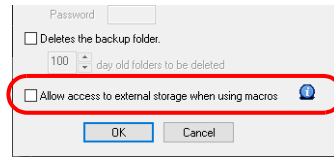

[Allow access to external storage when using macros]	Selected		Unselected	
	[External USB storage]		Specified *1	Not specified
Accessible area	Specified / not specified		Internal storage of the X1 unit C:\MONITOUCH\X1\0\work\strage) *2	"sd" folder "usb" folder
	External USB storage All USB ports 1 to 4		External USB storage X1_Storage folder of the specified drive	External USB storage Access not available
Path specification method	Full path specification		Relative path specification "sd" folder: C:\ X1_Storage: D:\	Relative path specification "sd" folder: C:\ "usb" folder: D:\
Advantage	Multiple external storage and areas other than the internal storage area of the X1 unit can be accessed.		The path specification method is the same as the conventional models (V9/V8/TS). No need to change the path designation when replacing models.	

\*1 Not available for the sub app when using the multi-display function.

\*2 For the sub app when using the multi-display function, the accessible area is C:\MONITOUCH\X1\1\work\strage).


• Operation 1

The program below copies "sd\EXT0000\RECIPE\abc.csv" from the internal storage to "X1\_Storage\EXT0000\RECIPE" in the USB flash drive.



Internal storage of X1

(C:\MONITOUCH\X1\0\work\strage)

External USB storage (W:)

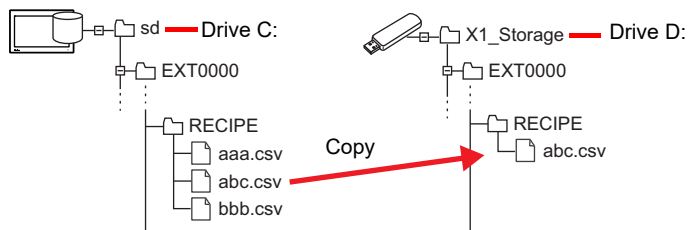

- Set [Storage setting] as follows.

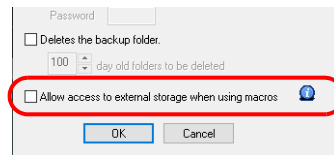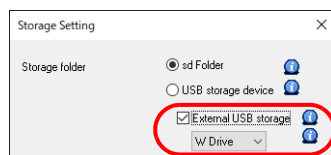

- \$u00100 = 'C:\EXT0000\RECIPE\abc.csv' (STRING)


\$u00200 = 'D:\EXT0000\RECIPE\' (STRING)

COPY\_FILE \$u00100 \$u00200


- Operation 2

The program below copies "sd\EXT000\RECIPE\abc.csv" in the internal storage to "usb\EXT000\RECIPE" in the internal storage.

Internal storage of X1 (C:\MONITOUCH\X1\0\work\strage\)


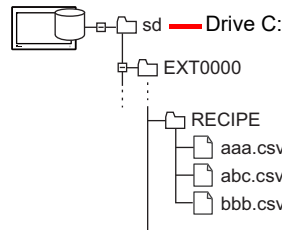


Internal storage of X1 (C:\MONITOUCH\X1\0\work\strage\)

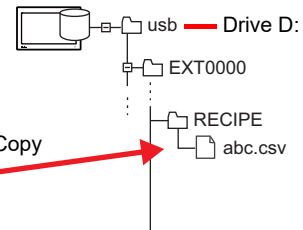

Copy

- Set [Storage setting] as follows.

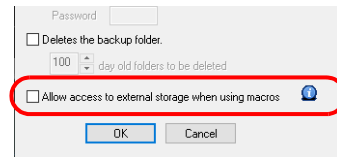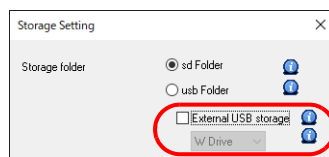


- \$u00100 = 'C:\EXT000\RECIPE\abc.csv' (STRING)  
 \$u00200 = 'D:\EXT000\RECIPE' (STRING)  
 COPY\_FILE \$u00100 \$u00200

- Operation 3

The program below copies "sd\EXT000\RECIPE\abc.csv" from the internal storage to "PRODUCT1" in the USB flash drive connected to the X drive.

Internal storage of X1 (C:\MONITOUCH\X1\0\work\strage\)

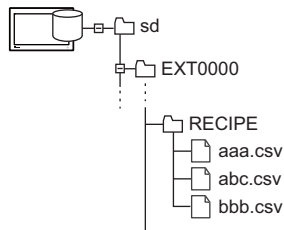


External USB storage (X:)



Copy

- Set [Storage setting] as follows.

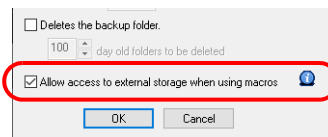


- \$u00100 =  
 'C:\MONITOUCH\X1\0\work\strage\sd\EXT000\RECIPE\abc.csv'  
 (STRING)  
 \$u00200 = 'X:\PRODUCT1' (STRING)  
 COPY\_FILE \$u00100 \$u00200


• Operation 4

The program below copies “sd\EXT0000\RECIPE\abc.csv” from the internal storage to “C:\UserData\PRODUCT1\” in the internal area of the X1 unit.

Internal storage of X1 (C:\MONITOUCH\X1\work\strage)      Internal area of the Unit (C:)

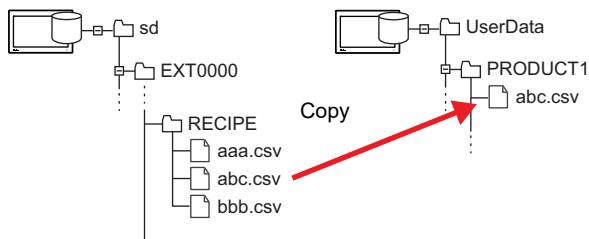

- Set [Storage setting] as follows.

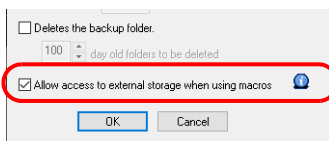

```

- $u00100 =
  'C:\MONITOUCH\X1\work\strage\sd\EXT0000\RECIPE\abc.csv'
  (STRING)
  $u00200 = 'C:\UserData\PRODUCT1\' (STRING)
  COPY_FILE $u00100 $u00200
    
```

**Supplemental remarks**

- When an asterisk “\*” is specified for the copy source file name (F0) or extension name, all of the files or files with all extensions are copied. The contents of subfolders are also copied.
- If the file name of the copy destination (F1) is omitted, the data is copied to the file under the same name.
- If the full pathname is other than alphanumeric, it may not work properly. Use one-byte alphanumeric characters.
- If the full pathname is terminated with the following characters, it will not be recognized as a path and will result in a macro execution error.  
Space, \*, ?, ", <, >, and |
- If the full pathname is not correctly specified, no operation takes place.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### About text processing

Text processing (LSB → MSB or MSB → LSB) for the drive name is determined whether [Follow to the PLC1 setting for the text process in a recipe file.] on the [General Settings] window that is displayed by [System Setting] → [Unit Setting] is checked or not.

Use the character code conversion commands (CHR or STRING) according to the above checks.

<input checked="" type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.	<input type="checkbox"/> Follow to the PLC1 setting for the text process in a recipe file.
Text processing specified for the PLC1	Fixed to "LSB → MSB"
Use [CHR] command. (page 4-45)	Use [STRING] command.(page 4-46)

\* When transferring a file name string from the PLC2 to 8 devices, refer to [Operation 3] in the "Example" section.

**MOVE\_FILE****MOVE\_FILE F0 F1 F2**

All models	<input type="radio"/>
------------	-----------------------

**Function: Move file**

This macro command is used to move the file or folder specified in [F0] to the path specified in [F1].

File renaming is also possible.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input type="radio"/>			
F2	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	Source full pathname (within 255 alphanumeric) *1*2	Drive name designation For V9 series C: Built-in SD card drive D: Memory device connected to USB port
F1	Target full pathname (within 255 alphanumeric) *1*2	For X1 series *3 C: "sd" folder D: "usb" folder or external USB storage W/X/Y/Z: External USB storage
F2	0 fixed	For TELLUS Ver.4 *2 C: "sd" folder D: "usb" folder


\*1 For details on text processing of the drive name, refer to "About text processing" on page 4-243.

\*2 When using TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.

\*3 When using the X1 series, the method of specifying the path differs depending on [System Setting] → [Other] → [Storage Setting]. For details, refer to "Example: X1 series" described later.

**Example: V9 series / TELLUS Ver. 4**

- The program below moves "C:\EXT0000\RECIPE\REC0000.csv" to "C:\EXT0000\RECIPE\SEISAN\abc.csv".  
`$u00100 = 'C:\EXT0000\RECIPE\REC0000.csv' (STRING)`  
`$u00200 = 'C:\EXT0000\RECIPE\SEISAN\abc.csv' (STRING)`  
`$u00300 = 0 (W)`  
`MOVE_FILE $u00100 $u00200 $u00300`

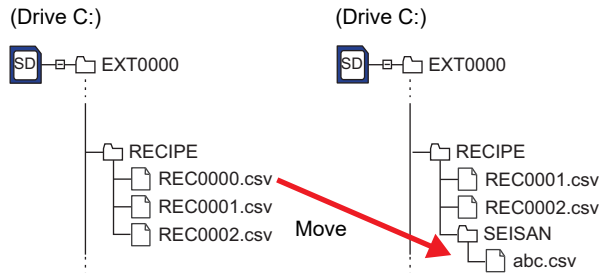

\* The file "REC0000.csv" is deleted.

4


**Example: X1 series**

The method of specifying the path and accessible area differ depending on [System Setting] → [Other] → [Storage Setting].

For details, refer to "Example: X1 series" on page 4-240 in the COPY\_FILE section.


- Operation 1

The program below moves and renames "sd\EXT0000\RECIPE\REC000.csv" specified by relative path from the internal storage to "X1\_Storage\EXT0000\RECIPE\SEISAN\abc.csv" in the USB flash drive.

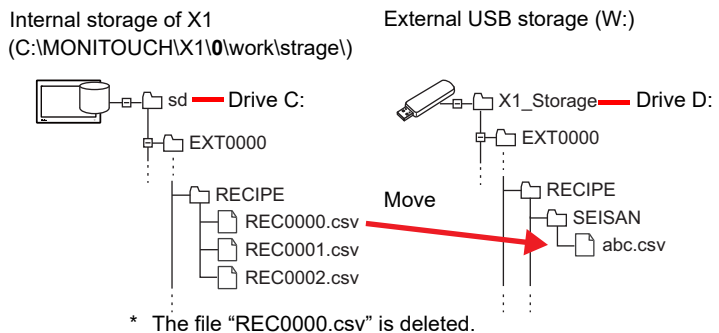


\* The file "REC0000.csv" is deleted.

- Set [Storage setting] as follows.

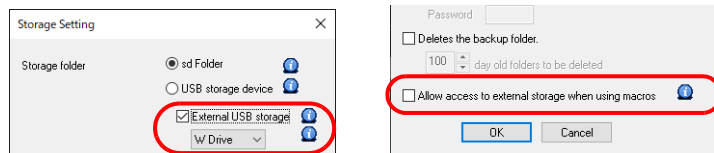


- `$u00100 = 'C:\EXT0000\RECIPE\REC0000.csv' (STRING)`  
`$u00200 = 'D:\EXT0000\RECIPE\SEISAN\abc.csv' (STRING)`  
`$u00300 = 0 (W)`  
`MOVE_FILE $u00100 $u00200 $u00300`

- Operation 2  
The program below moves and renames “sd\EXT0000\RECIPE\REC000.csv” specified by full path from the internal storage to “C:\UserData\PRODUCT1\abc.csv” in the internal area of the X1 unit.

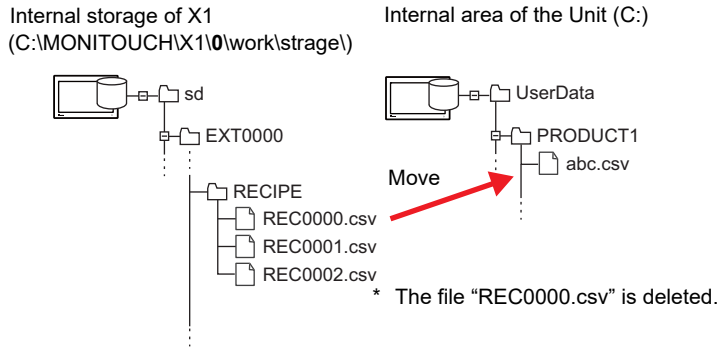

- Set [Storage setting] as follows.



- \$u00100 =  
'C:\MONITOUCH\X1\0\work\strage\sd\EXT0000\RECIPE\REC0000.csv'?(S  
TRING)  
\$u00200 = 'C:\UserData\PRODUCT1\abc.csv' (STRING)  
\$u00300 = 0 (W)  
MOVE\_FILE \$u00100 \$u00200 \$u00300

**Supplemental remarks**

- If the full pathname is terminated with the following characters, it will not be recognized as a path and will result in a macro execution error.  
Space, \*, ?, ", <, >, and |
- If the full pathname is not correctly specified, no operation takes place.  
A macro execution error will result.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to “Storage functions for X1 / TELLUS Ver. 4” in the “Preface” section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

- In the case of a read-only file movement between drives, the file is copied to the target location, and the file at the original location is not deleted.
- A folder to be moved is allowed to contain a maximum of 5 hierarchical levels under the folder. If files or folders at further lower levels exist under the folder, they can be copied to the target location, but those at the original location are not deleted.

**Restrictions**

- Use alphanumerics to specify full pathnames as the source and the target. If any characters other than alphanumerics are used, the function of this macro command is not assured.
- Wildcard characters (such as "\*" and "?") cannot be used for full pathnames as the source and the target.
- If a file of the same name already exists in the target location, it will not be overwritten.  
In this case, "-1" is set in \$s1062 (execution error). Change the file name and execute the macro again.



## DEL\_FILE

## DEL\_FILE F0

All models	<input type="radio"/>
------------	-----------------------

### Function: Delete file

This command is used to delete the file specified by [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

### Setting range

	Value	Remarks
F0	Full pathname to delete (within 255 alphanumeric) *1*2	Drive name designation For V9 series C: Built-in SD card drive D: Memory device connected to USB port For X1 series *3 C: "sd" folder D: "usb" folder or external USB storage W/X/Y/Z: External USB storage For TELLUS Ver.4 *2 C: "sd" folder D: "usb" folder


\*1 For details on text processing of the drive name, refer to "About text processing" on page 4-243.

\*2 When using TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.

\*3 When using the X1 series, the method of specifying the path differs depending on [System Setting] → [Other] → [Storage Setting]. For details, refer to "Example: X1 series" described later.

### Example: V9 series / TELLUS Ver. 4

- C:\EXT0000\RECIPE\REC0000.csv is going to be deleted.  
`$u00100 = 'C:\EXT0000\RECIPE\REC0000.csv' (STRING)`  
`DEL_FILE $u00100`

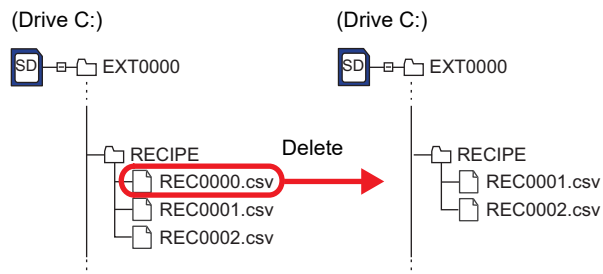

### Example: X1 series

The method of specifying the path and accessible area differ depending on [System Setting] → [Other] → [Storage Setting].


For details, refer to "Example: X1 series" on page 4-240 in the COPY\_FILE section.

- Operation


The program below deletes "sd\EXT0000\RECIPE\REC000.csv" in the internal storage.

Internal storage of X1

(C:\MONITOUCHX1\0\work\strage\)

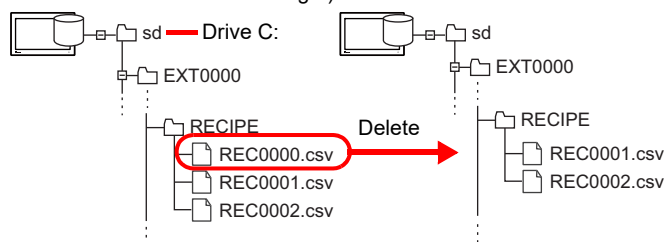

- Set [Storage setting] as follows.

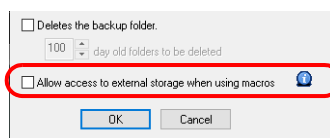

- \$u00100 = 'C:\EXT0000\RECIPE\REC0000.csv' (STRING)  
DEL\_FILE \$u00100

### Supplemental remarks

- If the full pathname is other than alphanumeric, it may not work properly. Use one-byte alphanumeric characters.
- If the full pathname is terminated with the following characters, it will not be recognized as a path and will result in a macro execution error.  
Space, \*, ?, ", <, >, and |
- If the full pathname is not correctly specified, no operation takes place. A macro execution error will result.
- F0 must be specified as a full pathname with the drive name specified.
- When an asterisk "\*" is specified for the file name (F0) or extension name, all the files or extensions are deleted. The contents of subfolders are also deleted.
- Please note that deleted files cannot be restored.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**READ\_FILE****READ\_FILE F0 F1 F2 F3**

All models	<input type="radio"/>
------------	-----------------------

**Function: Read universal file**

This macro command is used to read the file [F0] in binary format and to store the obtained data in memory [F1] and after.

It is also possible to acquire the size of the file [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input checked="" type="radio"/>			
F2	<input type="radio"/>			
F3	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value		Remarks
	File read	File size acquisition	
F0	Source full pathname (within 255 alphanumeric) *1*2		Drive name designation For V9 series C: Built-in SD card drive D: Memory device connected to USB port For X1 series *3 C: "sd" folder D: "usb" folder or external USB storage W/X/Y/Z: External USB storage For TELLUS Ver.4 *2 C: "sd" folder D: "usb" folder
F1	Storage memory	0 fixed	
F2	0 - 10485760 bytes: Size	0 fixed	DEC
F2+1			
F2+2	0 - 10485760 bytes: Offset from the top of the file	0 fixed	DEC
F2+3			
F2+4	0 fixed		
F3	Read data size storage memory (Data size successfully read)	File size storage memory	
F3+1			

  : ← MONITOUCH (return data)

\*1 For details on text processing of the drive name, refer to "About text processing" on page 4-243.

\*2 When using TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.

\*3 When using the X1 series, the method of specifying the path and accessible area differ depending on [System Setting] → [Other] → [Storage Setting]. For details, refer to "Example: X1 series" on page 4-240 in the COPY\_FILE section.

**Example**

- File read  
The file "ABC.DAT" is read from its 11th byte by 512 bytes into \$u1000 - \$u1255.

```

$u00100 = 'C:\EXT0000\ABC\ABC.DAT' (STRING) [Source full pathname]
$u00200 = 512 (D) [Size]
$u00202 = 10 (D) [Offset]
$u00204 = 0 (W) [0 fixed]
READ_FILE $u00100 $u01000 $u00200 $u00300

```

- File size acquisition  
The size of the file "ABC.DAT" is read into \$u300.

```

$u00100 = 'C:\EXT0000\ABC\ABC.DAT' [Source full pathname]
$u00200 = 0 (D) [0 fixed]
$u00202 = 0 (D) [0 fixed]
$u00204 = 0 (W) [0 fixed]
READ_FILE $u00100 $u01000 $u00200 $u00300

```

**Supplemental remarks**

- If any characters other than alphanumerics are used to specify a source full pathname, this macro command may not work normally. Be sure to use alphanumerics.
- Wildcard characters (such as "\*" and "?") cannot be used for a full pathname as the source.
- If the source full pathname is terminated with the following characters, it will not be recognized as a path and will result in a macro execution error.  
Space, \*, ?, ", <, >, and |
- If the file specified as the source does not exist, a macro execution error will occur and "-1" will be stored in the Read data size storage memory ( [F3] and [F3+1]).
- If the full pathname is not correctly specified, no operation takes place and a macro execution error will occur.
- In the event of an error during file reading, the data having been read is stored in memory. However, the size of the data does not affect the successfully read data size in [F3] and [F3+1].
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**WRITE\_FILE****WRITE\_FILE F0 F1 F2**

All models	<input type="radio"/>
------------	-----------------------

**Function: Write to universal file**

This macro command is used to write the data from memory [F1] and after in binary format to the file [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input checked="" type="radio"/>			
F2	<input type="radio"/>			

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value			Remarks
	New creation	Overwriting	Addition	
F0	Target full pathname (within 255 alphanumeric) *1*2			Drive name designation For V9 series C: Built-in SD card drive D: Memory device connected to USB port For X1 series *3 C: "sd" folder D: "usb" folder or external USB storage W/X/Y/Z: External USB storage For TELLUS Ver.4 *2 C: "sd" folder D: "usb" folder
F1	Source memory			
F2	0 fixed	1 fixed	2 fixed	
F2+1	0 - 10485760 bytes: Size			DEC
F2+2				
F2+3	0 fixed	0 - 10485760 bytes: Offset from the top of the file	0 fixed	
F2+4				
F2+5	0 fixed			

\*1 For details on text processing of the drive name, refer to "About text processing" on page 4-243.

\*2 When using TELLUS Ver. 4, any path after the storage folder can be specified as desired. For details on storage folder, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.

\*3 When using the X1 series, the method of specifying the path and accessible area differ depending on [System Setting] → [Other] → [Storage Setting]. For details, refer to "Example: X1 series" on page 4-240 in the COPY\_FILE section.

**Example**

- New creation

The 512 bytes of data in \$u1000 - \$u1255 is written to the new file "ABC.DAT" created in the folder "ABC".

```
$u00100 = 'C:\EXT0000\ABC\ABC.DAT' (STRING) [Target full pathname]
$u00200 = 0 (W) [0: New creation]
$u00201 = 512 (D) [Size]
$u00203 = 0 (D) [0 fixed]
$u00205 = 0 (W) [0 fixed]
WRITE_FILE $u00100 $u01000 $u00200
```

- Overwriting

The 33rd byte and after in the existing file "ABC.DAT" is overwritten with the 16 bytes of data in \$u1000 - \$u1007.

```
$u00100 = 'C:\EXT0000\ABC\ABC.DAT' (STRING) [Target full pathname]
$u00200 = 1 (W) [1: Overwriting]
$u00201 = 16 (D) [Size]
$u00203 = 32 (D) [Offset]
$u00205 = 0 (W) [0 fixed]
WRITE_FILE $u00100 $u01000 $u00200
```

- Addition

The 512 bytes of data in \$u1000 - \$u1255 is added to the existing file "ABC.DAT".

```
$u00100 = 'C:\EXT0000\ABC\ABC.DAT' (STRING) [Target full pathname]
$u00200 = 2 (W) [2: Addition]
$u00201 = 512 (D) [Size]
$u00203 = 0 (D) [0 fixed]
$u00205 = 0 (W) [0 fixed]
WRITE_FILE $u00100 $u01000 $u00200
```

**Supplemental remarks**

- If the name of a new file you intend to create is already used, delete the existing file first and create a new file.
- If the size specified with [F2+1] and [F2+2] is zero for a new file, an empty file will be created.
- If the file you specified for overwriting or data addition does not exist, an error will result.
- Wildcard characters (such as "\*" and "?") cannot be used for a full pathname as the target, to which data is written.
- If the target full pathname is other than alphanumeric, it may not work properly. Use one-byte alphanumeric characters.
- If the target full pathname is terminated with the following characters, it will not be recognized as a path and will result in a macro execution error.  
Space, \*, ?, ", <, >, and |
- If an illegal full pathname is specified, this macro command does not work. An error will result.
- In the event of an error during writing to a file, the data having been written remains in the file.
- The location to be accessed by storage functions differs between the V9 series and the X1 series/TELLUS Ver. 4. For details, refer to "Storage functions for X1 / TELLUS Ver. 4" in the "Preface" section.
- The result of macro execution is stored in \$s1062.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## 4.21 Real No. Arithmetical Operation


### F\_ADD(+)

All models	<input type="radio"/>
------------	-----------------------

### F0 = F1 + F2 (F)

#### Function: Real number addition

This macro command is used to write the result of [F1] real number data plus [F2] real number data to [F0].



#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	

#### Supplemental remarks

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

**F\_SUB(-)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 - F2 (F)****Function: Real number subtraction**

This macro command is used to write the result of [F1] real number data minus [F2] real number data to [F0].

DWORD

	F1+1	F1
—	F2+1	F2
	F0+1	F0

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error



**F\_MUL(X)**

All models	<input type="radio"/>
------------	-----------------------

**F0 × F2 (F)**

**Function: Real number multiplication**

This macro command is used to write the result of [F1] real number data multiplied by [F2] real number data to [F0].

DWORD

$$\begin{array}{r}
 \begin{array}{|c|c|}
 \hline
 F1+1 & F1 \\
 \hline
 F2+1 & F2 \\
 \hline
 F0+1 & F0 \\
 \hline
 \end{array} \\
 \times \\
 \hline
 \end{array}$$

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

**F\_DIV(/)**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F1 / F2 (F)****Function: Real number division**

This macro command is used to write the result of [F1] real number data divided by [F2] real number data to [F0].

DWORD

	F1+1	F1	
÷	F2+1	F2	
	F0+1	F0	... Remainder

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			○
F2	⊙			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
3	Calculation operation execution error
-1	Execution error

## 4.22 Real No. Statistics


### F\_SUM

### F0 = F\_SUM (F1 C:F2) (F)

All models	<input type="radio"/>
------------	-----------------------

#### Function: Sum of real number data

This macro command is used to sum the real number data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

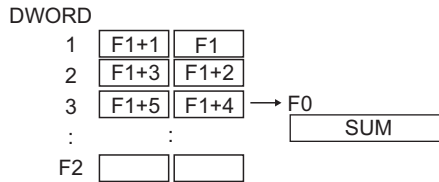

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	0 - 512

#### Supplemental remarks

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.


Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

**F\_AVG**

All models	<input type="radio"/>
------------	-----------------------

**F0 = F\_AVG (F1 C:F2) (F)****Function: Average of real number data**

This macro command is used to average the real number data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

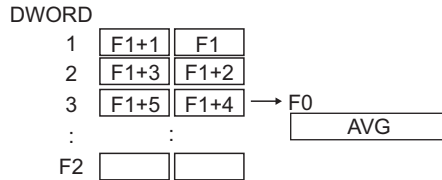**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	0 - 512

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error


## F\_MAX

## F0 = F\_MAX (F1 C:F2) (F)

All models	<input type="radio"/>
------------	-----------------------

### Function: Maximum of real number data

This macro command is used to find the maximum of the real number data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

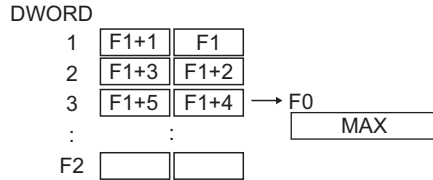

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	0 - 512

### Supplemental remarks

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.


Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

**F\_MIN****F0 = F\_MIN (F1 C:F2) (F)**

All models	<input type="radio"/>
------------	-----------------------

**Function: Minimum of real number data**

This macro command is used to find the minimum of the real number data at the location starting from the address specified in [F1] and write the result to [F0]. The data count is specified in [F2].

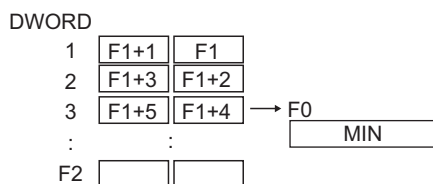**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			
F2	○			○

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	IEEE 32-bit single precision real number
F1	
F2	0 - 512

**Supplemental remarks**

- For more information on the IEEE 32-bit single precision real numbers, refer to the V9 Series Reference Manual or the X1 Series Reference Manual.
- The result of macro execution is stored in \$s1056.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
1	Overflow
2	Underflow
-1	Execution error

## 4.23 Others

---


;(Comment)

All models	<input type="radio"/>
------------	-----------------------

;(Comment)

### Function: Comment

- This is treated as a comment line. No command processing is required.
- Comment can be inserted after a command so that both the command and the comment are on the same line.

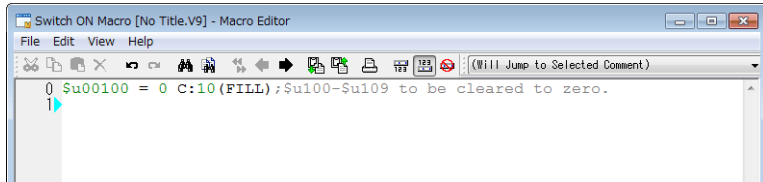

- For debugging, you can comment out the lines which you want to temporarily disable by putting "; " at the start of each line.

**BRIGHT**

All V9 models	○
X1	○
TELLUS4 HMI	

**BRIGHT F0****Function: Brightness adjustment**

This command is used to change the brightness of the TFT display to the level specified in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	○			○

○ : Setting enabled (indirect designation disabled)

◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	0: Bright : 127: Dark (Note that the screen is completely dark with no visibility.)

**Supplemental remarks**

- Do not turn off the power supply of MONITOUCH while executing the macro command.
- The current brightness is output to \$s956.
- When the macro command is executed, communication will pause for several hundred milliseconds to allow for saving the setting value to the FROM. Avoid the frequent use of the macro command.
- Do not execute the [BRIGHT] command every cycle using cycle macros or other methods.
- If the V9 series set to a low brightness is turned off, the backlight may not light up at the next power-on.
- The brightness setting of the X1 series is retained internally by the unit and is retained even if the power is turned off. Note, however, that brightness is retained in 10 levels and therefore the screen brightness may change after rebooting.

X1 Series Unit	BRIGHT Macro command	Brightness	Remarks
0	0 to 25	Bright ↑ ↓ Dark	Max
1	26 to 38		
2	39 to 50		
3	51 to 63		
4	64 to 76		Medium
5	77 to 88		
6	89 to 101		
7	102 to 114		
8	115 to 126		Minimum
9	127	Dark	Note that the screen is completely dark with no visibility.

- The result of macro execution is stored in \$s1063. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## GET\_MSGBLK

All models	<input type="radio"/>
------------	-----------------------

## GET\_MSGBLK F0 F1

### Function: Message acquisition

This macro command is used to store the [F1]-specified message (text) in [F0] memory using ASCII/shifted JIS codes.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input type="radio"/>			<input type="radio"/>


- : Setting enabled (indirect designation disabled)
- : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Storage memory
F1	0 - 32767: Message No.

### Example

- \$u00050 = 256 (W)  
GET\_MSGBLK \$u00100 \$u00050

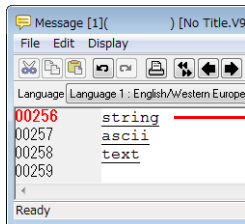

GET\_MSGBLK

\$u100	7	4	7	3	HEX	ts
\$u101	6	9	7	2	HEX	ir
\$u102	6	7	6	E	HEX	gn
\$u103	0	0	0	0	HEX	Null code

The above program stores message No. 256 (= GNo. 1 and line No. 0) in memory at \$u100 and after using shifted JIS codes.

### Supplemental remarks

- Regardless of the [Text Process] setting under [Communication Setting] for PLC1, the data is stored in memory in the [LSB → MSB] sequence.
- A null code is added to the end. Even-number-byte text thereby uses one extra word.
- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## PLC\_ULR

## PLC\_ULR F0 F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Read user log**

This macro command is used to read the user log of the PLC with the station number / CPU number specified in [F0] of the PLC1 into the address specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			
F1	<input type="radio"/>			

○ : Setting enabled (indirect designation disabled)  
 ◎ : Setting enabled (indirect designation enabled)

**Setting range**

		Value		Remarks
Device memory information definition	F0	Higher-order	01 - 1F: Station number	Setting required only for 1:n connection
		Lower-order	00 : CPU No.1 01 : CPU No.2 02 : CPU No.3 03 : CPU No.4	
	F0+1	-1: Reading the number of user log registrations 0: Reading the most recent user log 1 - 63: Reading user log No. n		
Reading the number of registrations	F1	Number of registrations (decimal)		Stored also in the special register Z105
	F1+1			
Log read	F1	0: Normal -1: Error		“-1” to be stored if no data exists in the user log specified in F0 or a communication error occurs
	F1+1	Year (ASCII)		
	F1+2	Month (ASCII)		
	F1+3	Day (ASCII)		
	F1+4	Hour (ASCII)		
	F1+5	Minute (ASCII)		
	F1+6	Second (ASCII)		
	F1+7	Main code (decimal)		
F1+8	Sub-code (decimal)			

← MONITOUCH (Return data)

**Example**

If a user log reading results in "05/10/19 11 : 20 : 34 +1 +23", its format for storage is as the following:

	Storage format
m+0	0
m+1	3530HEX (= 05DEC)
m+2	3031HEX (= 10DEC)
m+3	3931HEX (= 19DEC)
m+4	3131HEX (= 11DEC)
m+5	3032HEX (= 20DEC)
m+6	3433HEX (= 34DEC)
m+7	1DEC
m+8	23DEC

**Supplemental remarks**

- The macro command is valid only when Yokogawa's FA-M3xxx is selected as the PLC1.
- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**RECONNECT**

All models	<input type="radio"/>
------------	-----------------------

**RECONNECT F0****Function: Multi-drop reconnection (PLC1)**

This macro command is used to establish a connection again to the stations specified in [F0] or the sub stations specified in [F0+1] when a multi-drop connection is set at the PLC1.

When “-1” is specified for [F0], reconnection with all ports is established, and when “-1” is specified for [F0+1], reconnection with all sub ports is established.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

4

**Setting range**

	Value	Remarks
F0	0 - 255: PLC station number	-1: All station numbers designation
F0+1	0 - 255: PLC sub-station number	-1: All sub-station numbers designation

**Supplemental remarks**

- This command is only valid when a multi-drop connection (1:n) is set at PLC1. To re-establish a connection other than with PLC1, use a “RECONNECT\_EX” command (page 4-268).
- The macro command is used in the event of a communication fault.
- Reconnection with the specified station is performed only once.
- When reconnection is successful, the “interrupted” information in system device memory (\$s114 to 159) and 8-way communication device memory (\$p[1] : 10 to 25) in the PLC1 are cleared.
- The result of macro execution is stored in \$s1063. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**RECONNECT\_EX RECONNECT\_EX PLC F0 F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Reconnection**

This macro command is used to establish a connection again with the station number [F1] or the sub-station number [F1+1] specified in [F0] of the PLC. When “-1” is specified for [F1], reconnection with all stations is established, and when “-1” is specified for [F1+1], reconnection with all sub stations is established.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>
F1	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	1 - 8: PLC number	
F1	0 - 255: PLC station number	-1: All station numbers designation
F1+1	0 - 255: PLC sub-station number	-1: All sub-station number designation

**Supplemental remarks**

- The macro command is used in the event of a communication fault.
- Reconnection with the specified station and the specified sub-station is performed only once.
- When reconnection is successful, the “interrupted” information in 8-way communication device memory (\$p[F0] : 10 to 25) in the PLC is cleared. For the PLC1, the “interrupted” information in system device memory (\$s114 to 129) is also cleared at the same time.
- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SAMPLE

## SAMPLE F0 F1 F2

All models	<input type="radio"/>
------------	-----------------------

**Function: Acquire logging/alarm data**

This macro command is used to store sampling data specified in [F2] of the block number specified in [F1] at the device memory address specified in [F0].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	○			
F2	○			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

4

**\$\$s1673**

The macro command operation is specified by the value in \$\$s1673.

\$\$s1673	Contents
0	Applicable area: V8 compatible blocks (buffering area)
Other than 0	Applicable area: All blocks

**\$\$s1840**

The acquisition target is specified by the value in \$\$s1840. (Logging only).

\$\$s1673	Contents
0	Acquisition target: Logging server
1	Acquisition target: Logging data displayed in the trend parts

**Setting range**

	Value		
	When \$\$s1840 = 0	When \$\$s1840 = 1	
F0	Storage target		
F1	0: Cursor specification 1: Block specification		0: Cursor specification
F1+1	(F1 = 0)	(F1 = 1)	0: Base 1 - 10: Overlap ID 0 - 9
	0: Base 1 - 10: Overlap ID 0 - 9	0 - 11: Block number	
F1+2	0 - 255: ID No. of the item displayed	Not used	0 - 255: ID No. of the item displayed
F2	0: Acquisition of sampling data * Only when a logging part or logging block is specified in [F1]. 1: Acquisition of average/maximum/minimum/total data * Only when a logging part or logging block is specified in [F1]. 2: Acquisition of alarm data * Only when an alarm part or alarm block is specified in [F1].		0: Acquisition of sampling data

		Value		
		When \$s1840 = 0		When \$s1840 = 1
F2+1	([F2] = 0)	([F2] = 1)	([F2] = 2)	0: With no time data 1: With time data
	0: With no time data 1: With time data	0 - : Word No.	Not used	

1. Acquiring sampling data (with no time data)


- When [F1] = 0  
When the specified trend parts is selected (the cursor is displayed), the data at the cursor position is stored.  
When the specified trend parts is not selected (the cursor is not displayed), the most recent sampling data is stored.
- When [F1] = 1  
The most recent sampling data is stored.
- Specify the sampling data to be acquired in [F1+1] and [F1+2].
- Set "0" for [F2] and [F2+1].
- The following data is stored in the [F0] memory.

Device memory	Contents	Word count
F0	Sampling data (1)	1
F0+1	Sampling data (2)	1
F0+2	Sampling data (3)	1
:	:	:
F0 + (sampling word count - 1)	Sampling data (sampling word count)	1

\* When [Real Time Display] is selected for [Display Mode] in the trend parts, no operation takes place.

2. Acquiring sampling data (with time data)

- When [F1] = 0  
When the specified trend parts is selected (the cursor is displayed), the data at the cursor position is stored.  
When the specified trend parts is not selected (the cursor is not displayed), the most recent sampling data is stored.
- When [F1] = 1  
The most recent sampling data is stored.
- Specify the sampling data to be acquired in [F1+1] and [F1+2].
- Set "0" for [F2] and "1" for [F2+1].
- The content stored in the [F0] device depends on the logging server's [Others] → [Put msec information on logging time] checkbox.

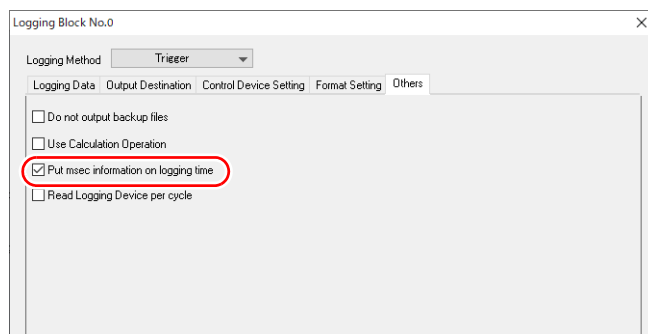

- When [Put msec information on logging time] is not checked.

Device memory	Contents	Word count
F0	Sampling time (Greenwich data)	2
F0+2	Sampling data (1)	1
F0+3	Sampling data (2)	1
:	:	:
F0 + (2 + sampling word count - 1)	Sampling data (sampling word count)	1

- When [Put msec information on logging time] is checked.

Device memory	Contents	Word count
F0	Sampling time (Greenwich data)	2
F0+2	Sampling time in msec (0 - 999)	1
F0+3	Sampling data (1)	1
F0+4	Sampling data (2)	1
:	:	:
F0 + (3 + sampling word count - 1)	Sampling data (sampling word count)	1

- \* When [Real Time Display] is selected for [Display Mode] in the trend parts, no operation takes place.

- Acquiring average / maximum / minimum / total data
  - Specify the sampling data to be acquired in [F1+1] and [F1+2].
  - Set "1" for [F2].
  - Set the number of words for [F2+1].
  - The following data is stored in the [F0] device memory.

Device memory	Contents	Word count
F0	Average	2
F0+2	Maximum	2
F0+4	Minimum	2
F0+6	Total	2
F0+8	Result of overflow 0: No overflow 1: Overflow occurred	1

- \* When [Real Time Display] is selected for [Display Mode] in the trend parts, no operation takes place.

- Acquiring alarm information
  - Specify the sampling data to be acquired in [F1+1] and [F1+2].
  - Set "2" for [F2].
  - The following data is stored in the [F0] device memory.

Device memory	Contents	Word count
F0	Automatic operation time	2
F0+2	Automatic operation stop time	2
F0+4	Program stop time	2
F0+6	Number of stops	1
F0+7	Rate of operation	1

- \* This command can be used only for the alarm server.  
If [Alarm History] ([Alarm Block] → [Alarm Device]) is not checked, no operation takes place.



**Supplemental remarks**

- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SEARCH\_FILE

## SEARCH\_FILE F0 F1

All models	<input type="radio"/>
------------	-----------------------

### Function: JPEG file search

This macro command is used to search for JPEG file numbers in the SNAP/JPEG folder stored in the storage based on the specified increments and store the result in the device memory [F0].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	⊙			
F1	⊙			


○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	Search result (file number) storage target
F1	0: Searches the JPEG folder for JPxxxxx.jpg file 1: Searches the SNAP folder for VDxxxxx.jpg file
F1+1	0 - 32767: Search start file number
F1+2	-32767 - 32767: Increments

### Example

- \$u200 = 0 (W) [JPEG folder search]
- \$u201 = 0 (W) [Search start file No. 0]
- \$u202 = 10 (W) [Increments 10]
- SEARCH\_FILE \$u100 \$u200
- \$u201 = \$u100 (W)

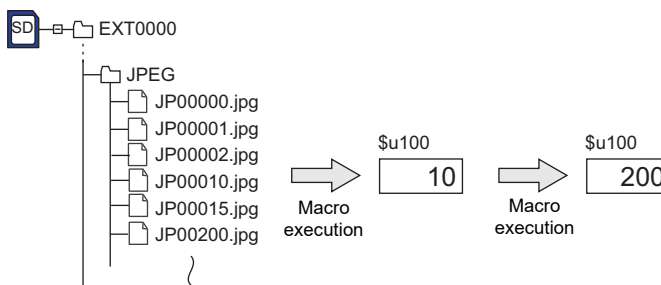

### Supplemental remarks

- The macro command is valid even if no JPEG display item exists on the screen.
- The result of macro execution is stored in \$s1063. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.



Code (DEC)	Contents
-1	Execution error

**ADJ\_VOLUME**

V9 Advanced	
V910xiW	<input type="radio"/>
V907xiW	
V9 Standard	
All models	<input type="radio"/>
V9 Lite	
All models	
X1	
All models	<input type="radio"/>
TELLUS	
TELLUS4 HMI	

**ADJ\_VOLUME F0 F1 F2****Function: Volume adjustment**

This macro command is used to change the volume of the channel specified in [F0] to the value specified in [F1]/[F2].

	Volume adjustment value	Remarks
High   Low	7	
	6	
	5	Default
	4	
	3	
	2	
	1	
	0	

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0	<input type="radio"/>			<input type="radio"/>
F1	<input type="radio"/>			<input type="radio"/>
F2	<input type="radio"/>			<input type="radio"/>

: Setting enabled (indirect designation disabled)

: Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	0: L channel 1: R channel 2: Both channels L and R
F1	0 - 7: Volume adjustment for L channel
F2	0 - 7: Volume adjustment for R channel

**Supplemental remarks**

- This command is valid only for V910xiW, V9 Standard and X1 series.
- To save the ADJ\_VOLUME setting to MONITOUCH, use SAVE\_VOLUME. When MONITOUCH is turned off without executing the SAVE\_VOLUME command following the ADJ\_VOLUME command, the viewing angle is reset to the one that was valid before the execution of the ADJ\_VOLUME command.
- The current volume adjustment value (0 - 7) for the L channel is stored in \$s1001. The current volume adjustment value (0 - 7) for the R channel is stored in \$s1002.
- The result of macro execution is stored in \$s1063. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SAVE\_VOLUME**

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	○
TELLUS	
TELLUS4 HMI	

**SAVE\_VOLUME****Function: Save volume adjustment value**

This macro command is used to save the volume adjustment value set by the "ADJ\_VOLUME" command in FROM.

**Example**

- ADJ\_VOLUME 2 6 6  
SAVE\_VOLUME

The above program sets the volume for both L and R channels to 6.

**Supplemental remarks**

- This command is valid only for V910xiW, V9 Standard and X1 series.
- Do not turn off the power supply of MONITOUCH while executing the macro command.
- Do not execute the [SAVE\_VOLUME] command every cycle using cycle macros or other methods.
- When the SAVE\_VOLUME command is executed, the communication (serial, Ethernet) is temporarily interrupted. Do not execute the SAVE\_VOLUME command frequently.
- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**TREND REFRESH TREND REFRESH F0 F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Refresh trend data display**

The macro command is used to refresh the trend parts display specified in [F0] and [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F0				<input type="radio"/>
F1				<input type="radio"/>

- : Setting enabled (indirect designation disabled)  
 : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	0: Base 1 - 10: Overlap ID 0 - 9
F1	0 - 255: ID

**Supplemental remarks**

- This command is valid only when [Display mode: Historical Display] and [Display method: Graph Display] are set for the trend parts.
- If device memory addresses are specified in trend parts settings for [Graph Min. Value] and [Graph Max. Value], and [Max. Scale Value] and [Min. Scale Value], the display must be refreshed each time data at any of these devices is changed.
- The result of macro execution is stored in \$s1063.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (SET\_SCRN) F1

All models	○
------------	---

**Function: Screen number designation**

This macro command is used to display the screen specified in [F1]. It is also possible to specify the transition effect settings.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	◎			

○ : Setting enabled (indirect designation disabled)

◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value																
F0	SET_SCRN																
F1	0 - 9999: Screen number																
F1+1*1	Transition effect settings <div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> </table> <p style="margin: 5px 0;">Reserved (0) ————</p> <p style="margin: 5px 0;">Upper byte: Switching direction / Switching type ————</p> <p style="margin: 5px 0;">Reserved (0) ————</p> <p style="margin: 5px 0;">Lower byte: Type No. ————</p> </div>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
	Type No. (Lower byte) <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">0 : Slide-in</td> <td style="width: 50%;">8 : Box-out (with fade effect)*2</td> </tr> <tr> <td>1 : Slide-out (with fade effect)*2</td> <td>9 : Slide</td> </tr> <tr> <td>2 : Box-in</td> <td>A : Slide (with fade effect)*2</td> </tr> <tr> <td>3 : Box-in (with fade effect)*2</td> <td>B : Switch*2</td> </tr> <tr> <td>4 : Fade-in</td> <td>C : Jump*2</td> </tr> <tr> <td>5 : Slide-out</td> <td>D : Card flip*2</td> </tr> <tr> <td>6 : Slide-out (with fade effect)*2</td> <td>E : Gallery</td> </tr> <tr> <td>7 : Box-out</td> <td>FFFF: No transition effect applied</td> </tr> </table>	0 : Slide-in	8 : Box-out (with fade effect)*2	1 : Slide-out (with fade effect)*2	9 : Slide	2 : Box-in	A : Slide (with fade effect)*2	3 : Box-in (with fade effect)*2	B : Switch*2	4 : Fade-in	C : Jump*2	5 : Slide-out	D : Card flip*2	6 : Slide-out (with fade effect)*2	E : Gallery	7 : Box-out	FFFF: No transition effect applied
	0 : Slide-in	8 : Box-out (with fade effect)*2															
1 : Slide-out (with fade effect)*2	9 : Slide																
2 : Box-in	A : Slide (with fade effect)*2																
3 : Box-in (with fade effect)*2	B : Switch*2																
4 : Fade-in	C : Jump*2																
5 : Slide-out	D : Card flip*2																
6 : Slide-out (with fade effect)*2	E : Gallery																
7 : Box-out	FFFF: No transition effect applied																
Switching direction (Upper byte) 0 : Move to right 1 : Move to left 2 : Move to up 3 : Move to down	For the following types of the effects: <ul style="list-style-type: none"> <li>• Slide-in</li> <li>• Slide-out</li> <li>• Slide</li> <li>• Switch</li> <li>• Gallery (only left and right are available)</li> </ul>																
Switching type (Upper byte) 0 : Type 1 1 : Type 2 2 : Type 3 3 : Type 4	For the following types of the effects: <ul style="list-style-type: none"> <li>• Jump</li> <li>• Card flip</li> </ul>																
F1+2*1	Switch-over time (x100 ms) 2 to 10 : Slide-in/box-in/fade-in/slide-out/box-out/slide 5 to 10 : Switch/jump 3 to 10 : Card flip 5 to 20 : Gallery																

\*1 Valid when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is checked.

\*2 X1 / TELLUS4 unsupported

### Example

- Without transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is not checked.)  
\$u100 = 55 (W) [Screen number]  
SYS (SET\_SCRN) \$u100

The above program displays screen No. 55.

- With transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] needs to be checked.)  
\$u100 = 50 (W) [Screen number]  
\$u101 = 105H (W) [Type No., Switching direction or switching type]  
\$u102 = 5 (W) [Switch-over time]  
  
SYS (SET\_SCRN) \$u100

Settings for slide-out effect (switching direction: left) when moving to the screen No.50 (switch-over time: 500 msec)

### Supplemental remarks

- If a screen number that does not exist is specified in [F1], the macro command is disabled.
  - The macro command is invalid in screen OPEN, screen CLOSE, overlap library OPEN, overlap library CLOSE, and initial macros.
  - The macro command is valid only once in a macro created on the macro edit sheet. Its execution timing is set at the end of the macro on the edit sheet.
  - Do not execute the macro command in every cycle using a CYCLE macro or an event timer macro.
  - Transition effect for the screen change-over is not available.
  - The result of macro execution is stored in \$s72.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (SET\_MOVLP) F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Multi-overlap/global overlap setting**

This macro command is used to display the overlap library specified in F1+1 on the overlap ID in [F1].

It is also possible to specify the transition effect settings.


**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

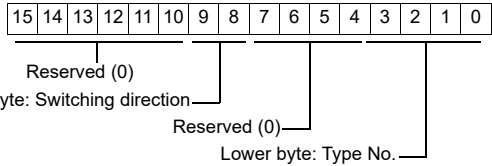	Value	
	Dot (unit: 4 × 1)	Line/column (unit 8 × 20)
F0	SET_MOVLP	
F1	0 - 9: Overlap ID	
F1+1	0 - 1023: Overlap library number	
F1+2	0 - 1023: X coordinate	0 - 127: X coordinate
F1+3	0 - 767: Y coordinate	0 - 38: Y coordinate
F1+4 <sup>*1</sup>	Transition effect settings 	
	Type No. (Lower byte) 0 : Slide (from outside of a screen) 1 : Slide (from outside of a screen with fade) <sup>*2</sup> 2 : Slide (short distance with fade) <sup>*2</sup> 3 : Fade <sup>*2</sup> FFFF: No transition effect applied	
	Switching direction (Upper byte) <sup>*3</sup> 0 : Move to right 1 : Move to left 2 : Move to up 3 : Move to down	
F1+5 <sup>*1</sup>	Switch-over time (x100 ms) 2 to 10 : Slide (from outside of a screen) 2 to 5 : Slide (short distance) /fade	

\*1 Valid when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is checked.

\*2 X1 / TELLUS4 unsupported

\*3 Valid when the type is "slide".



### Example

- Without transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is not checked.)

```
$u100 = 2 (W)    [Overlap ID]
$u101 = 12 (W)   [Overlap library number]
$u102 = 50 (W)  [X coordinate]
$u103 = 5 (W)   [Y coordinate]
SYS (SET_MOVL) $u100
```

Dot:

The above program displays overlap ID2 and overlap library No. 12 at the coordinates X: 48\* and Y: 5.

\* Since four dots are treated as one unit on the X axis, any value in the range of "48" to "51" on the axis is regarded as "48".

Line/Column:

The above program displays overlap ID2 and overlap library No. 12 at the coordinates X: 400 and Y: 100.

- With transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] needs to be checked.)

```
$u100 = 0 (W)    [Overlap ID]
$u101 = 15 (W)   [Overlap library number]
$u102 = 5 (W)   [X coordinate]
$u103 = 5 (W)   [Y coordinate]
$u104 = 3H (W)  [Type No., Switching direction]
$u105 = 3 (W)   [Switch-over time]
SYS (SET_MOVL) $u100
```

Dot:

Setting for fade effect when overlap library No. 15 with overlap ID0 is displayed in X: 4\* and Y: 5 (switch-over time 300 msec)

\* Since four dots are treated as one unit on the X axis, any value in the range of "4" to "7" on the axis is regarded as "4".

Line/Column:

Setting for fade effect when overlap library No. 15 with overlap ID0 is displayed in X: 48 and Y: 100 (switch-over time 300 msec)

### Supplemental remarks

- The macro command is valid when [Internal] is checked under [Designate] in the [Multi-Overlap] or [Global Overlap Setting] dialog.
- If [F1]>9, the macro command is disabled.
- If an overlap library number specified in [F1+1] does not exist, the macro command is disabled.
- If the specified X and Y coordinates are outside the permissible ranges, the display appears in the lower right corner of the screen.
- The macro command is invalid in a screen CLOSE macro and an initial macro.
- The macro command is valid only once in a macro created on the macro edit sheet for each overlap ID. Its execution timing is set at the end of the macro on the edit sheet.
- Use the OVLP\_SHOW command to turn off the multi-overlap or global overlap.
- Do not execute the macro command in every cycle using a CYCLE macro or an event timer macro.
- Transition effect for overlap show/hide is not available.

- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (OVLP\_SHOW) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Overlap ON/OFF**

This macro command is used to show/hide the overlap ID specified in [F1]. It is also possible to specify the transition effect settings.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	OVLP_SHOW
F1	0 - 9: Overlap ID
F1+1	0: OFF (non-display) 1: ON (display)
F1+2*1	Transition effect settings 
	Type No. (Lower byte) 0 : Slide (from outside of a screen) 1 : Slide (from outside of a screen with fade)*2 2 : Slide (short distance with fade)*2 3 : Fade*2 FFFF: No transition effect applied
	Switching direction (Upper byte)*3 0 : Move to right 1 : Move to left 2 : Move to up 3 : Move to down
F1+3*1	Switch-over time (x100 ms) 2 to 10 : Slide (from outside of a screen) 2 to 5 : Slide (short distance) /fade

\*1 Valid when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is checked.

\*2 X1 / TELLUS4 unsupported

\*3 Valid when the type is "slide".

### Example

- Without transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] is not checked.)  
\$u100 = 2 (W) [Overlap ID]  
\$u101 = 0 (W) [OFF]  
SYS (OVL\_P\_SHOW) \$u100

The above program turns off overlap ID2.

- With transition effect:  
(when [System Setting] → [Unit Setting] → [General Settings] → [Enable transition function by macro commands] needs to be checked.)  
\$u100 = 2 (W) [Overlap ID]  
\$u101 = 1 (W) [ON]  
\$u102 = 200H (W) [Type No., Switching direction]  
\$u103 = 5 (W) [Switch-over time]  
SYS (OVL\_P\_SHOW) \$u100

Setting for slide effect (from outside screen, switching direction to up) when overlap ID2 is ON (switch-over time 500 msec)

### Supplemental remarks

- If [F1]>9, the macro command is disabled.
- If F1+1 = 0, the macro command is valid for normal, call-, multi-, and global ([Designate]: [Internal]) overlaps.
- The macro command is invalid in screen CLOSE, overlap library CLOSE and initial macros.
- The macro command is valid only once in a macro created on the macro edit sheet for each overlap ID. Its execution timing is set at the end of the macro on the edit sheet.
- Do not execute the macro command in every cycle using a CYCLE macro or an event timer macro.
- Transition effect for overlap show/hide is not available.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (OVLP\_POS) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Overlap relocation**

This macro command is used to move the overlap ID specified in [F1] to the coordinates X in [F1+1] and Y in [F1+2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

- : Setting enabled (indirect designation disabled)
- ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
	Dot (unit: 4 × 1)	Line/column (unit 8 × 20)
F0	OVLP_POS	
F1	0 - 9: Overlap ID	
F1+1	0 - 1023: X coordinate	0 - 127: X coordinate
F1+2	0 - 767: Y coordinate	0 - 38: Y coordinate

**Example**

- \$u100 = 2 (W) [Overlap ID]
- \$u101 = 50 (W) [X coordinate]
- \$u102 = 5 (W) [Y coordinate]
- SYS (OVLP\_POS) \$u100

Line/Column:

The above program moves overlap ID2 to coordinates X: 400 and Y: 100.

Dot:

The above program moves overlap ID2 to coordinates X: 48\* and Y: 5.

\* Since four dots are treated as one unit on the X axis, any value in the range of "48" to "51" on the axis is regarded as "48".

**Supplemental remarks**

- If [F1]>9, the macro command is disabled.
- In the event of a normal or a call-overlap, the macro command is enabled also to display the overlap.
- The X and Y coordinates specified by the macro command take effect until the screen is switched. If OVLP\_SHOW is executed after OVLP\_POS, the overlap appears at the coordinates specified by OVLP\_POS.
- The macro command is invalid in screen OPEN, screen CLOSE, overlap library CLOSE and initial macros.
- The macro command is valid only once in a macro created on the macro edit sheet for each overlap ID. Its execution timing is set at the end of the macro on the edit sheet.
- Do not execute the macro command in every cycle using a CYCLE macro or an event timer macro.
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (GET\_MSG) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Message acquisition**

This macro command is used to store the F1-specified message in memory at the \$u address in F1+1 using ASCII/shifted JIS codes.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	Ⓞ			

○ : Setting enabled (indirect designation disabled)  
 ◎ : Setting enabled (indirect designation enabled)


**Setting range**

	Value
F0	GET_MSG
F1	0 - 32767: Message number
F1+1	0 - 16383: Storage device number
\$u[F1+1]	Shifted JIS/ASCII 50 words maximum

← MONITOUCH (Return data)

**Example**

- \$u50 = 256 (W) [Message number]  
 \$u51 = 100 (W) [Storage target device memory No.]  
 SYS (GET\_MSG) \$u50

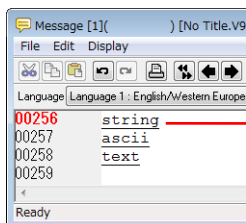

SYS (GET\_MSG)

\$u100	8	A	9	4	HEX	ts
\$u101	8	E	A	E	HEX	ir
\$u102	8	9	E	F	HEX	gn
\$u103	8	E	D	0	HEX	Null code

The above program stores message No. 256 (= GNo. 1 and line No. 0) in memory at \$u100 and after using shifted JIS codes.  
 The above program shows the case when [MSB → LSB] is selected for [Text Process] under [Communication Setting] for the PLC1.

**Supplemental remarks**

- Swap between the higher-order byte and the lower-order byte can be set by selecting an option for [Text Process] under [Communication Setting].
- Regardless of the setting above, use a “GET\_MSGBLK” command (page 4-264) for storing data by [LSB → MSB].
- A null code is added to the end. Even-number-byte text thereby uses one extra word.
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error


**SYS**

**SYS (GET\_XY) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Acquisition of X and Y coordinates on circumference**

This macro command is used to calculate X and Y coordinates from a radius, an angle and, center coordinates.

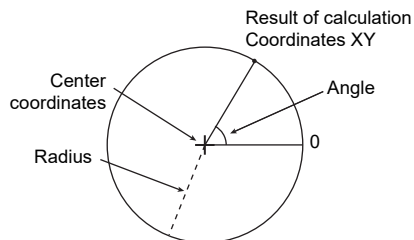

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)


**Setting range**

	Value
F0	GET_XY
F1	0 or above: Radius
F1+1	0 to 3600: Angle (0.1-degrees)
F1+2	0 or above: Center coordinate X
F1+3	0 or above: Center coordinate Y
F1+4	0 or above: X coordinate
F1+5	0 or above: Y coordinate

← MONITOUCH (Return data)

**Example**

- \$u100 = 100 (W) [Radius]
- \$u101 = 90 (W) [Angle]
- \$u102 = 200 (W) [X coordinate of the center]
- \$u103 = 200 (W) [Y coordinate of the center]
- SYS (GET\_XY) \$u100

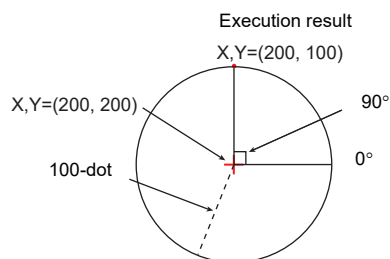

On the circumference of a circle 100 dots in radius with the center at coordinates X: 200 and Y: 200, the above program calculates the X and Y coordinates of the point at an angle of 90 degrees.  
 X coordinate: \$u104 = 200  
 Y coordinate: \$u105 = 100

**Supplemental remarks**

- If a value specified for the angle is 3,600 or above, the value is corrected to the remainder as the result of division by 3,600.



- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

All V9 models	○
X1	○
TELLUS4 HMI	△

## SYS (SET\_BZ) F1

**Function: Buzzer control**

This macro command is used to control the buzzer of MONITOUCH.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	◎			

○ : Setting enabled (indirect designation disabled)

◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	SET_BZ	
F1	0: Normal 1: Error 2: Sound change	
F1+1	0: Standard 1: Short 2: None 3: Continuous*	Setting required if F1 = 2

\* Incompatible with TELLUS version 4

**Example**

- \$u100 = 2 (W) [Sound change]
- \$u101 = 2 (W) [None]
- SYS (SET\_BZ) \$u100

The above program turns off the MONITOUCH buzzer.

**Supplemental remarks**

- The [Buzzer] tab window setting in the [Unit Setting] dialog ([System Setting] → [Unit Setting] → [Buzzer]) takes effect only at the time of initial connection of MONITOUCH.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS****SYS (GET\_TIME) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: System time acquisition**

This macro command is used to acquire values from the timer that increments by one at 10-ms intervals after power-on.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	GET_TIME
F1	0 - 4294967295 (×10 msec)
F1+1	

← MONITOUCH (Return data)

**Example**

- SYS(GET\_TIME) \$u100  
The above program acquires the time that has elapsed after power-on.

\$u100 = 27900 (W)

279000 msec = 279 sec = 4 minutes 39 seconds

**Supplemental remarks**

- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

All models	○
------------	---

**SYS (STA\_TIME) F1**

**SYS (CHK\_TIME) F1**

**Function: Timer setting**

STA\_TIME starts the timer. CHK\_TIME confirms a time-out.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

- STA\_TIME

	Value	Remarks
F0	STA_TIME	
F1	Time-out flag 0: Counting 1: Time-out	
F1+1	0: Timer type 0	F1 = 1: Stops the timer
	1: Timer type 1	F1 = 1: Updates the timer start time
F1+2	0 - 65535: Time-out time	×10 ms
F1+3	Timer start time	

← MONITOUCH (Return data)

- CHK\_TIME  
For [F1], use the same device memory as for STA\_TIME.

**Example**

<Timer type 0>


- OPEN macro  
 $\$u101 = 0$  (W) [Timer type]  
 $\$u102 = 50$  (W) [Time-up time]  
 SYS (STA\_TIME)  $\$u100$

The above program starts the timer type 0, for which a 500-ms time-out period is set.

$\$u103$  =current time and  $\$u100=0$  are set.

- CYCLE macro  
 SYS (CHK\_TIME)  $\$u100$

$\$u100 = 0$   
 ↓ Lapse of 500 ms  
 $\$u100 = 1$  (W)  
 (End)

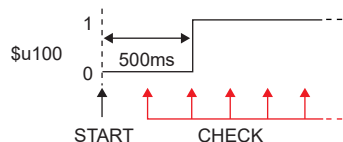


<Timer type 1>

- OPEN macro  
 $\$u101 = 1$  (W)      Timer type  
 $\$U102 = 50$  (W)      Time-up time  
 SYS (STA\_TIME)  $\$u100$

The above program starts the timer type 1, for which a 500-ms time-out period is set.

$\$u103$  =current time and  $\$u100=0$  are set.

- CYCLE macro  
 SYS (CHK\_TIME)  $\$u100$   
 IF ( $\$u100! = 0$ ) LB 0 (W)  
 RET  
 LB0:  
 $\$u200 = \$u200+1$  (W)  
 RET

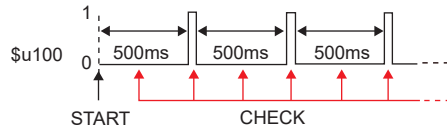

- $\$u100 = 0$   
 ↓ Lapse of 500 ms  
 $\$u100 = 1$  and  $\$u200 = 1$  are set.  
 ↓  
 $\$u103$  =current time and  $\$u100=0$  are set.  
 ↓ Lapse of 500 ms  
 $\$u100 = 1$  and  $\$u200 = 2$  are set.  
 ↓  
 (Repetition)

**Supplemental remarks**

- The timer base is set to 10 ms.
- The result of macro execution is stored in  $\$s72$ .  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (GET\_CLND) F1

All models

**Function: Calendar acquisition**

This macro command is used to acquire the values of the system calendar.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	GET_CLND
F1	0 or above: Year (4-digit)
F1+1	1 - 12: Month
F1+2	1 - 31: Day
F1+3	0 - 23: Hour
F1+4	0 - 59: Minute
F1+5	0 - 59: Second
F1+6	0: Sunday 1: Monday 2: Tuesday 3: Wednesday 4: Thursday 5: Friday 6: Saturday

← MONITOUCH (Return data)

**Example**

- SYS (GET\_CLND) \$u100

\$u100 = 2005

\$u101 = 7

\$u102 = 15

\$u103 = 15

\$u104 = 25

\$u105 = 41

\$u106 = 5

[July 15, 2005 Friday 15:25:41]

**Supplemental remarks**

- The calendar is acquired not from a PLC or other external device but from MONITOUCH.
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (SET\_CLND) F1**

All V9 models	○
X1	△
TELLUS4 HMI	△

**Function: Calendar setting**

This macro command is used to set the values of eight words starting from the address specified in [F1] to the system calendar. When MONTOUCH is connected with PLC1 including the calendar function, this macro command also sets the PLC1's calendar.

\* When using X1 series / TELLUS4, the system calendar cannot be changed.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
F0	SET_CLND	
F1	0 or above: Year (4-digit/2-digit)	
F1+1	1 - 12: Month	
F1+2	1 - 31: Day	
F1+3	0 - 23: Hour	
F1+4	0 - 59: Minute	
F1+5	0 - 59: Second	
F1+6	Day of the week	Invalid; to be automatically calculated by MONITOUCH
F1+7	0 - 31: PLC station number	For 1:n connection only

**Example**

```

• $u100 = 2005 (W)
  $u101 = 7 (W)
  $u102 = 15 (W)
  $u103 = 15 (W)
  $u104 = 0 (W)
  $u105 = 0 (W)
  SYS (SET_CLND) $u100
    
```

] [July 15, 2005 Friday 15:00:00]

The above program sets the calendars in the V series and the PLC1 to July 15, 2005 on Friday at 15:00:00.

**Supplemental remarks**

- When setting calendar data for PLC 2 to 8, use a macro command " PLC\_CLND" (page 4-159).
- When setting calendar data only for the V series, use a macro command " SYS (SET\_SYS\_CLND) F1" (page 4-326).
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (SET\_BUFNO) F1

All models	<input type="radio"/>
------------	-----------------------

**Function 1: Logging information**

This macro command is used to store the average, maximum, minimum, and total of logging numbers 0 to 31 located in the block number specified in [F1] in system devices \$\$180 to 435.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**\$\$1671**

The server designation (logging server, alarm server, V8 compatible operation) is changed according to the value in \$\$1671.

\$\$1671	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

**Setting range**

	Value
F0	SET_BUFNO
F1	0 - 11: Logging block No.
\$\$180 - 181	Logging No. 0 Average
\$\$182 - 183	Logging No. 0 Maximum
\$\$184 - 185	Logging No. 0 Minimum
\$\$186 - 187	Logging No. 0 Total
\$\$188 - 195	Logging No. 1 Average/maximum/minimum/total
\$\$196 - 203	Logging No. 2 Average/maximum/minimum/total
\$\$204 - 211	Logging No. 3 Average/maximum/minimum/total
\$\$212 - 219	Logging No. 4 Average/maximum/minimum/total
\$\$220 - 227	Logging No. 5 Average/maximum/minimum/total
\$\$228 - 235	Logging No. 6 Average/maximum/minimum/total
\$\$236 - 243	Logging No. 7 Average/maximum/minimum/total
\$\$244 - 251	Logging No. 8 Average/maximum/minimum/total
\$\$252 - 259	Logging No. 9 Average/maximum/minimum/total
\$\$260 - 267	Logging No. 10 Average/maximum/minimum/total
\$\$268 - 275	Logging No. 11 Average/maximum/minimum/total
\$\$276 - 283	Logging No. 12 Average/maximum/minimum/total
\$\$284 - 291	Logging No. 13 Average/maximum/minimum/total
\$\$292 - 299	Logging No. 14 Average/maximum/minimum/total
\$\$300 - 307	Logging No. 15 Average/maximum/minimum/total
\$\$308 - 315	Logging No. 16 Average/maximum/minimum/total
\$\$316 - 323	Logging No. 17 Average/maximum/minimum/total



	Value
\$s324 - 331	Logging No. 18 Average/maximum/minimum/total
\$s332 - 339	Logging No. 19 Average/maximum/minimum/total
\$s340 - 347	Logging No. 20 Average/maximum/minimum/total
\$s348 - 355	Logging No. 21 Average/maximum/minimum/total
\$s356 - 363	Logging No. 22 Average/maximum/minimum/total
\$s364 - 371	Logging No. 23 Average/maximum/minimum/total
\$s372 - 379	Logging No. 24 Average/maximum/minimum/total
\$s380 - 387	Logging No. 25 Average/maximum/minimum/total
\$s388 - 395	Logging No. 26 Average/maximum/minimum/total
\$s396 - 403	Logging No. 27 Average/maximum/minimum/total
\$s404 - 411	Logging No. 28 Average/maximum/minimum/total
\$s412 - 419	Logging No. 29 Average/maximum/minimum/total
\$s420 - 427	Logging No. 30 Average/maximum/minimum/total
\$s428 - 435	Logging No. 31 Average/maximum/minimum/total

← MONITOUCH (Return data)

**Example**

```
$s01671 = 1 (W) [Logging server designation]
$u100 = 5 (W) [Block No.]
SYS (SET_BUFNO) $u100
```

The above program stores the average, maximum, minimum and total values of logging block No. 5 in \$s180 to 435.

**Supplementary remarks**

- Logging numbers 32 to 255 are not available with this macro command.
- The [Others] → [Use Calculation Operation] checkbox must be selected in the logging block settings.
- The logging block number specified by the macro is stored in \$s1705.
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## Function 2: Alarm log information

This macro command is used to store alarm log information of block number specified in [F1] in  $\$s436 - 443$ .

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### $\$s1671$

The server designation (logging server, alarm server, V8 compatible operation) is changed according to the value in  $\$s1671$ .

$\$s1671$	Contents
0	V8 compatible operation (buffering area number designation)
1	Logging server designation
2	Alarm server designation

### Setting range

	Value
F0	SET_BUFNO
F1	0 - 11: Alarm block number
$\$s436 - 437$	Automatic operation time
$\$s438 - 439$	Automatic operation stop time
$\$s440 - 441$	Program stop time
$\$s442$	Number of stops
$\$s443$	Rate of operation XX.X

← MONITOUCH (Return data)

### Example

$\$s01671 = 2$  (W) [Alarm server designation]

$\$u100 = 4$  (W) [Block No.]

SYS(SET\_BUFNO)  $\$u100$

The above program stores the alarm log information of alarm block No. 4 in  $\$s436$  to 443.

### Supplementary remarks

- This command is valid only when [Alarm History] ([Alarm Block] → [Alarm Device]) is checked.
- The alarm block number specified by the macro is stored in  $\$s1706$ .
- The result of macro execution is stored in  $\$s72$ .

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS****SYS (GET\_SMPL) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Acquire logging/alarm data**

This macro command is used to store the log data specified in the logging/alarm block or displayed in the trend parts to the device memory address \$u [F1+2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**\$\$s1671**

The server designation (logging server, alarm server, V8 compatible operation, log data displayed in trend parts) is changed according to the value in \$\$s1671.

When \$\$s1671 = 3, data can be acquired even when backup file is displayed.

\$\$s1671	Contents
0	V8 compatible operation (log data in the buffering area)
1	Log data in the logging server
2	Log data in the alarm server
3	Log data displayed in trend parts (including backup files)

**\$\$s1672**

When "2" is stored in \$\$s1671 (alarm server designation), the data type to acquire (event history, real time, alarm history) is changed according to the value in \$\$s1672.

\$\$s1672	Contents
0	Event history data
1	Real time data
2	Alarm history data

**Setting range**

		Value																																																																																	
		\$s1671 = 0 to 2	\$s1671 = 3																																																																																
F0		GET_SMPL																																																																																	
F1		0 - 11: Block number	0: Base 1 - 10: Overlap ID 0 - 9																																																																																
F1+1		0 or above: sample number	0 - 255: ID No. of the item displayed																																																																																
F1+2		0 - 32767: Storage target internal device memory No. "n"	0 or above: sample number																																																																																
F1+3		Not used	0 - 32767: Storage target internal device memory No. "n"																																																																																
Trigger / Constant cycle / Device memory map	\$u n	Time data 0 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="5">Month: 1 - 12</td> <td colspan="5">Day: 1 - 31</td> <td colspan="6">Hour: 0 - 23</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																																																					
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																			
	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																																																																								
	\$u n+1	Time data 1 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Minutes &amp; seconds (unit: seconds)</td> </tr> <tr> <td colspan="16">[Time data 1]/[60] = [A] remainder [B]</td> </tr> <tr> <td colspan="16">[A]: minutes</td> </tr> <tr> <td colspan="16">[B]: seconds</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Minutes & seconds (unit: seconds)																[Time data 1]/[60] = [A] remainder [B]																[A]: minutes																[B]: seconds															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																			
Minutes & seconds (unit: seconds)																																																																																			
[Time data 1]/[60] = [A] remainder [B]																																																																																			
[A]: minutes																																																																																			
[B]: seconds																																																																																			
\$u n+2	Logging data (maximum number of logging data: 128 words)																																																																																		
\$u n+3																																																																																			
:																																																																																			
Alarm (Event history / Alarm logging)	\$u n	Time data 0 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="5">Month: 1 - 12</td> <td colspan="5">Day: 1 - 31</td> <td colspan="6">Hour: 0 - 23</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																																																					
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																			
	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																																																																								
\$u n+1	Time data 1 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Minutes &amp; seconds (unit: seconds)</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Minutes & seconds (unit: seconds)																																																																
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																				
Minutes & seconds (unit: seconds)																																																																																			
\$u n+2	Sampling bit number <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Bit number</td> </tr> <tr> <td colspan="16">0: OFF</td> </tr> <tr> <td colspan="16">1: ON</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Bit number																0: OFF																1: ON																																
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																				
Bit number																																																																																			
0: OFF																																																																																			
1: ON																																																																																			



		Value																																																
		\$s1671 = 0 to 2	\$s1671 = 3																																															
Alarm (Real time / Time order alarming)	\$u n	Time data 0 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="5">Month: 1 - 12</td> <td colspan="5">Day: 1 - 31</td> <td colspan="6">Hour: 0 - 23</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																				
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																		
	Month: 1 - 12					Day: 1 - 31					Hour: 0 - 23																																							
\$u n+1	Time data 1 <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Minutes &amp; seconds (unit: seconds)</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Minutes & seconds (unit: seconds)																															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																			
Minutes & seconds (unit: seconds)																																																		
\$u n+2	Sampling relay number <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Relay number</td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Relay number																															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																			
Relay number																																																		
Alarm (Alarm history / Alarm tracking)	\$u n	Time data 0																																																
	\$u n+1	Time data 1 <table border="1" style="width: 100%; text-align: center;"> <tr> <td colspan="8">Time data 1</td> <td colspan="8">Time data 0</td> </tr> <tr> <td colspan="16">GMT-based UNIX time from January 1, 1970</td> </tr> </table>		Time data 1								Time data 0								GMT-based UNIX time from January 1, 1970																														
	Time data 1								Time data 0																																									
GMT-based UNIX time from January 1, 1970																																																		
\$u n+2	Alarm bit information <table border="1" style="width: 100%; text-align: center;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> <tr> <td colspan="16">Bit number</td> </tr> <tr> <td colspan="16">                     1: Power-off after an alarm occurrence                      1: Deleted by DEL key                      1: First cause                      0: Reset                      1: Occurrence                 </td> </tr> </table>		15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Bit number																1: Power-off after an alarm occurrence 1: Deleted by DEL key 1: First cause 0: Reset 1: Occurrence															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																			
Bit number																																																		
1: Power-off after an alarm occurrence 1: Deleted by DEL key 1: First cause 0: Reset 1: Occurrence																																																		

: ← MONITOUCH (return data)

**Example**

\$s01671 = 2 (W) [Alarm server designation]  
 \$s01672 = 1 (W) [Real time data designation]  
 \$u100 = 3 (W) [Block No.]  
 \$u101 = 0 (W) [Alarm No.]  
 \$u102 = 200 (W) [Storage target device memory]  
 SYS (GET\_SMPL) \$u100

The above program stores the information of alarm No. 0 in alarm block No. 3 in \$s200.

For alarm (real time)

\$u200 = 1E8F HEX 

0	0	0	1	1	1	1	0	1	0	0	0	1	1	1	1
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

  
 \$u201 = 06B4 HEX  
 \$u202 = 0002 HEX

July 20, 15:28:36, bit No. 2 ON

**Supplemental remarks**

- The result of macro execution is stored in \$s72  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended..

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (GET\_SCUR) F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Cursor point acquisition**

This macro command is used to store the sampling number and the cursor address associated with the of the trend or alarm parts currently being displayed.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	GET_SCUR	
F1	0: Base 1 - 10: Overlap ID 0 - 9	
F1+1	0 - 255 : ID	
F1+2	0: Cursor non-display	The most recent information to be stored in F1+3 and F1+4
	1: Cursor display	The cursor information to be stored in F1+3 and F1+4
F1+3	0 - 65535: Sample number	Used by GET_SMPL
F1+4	1 - 65535: Cursor address	Sampling number comparison*

← MONITOUCH (Return data)

\* Whether or not the acquired sampling number is the same as that previously acquired is checked.

Even if the sampling number remains the same, any change in the cursor address means that the data to be fetched has also changed.

Contrary, even if the sampling number has changed, no change in the cursor address means that the data to be accessed also remains the same.

**Example**

- \$u100 = 0 (W) [Base]  
\$u101 = 1 (W) [ID]  
SYS (GET\_SCUR) \$u100

The above program acquires the cursor point of the logging or alarm data (ID 1) on the base screen.

```
$u102 = 1 [Cursor being displayed]
$u103 = 28 [Sample number]
$u104 = 39 (W) [Cursor address]
```

**Supplemental remarks**

- The macro command is valid in the following cases:
  - [Historical Display] is selected for [Display mode] in the trend parts.
  - [Alarm History] or [Event History] is selected for [Display mode] in the alarm parts.
- If the sampling number is "5" at the time of the execution of GET\_SCUR, the sampling count (numerical data display) on the screen shows "6". This results from the fact that the cursor point starts from "0" and the sampling count (numerical data display) starts from "1".

- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (DSP\_DATA) F1

All models	<input type="radio"/>
------------	-----------------------

**Function: Show/hide numerical data display**

This macro command is used to show/hide numerical data displays placed in the specified location (ID).

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	DSP_DATA
F1	0: Base 1 - 3: Overlap ID 0 - 2 4 - 7: Data block No. 0 - 3 8 - 14: Overlap ID 3 - 9
F1+1	0 - 255: ID
F1+2	0: Not display 1: Display

**Example**

- \$u100 = 0 (W) [Base]  
\$u101 = 1 (W) [ID]  
\$u102 = 0 (W) [Not display]  
SYS (DSP\_DATA) \$u100

The above program hides all numerical data displays of ID 1 on the base screen.

**Supplemental remarks**

- The macro command is valid for numerical data displays only. It cannot be used for character and message displays.
- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



**SYS**

**SYS (CHG\_DATA) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Change numerical data display property**

This macro command is used to change the properties of the numerical data displays placed in the specified location (ID).

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value																																																																																		
F0	CHG_DATA																																																																																		
F1	0: Base 1 - 3: Overlap ID 0 - 2 4 - 7: Data block No. 0 - 3 8 - 14: Overlap ID 3 - 9																																																																																		
F1+1	0 - 255: ID																																																																																		
F1+2	0: Without signs 1: With signs 2: With sign (+) 3: HEX 4: OCT 5: BIN																																																																																		
F1+3	<p>Color</p> <table style="margin-left: auto; margin-right: auto;"> <tr> <td colspan="8" style="text-align: center;">Background color</td> <td colspan="8" style="text-align: center;">Foreground color</td> </tr> <tr> <td style="border: 1px solid black;">15</td><td style="border: 1px solid black;">14</td><td style="border: 1px solid black;">13</td><td style="border: 1px solid black;">12</td><td style="border: 1px solid black;">11</td><td style="border: 1px solid black;">10</td><td style="border: 1px solid black;">9</td><td style="border: 1px solid black;">8</td> <td style="border: 1px solid black;">7</td><td style="border: 1px solid black;">6</td><td style="border: 1px solid black;">5</td><td style="border: 1px solid black;">4</td><td style="border: 1px solid black;">3</td><td style="border: 1px solid black;">2</td><td style="border: 1px solid black;">1</td><td style="border: 1px solid black;">0</td> </tr> <tr> <td colspan="8" style="text-align: center;">└─ 0 to 127 colors</td> <td colspan="8" style="text-align: center;">└─ 0 to 127 colors</td> </tr> <tr> <td colspan="8" style="text-align: center;">└─ Blink</td> <td colspan="8" style="text-align: center;">└─ Blink</td> </tr> </table> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Color</th> <th>Code (HEX)</th> </tr> </thead> <tbody> <tr><td>Black</td><td>00</td></tr> <tr><td>Blue</td><td>01</td></tr> <tr><td>Red</td><td>02</td></tr> <tr><td>Magenta</td><td>03</td></tr> <tr><td>Green</td><td>04</td></tr> <tr><td>Cyan</td><td>05</td></tr> <tr><td>Yellow</td><td>06</td></tr> <tr><td>White</td><td>07</td></tr> </tbody> </table>	Background color								Foreground color								15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	└─ 0 to 127 colors								└─ 0 to 127 colors								└─ Blink								└─ Blink								Color	Code (HEX)	Black	00	Blue	01	Red	02	Magenta	03	Green	04	Cyan	05	Yellow	06	White	07
Background color								Foreground color																																																																											
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																				
└─ 0 to 127 colors								└─ 0 to 127 colors																																																																											
└─ Blink								└─ Blink																																																																											
Color	Code (HEX)																																																																																		
Black	00																																																																																		
Blue	01																																																																																		
Red	02																																																																																		
Magenta	03																																																																																		
Green	04																																																																																		
Cyan	05																																																																																		
Yellow	06																																																																																		
White	07																																																																																		
F1+4	<p>Decimal point and number of digits</p> <table style="margin-left: auto; margin-right: auto;"> <tr> <td style="border: 1px solid black;">15</td><td style="border: 1px solid black;">14</td><td style="border: 1px solid black;">13</td><td style="border: 1px solid black;">12</td><td style="border: 1px solid black;">11</td><td style="border: 1px solid black;">10</td><td style="border: 1px solid black;">9</td><td style="border: 1px solid black;">8</td> <td style="border: 1px solid black;">7</td><td style="border: 1px solid black;">6</td><td style="border: 1px solid black;">5</td><td style="border: 1px solid black;">4</td><td style="border: 1px solid black;">3</td><td style="border: 1px solid black;">2</td><td style="border: 1px solid black;">1</td><td style="border: 1px solid black;">0</td> </tr> <tr> <td colspan="8" style="text-align: center;">└─ Decimal point 0 - 10</td> <td colspan="8" style="text-align: center;">└─ Number of digits 1 - 31</td> </tr> </table>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	└─ Decimal point 0 - 10								└─ Number of digits 1 - 31																																																									
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																																																																				
└─ Decimal point 0 - 10								└─ Number of digits 1 - 31																																																																											

### Example

The above program changes the properties of the numerical data display of ID1 placed on the base screen.

- Type: HEX
- Background color: Black
- Foreground color: Green
- Decimal Point: None
- Number of digits: 5


```
$u200 = 0 (W)      [Base]
$u201 = 1 (W)      [ID]
$u202 = 0 (W)      [Not display]
SYS (DSP_DATA) $u200
```

```
$u100 = 0 (W)      [Base]
$u101 = 1 (W)      [ID]
$u102 = 3 (W)      [Type]
$u103 = 0004H (W)  [Color]
$u104 = 0005H (W)  [Decimal point and number of digits]
SYS (CHG_DATA) $u100 macro execution
```

```
$u200 = 0 (W)      [Base]
$u201 = 1 (W)      [ID]
$u202 = 1 (W)      [Display]
SYS (DSP_DATA) $u200
```

### Supplemental remarks

- The macro command is valid for numerical data displays only. It cannot be used for character and message displays.
- When using this macro command, be sure to execute the command DSP\_DATA to redisplay the data. For more information on DSP\_DATA, refer to page 4-303.
- Even on MONITOUCH with 32k- or 64k-color display, 128 colors + blink ([Custom Color] → [Palette 1]) are available with the macro command.
- 128-color codes  
The boxes on the palette are provided with their individual codes.

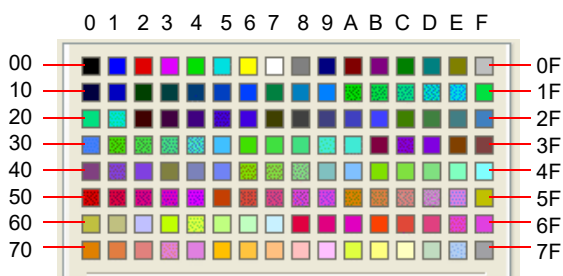

- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (STA\_LIST) F1**

All models	<input type="radio"/>
------------	-----------------------

**Function: Data sheet print**

This macro command is used for printing or PDF output.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	STA_LIST	
F1	0 - 1023: Print start number	
F1+1	1 - 1023: Number of pages to be printed *1	
F1+2	ASCII code: Output file name (64 one-byte alphanumeric characters maximum)	Only available when \$s1656-00 = ON (PDF output)
F1+33	:	
F1+34	ASCII code: Output sub-folder name (64 one-byte alphanumeric characters maximum)	Only available when \$s1656-00 = ON (PDF output) and \$s1656-02 = ON (Designate sub-folder name) *2
F1+65	:	


\*1 No printing is executed when "0" is set as the number of pages to be printed.

\*2 When specifying the folder/file name, you can easily define it using the macro command "STRING" (page 4-46).

**Example**


- \$s1656 = 0(W) [Output destination: Printer]
- \$u100 = 3 (W) [Print start number]
- \$u101 = 1 (W) [Number of pages to be printed]
- SYS (STA\_LIST) \$u100

The above program prints data sheet No. 3.

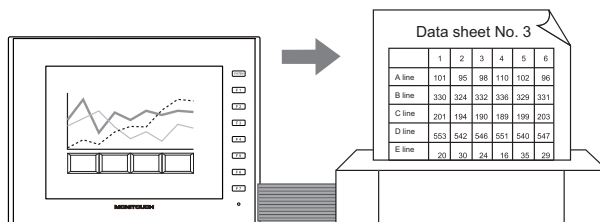

- \$s1656 = 1(W) [Output destination: PDF]
- \$u100 = 3(W) [Print start number]
- \$u101 = 1(W) [Number of pages to be printed]
- \$u102 = 'TEST' (STRING) [File name]
- SYS (STA\_LIST) \$u100


Datasheet No. 3 is output to the storage device in PDF format.

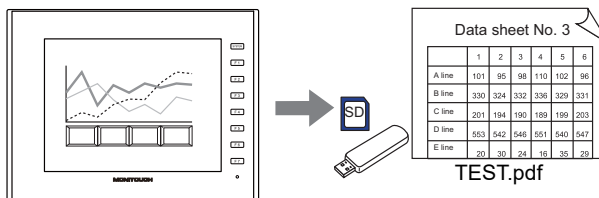

**Supplemental remarks**

- If nothing is registered on a data sheet, specifying the page of this sheet does not produce a printout of it.

[Data Sheet Edit]

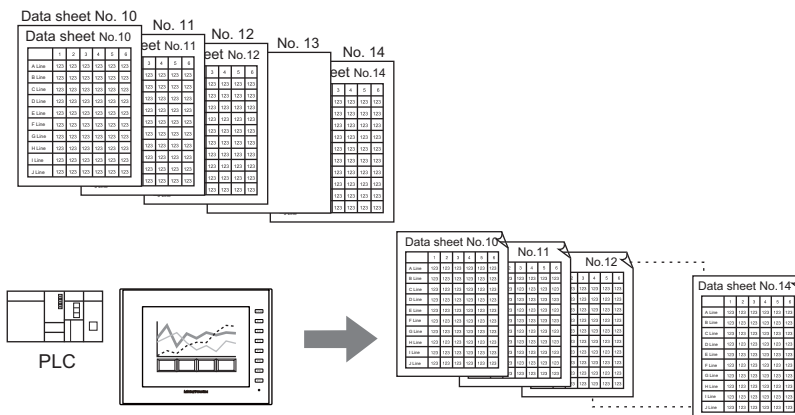

\$u100 = 10 [Print start number]  
 \$u101 = 5 [Number of pages to be printed]  
 SYS (STA\_LIST) \$u100

Data sheet No. 10 to 12 and 14 can be printed.  
 The page that is not stored, No. 13, is ignored, and four pages are output.

- When using the “STA\_LIST” macro, select the method of the data sheet printing at \$s1656.

15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
0	0	0	0	0	0	0	0	0	0	0	0				

- 0: Overwrite  
1: Add
- 0: Use default sub-folder  
1: Designate sub-folder name
- 0: With time stamp  
1: Without time stamp
- 0: Printer  
1: Storage device (PDF output)

- When abnormal termination occurs due to external factors such as turning off the V9 or removing storage during PDF output:
  - While writing a new file:  
The corrupted file may remain in storage.
  - While overwriting the file:  
Files cannot be recovered, and the damaged file may remain in the storage.
  - While appending the file:  
Unable to recover the file.
- When the storage capacity for PDF output is insufficient, the V9 follows the setting of [System Settings] → [Unit Setting] → [General Setting].
  - Delete folders from the oldest if Storage is lacking in space for backup.
  - Delete folders from the oldest when the remaining storage space is less than 100MByte.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

## SYS (RGB\_CHG) F1

**Function: Change RGB input parameter**

This macro command is used to change the RGB parameter set on the RGB input screen (on the [Main Menu] screen) between [Setting 1] and [Setting 2].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	RGB_CHG
F1	0: Setting 1 1: Setting 2

**Example**

- \$u100 = 1 (W) [Setting 2]  
SYS (RGB\_CHG) \$u100

The above program changes the RGB parameter from [Setting 1] to [Setting 2].

**Supplemental remarks**

- If the frequency is different between [Setting 1] and [Setting 2]: MONITOUCH selects [Setting 1] or [Setting 2] automatically.
  - If the frequency is the same between [Setting 1] and [Setting 2]: At power-on, [Setting 1] always takes effect. Afterward, [Setting 1] or [Setting 2] can be selected by the macro command.
  - This macro command is valid when "GUR-01" or "GUR-10" unit is used.
  - The result of macro execution is stored in \$s72.
- When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

V9 Advanced	
V910xiW	<input type="radio"/>
V907xiW	
V9 Standard	
All models	<input type="radio"/>
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

**SYS (SET\_RGB) F1****Function 1: Switch from/to RGB input screen**

This macro command is used to switch between the RGB input screen and the RUN screen.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	SET_RGB
F1	0: OFF (RUN screen) 1: ON (RGB input screen)

**Example**

- \$u100 = 0 (W) [RUN screen display]  
SYS (SET\_RGB) \$u100

The above program switches from the RGB input screen to the RUN screen.

**Supplemental remarks**

- In addition to the macro command, [System Setting] → [Hardware Setting] → [Video/RGB] → [RGB Input Control Device] is also available to switch from/to the RGB input screen.
- While the [RGB Input Control Device] is set (ON), the macro command is invalid.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

### Function 2: Snap/delete RGB input screen

This macro command is used to snap and delete the RGB screen.

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value	
F0	SET_RGB	
F1	2: Snap (turn the RGB screen ON and snap it) 3: File delete (delete the JPEG file generated by snapping)	
F1+1	(F1 = 2)	(F1 = 3)
	File No.: (0 - 32767 / -1 [AUTO])	File No.: (0 - 32767)

### JPEG file

Storage target: \\(access folder)\SNAP  
 File name: \\VDxxxxx.jpg  
└  
 00000 - 32767: File No.


### Example

- \$u100 = 2 (W) [Snap]  
 \$u101 = 0 (W) [Specify file No. 0.]  
 SYS (SET\_RGB) \$u100

The above program saves the currently displayed RGB input screen as VD00000.jpg.

### Supplemental remarks

- When the file number is set to [AUTO] for the snap operation, if no file exists the file number is generated by incrementing from [00000], while if files exist it is generated by incrementing from the number following the current maximum number.  
 However, the number must be within the range determined by [Maximum Number of Snap Files in Auto] under [System Setting] → [Hardware Setting] → [Video/RGB].

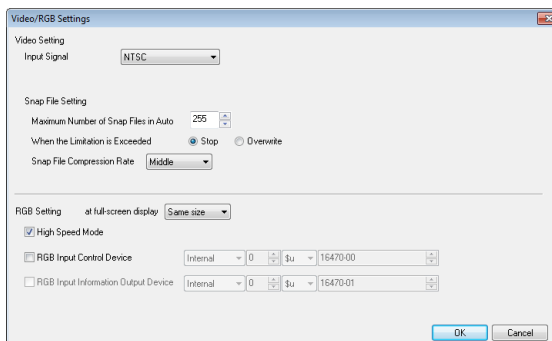



- When the number set for [Maximum Number of Snap Files in Auto] has been reached, operation proceeds in accordance with the specification ([Stop] or [Overwrite]) for [When the Limitation is Exceeded] under [System Setting] → [Hardware Setting] → [Video/RGB]. When [Overwrite] is selected, the number is reset to "0000" and the operation proceeds.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

V9 Advanced	
V910xiW	○
V907xiW	
V9 Standard	
All models	○
V9 Lite	
All models	
X1	
All models	
TELLUS	
TELLUS4 HMI	

### Function 3: RGB input channel selection

This macro command is used to select the display in the read area, or to select the channel when the RGB input signal is switched using the "SET\_RGB" macro command. It also selects the applicable channel for the touch switch emulation function.

#### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

#### Setting range

	Value
F0	SET_RGB
F1	8: CH selection (selects the RGB channel)
F1+1	5: RGB IN1 6: RGB IN2

#### Example

- \$u100 = 8 (W) [RGB input channel selection]  
\$u101 = 6 (W) [Specify RGB IN2.]  
SYS (SET\_RGB) \$u100

The above program switches to RGB IN2.

#### Supplemental remarks

- This function can be used only when the "GUR-11" unit is used.
- The default is [RGB IN1].
- The setting is maintained until the power is turned OFF. When the power goes OFF the setting is cleared and the default is set.
- This macro command is invalid if [TouchSW(CH5)] and [TouchSW(CH6)] under [System Setting] → [Hardware Setting] are checked.  
For more information on touch switch emulation, refer to the V9 Series Reference Manual [2].
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

All V9 models	○
X1	○
TELLUS4 HMI	

**SYS (SET\_BKLT) F1****Function: Backlight control**

This macro command is used to control the backlight.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	SET_BKLT	
F1	0: OFF 1: ON	
	2: OFF time change	Valid when [Auto 1/2/3] is selected
F1+1	0 - 65535: OFF time (sec)	Setting required if F1 = 2

**Example**

- \$u100 = 0 (W) [OFF]  
SYS (SET\_BKLT) \$u100

The above program turns off the backlight.

**Supplemental remarks**

- When [Always ON] is selected for [Action] on the [Backlight] tab window in the [Unit Setting] dialog ([System Setting] → [Unit Setting]), the backlight will not turn off.
- The backlight will not turn off while the control device memory is ON.
- Do not execute the macro command in macros to be executed constantly using a CYCLE macro, an interval timer, or an event timer macro.
- The use of a switch ON macro to execute a backlight turn-on command will not be possible.
- At power-on, the backlight is restored to the status as set in [Backlight] tab window (initial status) in the [Unit Setting] dialog ([System Setting] → [Unit Setting]). The internal memory \$L is available to retain the value set with this macro command. By using the initial macro at power-on, this macro command is executable according to the value you stored with \$L.
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (RESTART) F1

All V9 models	○
X1	
TELLUS4 HMI	

### Function: Restart

This macro command is used to restart the V series when the time (in seconds) specified in [F1] has elapsed.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range


	Value																
F0	RESTART																
F1	0 - 60: Time (sec)																
F1+1*1	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td> </tr> </table> <p style="text-align: center;">Not used (always set to "0")</p> <p>1: Display "Restarting. Please wait..." message after F1 second(s)<sup>*2</sup></p> <p>1: Hide "Restarting. Please wait..." message on the splash screen</p> <p>1: Hide the local screen</p> <p>1: Restart from the OS, 0: Restart</p>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		

\*1 For restarting (F1+1 = 1):

RUN screen



Splash screen + "Restarting. Please wait..."

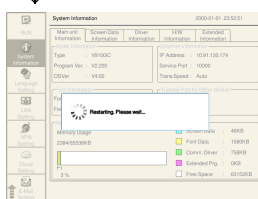

Local screen + "Restarting. Please wait..."

\* When F1=0, "Restarting..." does not appear. When F1 is other than 0, "Restarting..." appears for F1 second(s).



Splash screen


↓  
RUN screen

For restarting from the OS (F1+1 = 1):  
 RUN screen




Splash screen  
 +  
 "Restarting. Please wait..."



When [F1] = other than 0:

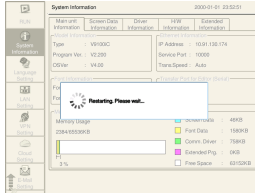

Local screen  
 +  
 "Restarting. Please wait..."

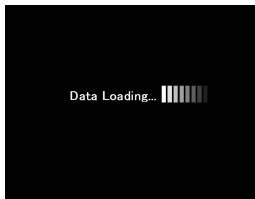

When [F1] = 0:

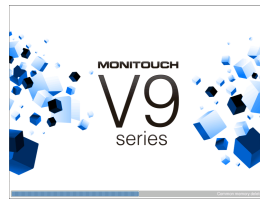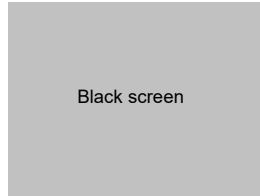

Splash screen

→ RUN screen

\*2 Valid when the bit 0 of F1+1 is ON.

**Example**

- \$u100 = 10 (W) [sec]
- \$u101 = 1H (W)
- SYS (RESTART) \$u100

When executing the macro, the local screen will appear for 10 seconds + "Restarting. Please wait...". Then the V9 will restart from the OS.

**Supplemental remarks**

- When the macro command has been executed, the data in the internal memory \$u becomes "0".
- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (CHG\_LANG) F1

All models	○
------------	---

**Function: Language change**

This macro command is used to switch the language displayed on MONITOUCH to the language specified in [F1].

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	◎			

○ : Setting enabled (indirect designation disabled)


◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value
F0	CHG_LANG
F1	0: Language 1 1: Language 2 2: Language 3 : 29: Language 30 30: Language 31 31: Language 32

**Example**

In the example below, the ON macros for the screen change switches are used to switch between two languages.

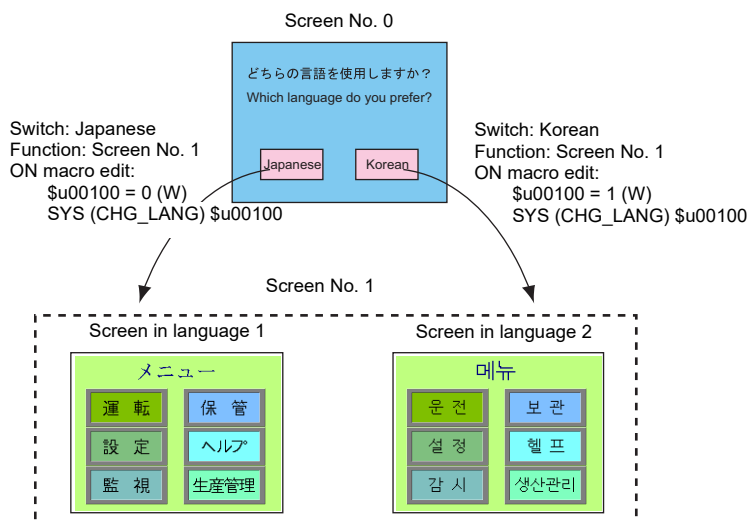**Supplemental remarks**

- When the screen is switched, the language also switches.  
To change the language on the same screen, use the “SYS(RESET\_SCRN)” command (page 4-319).
- At power-on, the language as displayed before power-off takes effect.

- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (RESET\_SCRN) F1**

All models	○
------------	---

**Function: Redisplay screen**

This macro command is used to reset the currently displayed screen. It is convenient for switching languages and for switching the display of screen libraries.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)  
 ⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value																
F0	RESET_SCRN																
F1	Bit OFF (0) : Executed Bit ON (1) : Disabled <div style="text-align: center; margin: 10px 0;"> <table border="1" style="display: inline-table; border-collapse: collapse;"> <tr> <td style="padding: 2px 5px;">15</td><td style="padding: 2px 5px;">14</td><td style="padding: 2px 5px;">13</td><td style="padding: 2px 5px;">12</td><td style="padding: 2px 5px;">11</td><td style="padding: 2px 5px;">10</td><td style="padding: 2px 5px;">9</td><td style="padding: 2px 5px;">8</td><td style="padding: 2px 5px;">7</td><td style="padding: 2px 5px;">6</td><td style="padding: 2px 5px;">5</td><td style="padding: 2px 5px;">4</td><td style="padding: 2px 5px;">3</td><td style="padding: 2px 5px;">2</td><td style="padding: 2px 5px;">1</td><td style="padding: 2px 5px;">0</td> </tr> </table> </div> <div style="margin-left: 40px;"> <p>Reserved for the system (fixed at 0)</p> <p>Screen OPEN macro _____</p> <p>Screen CLOSE macro _____</p> <p>\$T device memory initialization _____</p> <p>Transmission of screen interrupt command (with universal serial selected) _____</p> </div> <p>* Multiple bits can be specified at the same time.</p>	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		

**Example**

- \$u100 = 0H (W)  
 SYS (RESET\_SCRN) \$u100  
 Close macro, open macro, and internal device memory \$T are initialized and the screen currently displayed is reset.
- \$u100 = CH (W)  
 SYS (RESET\_SCRN) \$u100  
 The screen currently displayed is reset without executing close macro and open macro.

**Supplemental remarks**

- The macro command is invalid in screen OPEN, screen CLOSE, overlap library OPEN, overlap library CLOSE, and initial macros. Executing these error results in failure.
- The macro command is valid only once in a macro created on the macro edit sheet. Its execution timing is set at the end of the macro on the edit sheet.
- When screen change using a switch is disabled (the 0th bit of control device under [Hardware Setting] → [Control Area] is ON), the macro is invalid.
- [Function: Return] for the switch is valid even after using this command.
- The result of macro execution is stored in \$s72.  
 When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error



## SYS

All V9 models	○
X1	
TELLUS4 HMI	

## SYS (GET\_STATUS\_FL) F1

### Function: FL-Net information acquisition

This macro command is used to acquire the FL-Net node information.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range

		Value
F0		GET_STATUS_FL
Local node information	F1	0: Local node information
	\$\$s627	Local node FA link status
	\$\$s628	Local node status
	\$\$s629	Local node FL-Net status
	\$\$s646	Current permissible time for refresh cycle
	\$\$s654	Current minimum permissible frame interval
Guest node information	F1	1 - 254: Guest node information
	\$\$s647	Guest node number
	\$\$s648	Host status
	\$\$s649	Guest node area 1 top address
	\$\$s650	Guest node area 1 data size
	\$\$s651	Guest node area 2 top address
	\$\$s652	Guest node area 2 data size
	\$\$s653	Guest node FA link status

  :← V series (Return data)

### Example

- \$u100 = 0 (W)  
SYS (GET\_STATUS\_FL) \$u100  
The above program acquires the local node information.
- \$u100 = 2 (W)  
SYS (GET\_STATUS\_FL) \$u100  
The above program acquires node No. 2 information.

### Supplemental remarks

- The macro command is valid for FL-Net communication only.
- For more information, refer to the V9/TS2060 Communication Unit Specifications FL-Net.
- The result of macro execution is stored in \$\$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (OUT\_ENQ) F1

All models	<input type="radio"/>
------------	-----------------------

**Function 1: Universal serial (interrupt)**

This macro command is used to execute an interrupt.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	OUT_ENQ_EX	
F1	ENQ No. 10 - 2F <sub>HEX</sub> : For PLC1 30 - 3F <sub>HEX</sub> : For PLC2 40 - 4F <sub>HEX</sub> : For PLC3 50 - 5F <sub>HEX</sub> : For PLC4 60 - 6F <sub>HEX</sub> : For PLC5 70 - 7F <sub>HEX</sub> : For PLC6 80 - 8F <sub>HEX</sub> : For PLC7 90 - 9F <sub>HEX</sub> : For PLC8	
F1+1	Transfer format 0: Numerical 1: Characteristic	
F1+2	1 - 16384: Word count 2 - 32768: Number of bytes	If F1+1 = 1
F1+3	Top address number	
F1+4	0: Non-wait 1: Wait	Executes the next macro Executes the next macro after a transmission is complete

**Example**

The following programs transmit the specified data to the host connected to PLC1 when the character display (\$u200) shows "ABCD".

- Transfer data format: Numerical  
 \$u100 = 10H (W) [ENQ No. to PLC1]  
 \$u101 = 0 (W) [Numerical]  
 \$u102 = 2 (W) [Word count]  
 \$u103 = 200 (W) [Top address]  
 \$u104 = 0 (W) [Non-wait]  
 SYS (OUT\_ENQ\_EX) \$u100 Macro execution  
 Data received at the host: 3431343234333434H
- Transfer data format: Characteristic  
 \$u100 = 10H (W) [ENQ No. to PLC1]  
 \$u101 = 1 (W) [Characteristic]  
 \$u102 = 4 (W) [Number of bytes]  
 \$u103 = 200 (W) [Top address number]  
 \$u104 = 0 (W) [Non-wait]  
 SYS (OUT\_ENQ\_EX) \$u100  
 Data received at the host: 41424344H

**Supplemental remarks**

- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

All V9 models	○
X1	
TELLUS4 HMI	

## Function 2: A-link+Net10 (network designation)

This macro command is used to designate a target network, with which a connection will be established.

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○ : Setting enabled (indirect designation disabled)

⊙ : Setting enabled (indirect designation enabled)

### Setting range

	Value	Remarks
F0	OUT_ENQ	
F1	0: Fixed	
F1+1	2: Fixed	
F1+2	System code 1: NET/10 2: NET II (/B)	
F1+3	0: Fixed	If F1+2 = 2
	1: Network number	If F1+2 = 2

### Example

- \$u100 = 0 (W) [Fixed]
- \$u101 = 2 (W) [Fixed]
- \$u102 = 1 (W) [NET/10]
- \$u103 = 3 (W) [Network number]
- SYS (OUT\_ENQ) \$u100

According to the above program, the PLC connected to the V series accesses the PLC NET 10 on network No. 3.

### Supplemental remarks

- The macro command is valid when [A-link + Net10] is selected for [Select PLC1 Type].
- Be sure to use the macro command in an OPEN macro for the screen. If it is used in any other way, the network will change immediately after the command is executed and a communication error will result.
- For more information, refer to the V9 Series Connection Manual.
- The result of macro execution is stored in \$s72.

When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## SYS

## SYS (OUT\_ENQ\_EX) F1

All models	<input type="radio"/>
------------	-----------------------

**Universal serial (interrupt)**

This macro command is used to execute an interrupt.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	⊙			

○: Setting enabled (indirect designation disabled)

⊙: Setting enabled (indirect designation enabled)

**Setting range**

	Value	Remarks
F0	OUT_ENQ_EX	
F1	1 - 8: PLC No.	
F1+1	10 - 2F <sub>HEX</sub> : ENQ No.	
F1+2	Transfer format 0: Numerical 1: Characteristic	
F1+3	1 - 16384: Word count	When [F1+1] = 0
	2 - 32768: Number of bytes	When [F1+1] = 1
F1+4	Top address number	
F1+5	0: Non-wait	Executes the next macro
	1: Wait	Executes the next macro after a transmission is complete

**Example**

The following programs transmit the specified data to the host connected to PLC2 when the character display (\$u200) shows "ABCD".

- Transfer data format: Numerical
  - \$u100 = 2 (W) [PLC No.]
  - \$u101 = 10H (W) [ENQ No.]
  - \$u102 = 0 (W) [Numerical]
  - \$u103 = 2 (W) [Word count]
  - \$u104 = 200 (W) [Top address]
  - \$u105 = 0 (W) [Non-wait]

SYS (OUT\_ENQ\_EX) \$u100

Data received at the host:3431343234333434H

- Transfer data format: Characteristic
  - \$u100 = 2 (W) [PLC No.]
  - \$u101 = 10H (W) [ENQ No.]
  - \$u102 = 1 (W) [Characteristic]
  - \$u103 = 4 (W) [Number of bytes]
  - \$u104 = 200 (W) [Top address number]
  - \$u105 = 0 (W) [Non-wait]

SYS (OUT\_ENQ\_EX) \$u100

Data received at the host: 41424344H

**Supplementary remarks**

- The result of macro execution is stored in \$s72. When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

**SYS**

**SYS (SET\_SYS\_CLND) F1**

All V9 models	○
X1	
TELLUS4 HMI	

**Function: System calendar setting**

This macro command is used to set the values of seven words starting from the address specified in [F1] to the system calendar.  
The PLC calendar is not changed.

**Available device memory**

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1	◎			

○ : Setting enabled (indirect designation disabled)  
◎ : Setting enabled (indirect designation enabled)

**Setting range**

	Value	
F0	SET_SYS_CLND	
F1	0 - : Year (4-digit/2-digit)	
F1+1	1 - 12: Month	
F1+2	1 - 31: Day	
F1+3	0 - 23: Hour	
F1+4	0 - 59: Minute	
F1+5	0 - 59: Second	
F1+6	Day of the week	Invalid; to be automatically calculated by MONITOUCH

**Example**

- \$u100 = 2005 (W)
  - \$u101 = 7 (W)
  - \$u102 = 15 (W)
  - \$u103 = 15 (W)
  - \$u104 = 0 (W)
  - \$u105 = 0 (W)
  - SYS (SET\_SYS\_CLND) \$u00100
- } July 15, 2005 Friday 15:00:00

The above program sets the calendars in MONITOUCH to July 15, 2005 on Friday at 15:00:00.

**Supplemental remarks**

- When setting calendar data for PLC 1 to 8, use a macro command " PLC\_CLND" (page 4-159).
- The result of macro execution is stored in \$s72.  
When the execution of the macro is normally complete, the value at the address is not updated. Therefore, before macro execution, resetting the value at the address to zero is recommended.

Code (DEC)	Contents
-1	Execution error

## HMI-FUNC

All V9 models	
X1	○
TELLUS4 HMI	○

## HMI-USERFUNC (F1, " ")

### Function: DLL function execution

This macro command is used to execute the function in the dll file loaded to the table specified in [F1].

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1				○

○ : Setting enabled (indirect designation disabled)  
 ◎ : Setting enabled (indirect designation enabled)

### Setting range

	Value
F0	HMI-USERFUNC
F1	0: Table number : : 255
Text	Function name

### Example

- HMI-USERFUNC (0, "DspMsg")


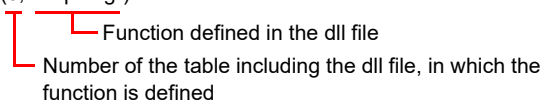


Table No.	DLL	Function defined in DLL file
0	Test2.dll	DspMsg
1	Test1.dll	aa
⋮	⋮	⋮
255		



### Supplemental remarks

- This macro command is valid only when "X115", "X112" or "TELLUS Ver. 4" is selected in the [Edit Model Selection] dialog.
- It is necessary to load the dll file by HMI-LOADDLL in advance.

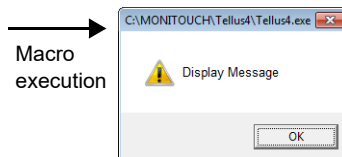


## HMI-FUNC

All V9 models	
X1	<input type="radio"/>
TELLUS4 HMI	<input type="radio"/>

## HMI-LOADDLL (F1, " ")

### Function: Load DLL file

This macro command is used to load a dll file prepared by users to the table specified in [F1].

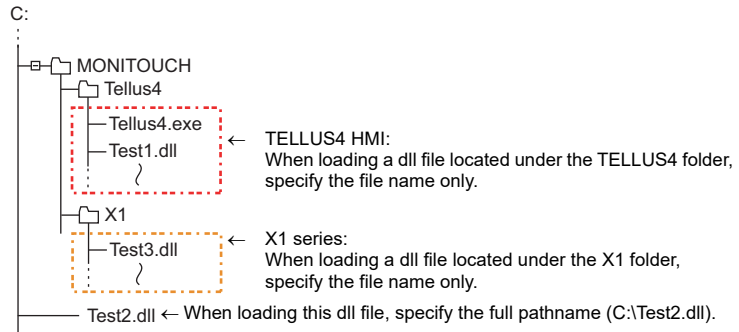

### Available device memory

	Internal device memory	PLC 1 - 8 device memory	Memory card	Constant
F1				<input type="radio"/>


: Setting enabled (indirect designation disabled)  
 : Setting enabled (indirect designation enabled)

### Setting range

	Value	Remarks
F0	HMI-LOADDLL	
F1	0: Table number ⋮ 255	
Text	Location of DLL file (pathname)	Specified the full path within 256 byte

### Example

- HMI-LOADDLL (0, "C:\Test2.dll")

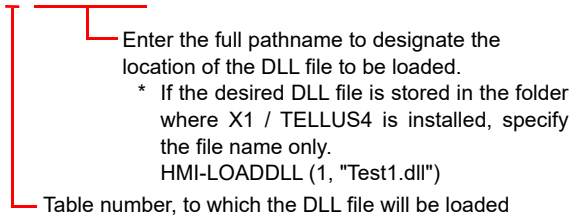

### Supplemental remarks

- This macro command is valid only when "X115", "X112" or "TELLUS Ver. 4" is selected in the [Edit Model Selection] dialog.
- When executing the function in the loaded DLL file, use HMI-UserFunc.
- Once a dll file is loaded, the function in the file can be executed by HMI-UserFunc repeatedly as desired in, for example, an initial macro.
- The following symbols cannot be used in folder and file names.  
 \ / : \* ? " < > |

## HMI-FUNC

All V9 models	
X1	
TELLUS4 HMI	○


## HMI-SHUTDOWN

### Function: Computer shutdown

This macro command is used to shut down the computer.

### Example

- HMI-SHUTDOWN

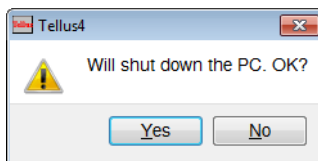

### Supplemental remarks

- This macro command is valid only when "TELLUS Ver. 4" is selected in the [Edit Model Selection] dialog.
- If the macro command is executed on a panel computer without the power-off function, the message indicating that the computer is ready to be turned off appears.

## HMI-FUNC

All V9 models	
X1	○
TELLUS4 HMI	○

## HMI-USEREXE (" ")

### Function: Application file execution


This macro command is used to execute an exe file.

### Setting range


	Value	Remarks
F0	HMI-USEREXE	
Text	exe file and the location of the file to be executed concurrently (pathname)	Specified the full path within 256 byte

### Example


- HMI-USEREXE ("notepad.exe "C:\MONITOUCH\HMI.txt")

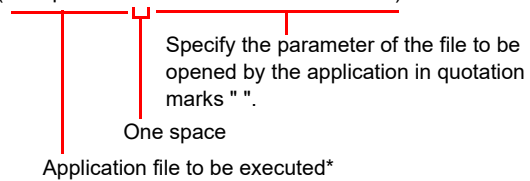

- \* Some applications may need to set a pathname.  
The pathname can be specified by putting it in quotation marks (" ").

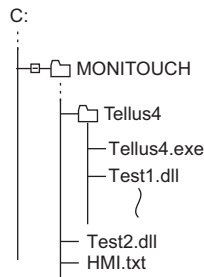

### Outcome

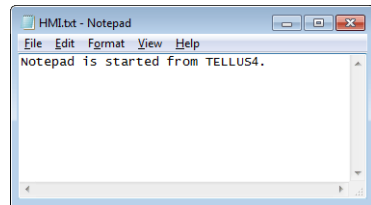

### Supplemental remarks

- This macro command is valid only when "X115", "X112" or "TELLUS Ver. 4" is selected in the [Edit Model Selection] dialog.
- The following symbols cannot be used in folder and file names.  
\\ : \*? "<>|
- When starting an app that takes time to start up, other macro command operations stop until the startup process is completed.

**HMI-FUNC**

All V9 models	
X1	
TELLUS4 HMI	○

**HMI-CLOSE****Function: TELLUS termination**


This macro command is used to terminate the Tellus HMI mode.

**Supplemental remarks**

- This macro command is valid only when "TELLUS Ver. 4" is selected in the [Edit Model Selection] dialog.

# MEMO

Please use this page freely.

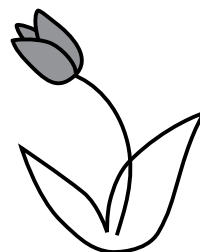

 **Hakko Electronics Co., Ltd.**  
[www.monitouch.com](http://www.monitouch.com)

**Sales** 890-1, Kamikashiwano-machi, Hakusan-shi, Ishikawa,  
924-0035 Japan  
TEL +81-76-274-2144 FAX +81-76-274-5136